

30. Fuel Damper

A: REMOVAL

WARNING:


Place "NO OPEN FLAMES" signs near the working area.

CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-65, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Disconnect the fuel delivery hose (A) and fuel return hose (B) from the fuel damper, and remove the fuel damper.

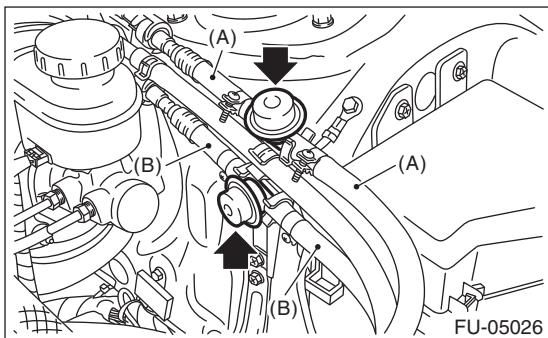

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

If fuel hoses or clamps are damaged, replace them with new parts.

Tightening torque:

1.25 N·m (0.1 kgf·m, 0.9 ft-lb)

C: INSPECTION

- 1) Check that the fuel damper has no deformation, cracks or other damages.
- 2) Check that the fuel hose has no cracks, damage or loose part.