

# Drain Valve

## EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

### 13.Drain Valve

#### A: REMOVAL


Drain valve is integrated with canister. Refer to "Canister" for removal procedure. <Ref. to EC(H4DOTC)-5, REMOVAL, Canister.>

#### B: INSTALLATION

Refer to "Canister" for the installation procedure. <Ref. to EC(H4DOTC)-6, INSTALLATION, Canister.>

#### C: INSPECTION

Measure the resistance between drain valve terminals.

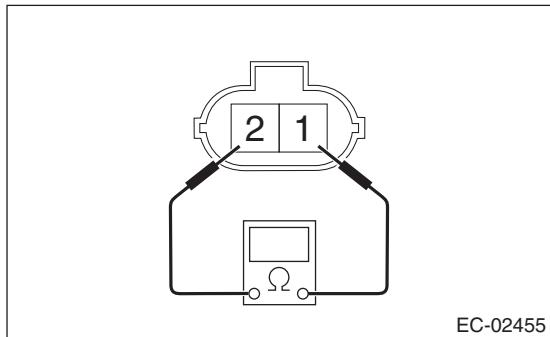

Terminal No.	Standard
1 and 2	20 — 30 Ω