



8. Radiator Main Fan and Fan Motor

A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

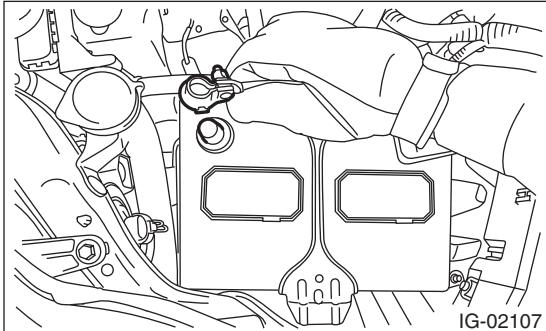

- 3) Remove the reservoir tank. <Ref. to CO(H4DOTC)-29, REMOVAL, Reservoir Tank.>
- 4) Disconnect the main fan motor connector (A).

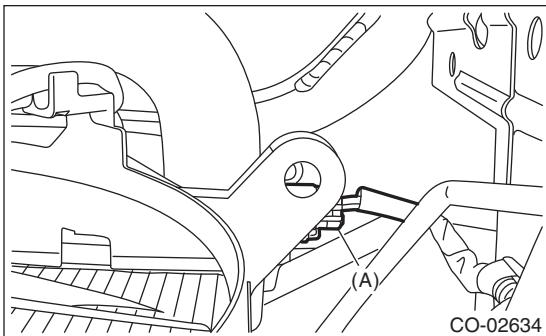

- 5) Remove the bolts that secure the radiator main fan motor assembly.

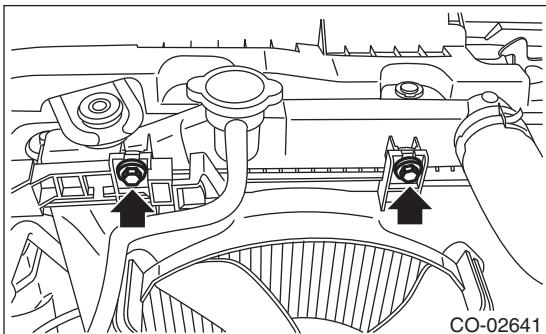

- 6) Remove the radiator main fan motor assembly from the upper side of the vehicle.

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Confirm that the radiator hose is securely connected.

Tightening torque:


7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

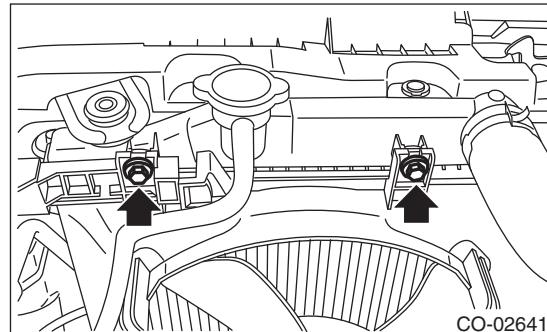


C: DISASSEMBLY

- 1) Remove the main fan motor connector and main fan motor harness from the radiator main fan shroud.

- 2) Remove the radiator main fan from the main fan motor.

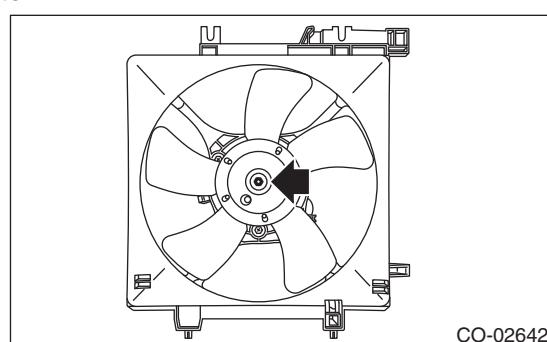

- 3) Remove the main fan motor from the radiator main fan shroud.

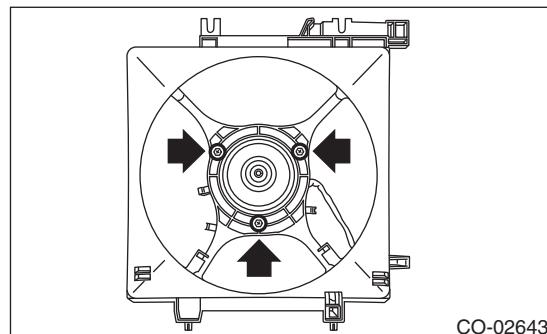


D: ASSEMBLY

Assemble in the reverse order of disassembly.


Tightening torque:

5 N·m (0.5 kgf-m, 3.7 ft-lb)

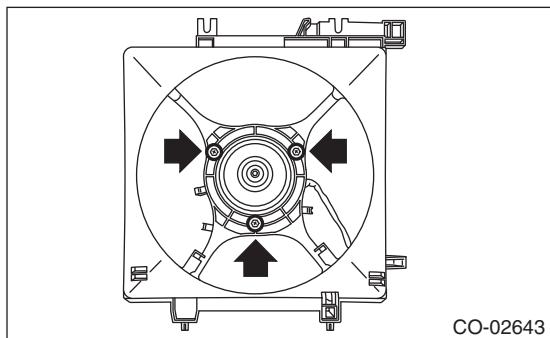

Tightening torque:

3.4 N·m (0.3 kgf-m, 2.5 ft-lb)

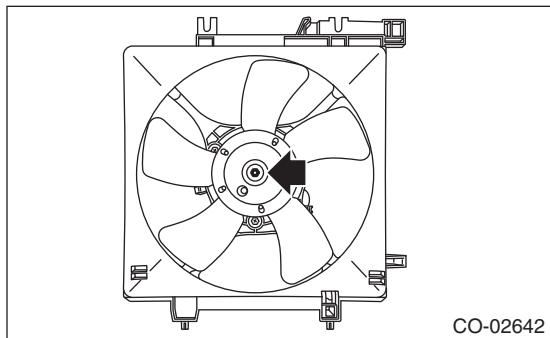

E: INSPECTION

Check that the radiator main fan, radiator main fan shroud and main fan motor do not have deformation, cracks or damage.