



## 9. Radiator Sub Fan and Fan Motor

### A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

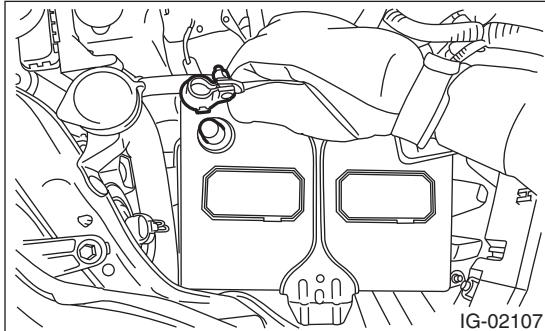

- 3) Remove the air intake duct. <Ref. to IN(H4DOTC)-12, REMOVAL, Air Intake Duct.>
- 4) Disconnect the sub fan motor connector (B).

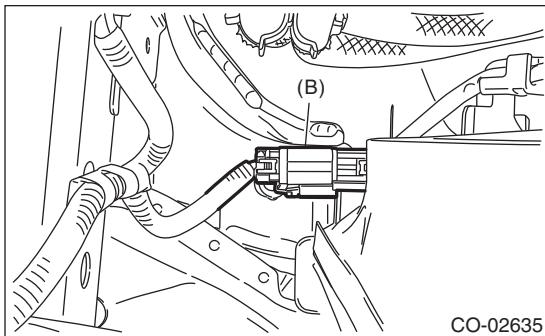

- 5) Remove the bolts that secure the radiator sub fan motor assembly.

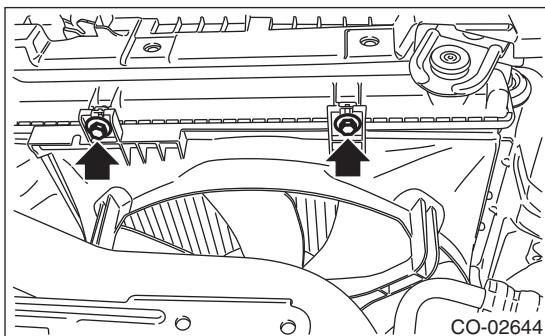

- 6) Remove the radiator sub fan motor assembly from the upper side of the vehicle.

### B: INSTALLATION


Install in the reverse order of removal.

#### CAUTION:

Confirm that the radiator hose is securely connected.


#### Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

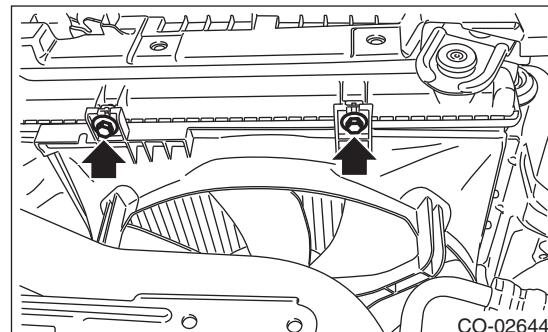


### C: DISASSEMBLY

- 1) Remove the sub fan motor connector and sub fan motor harness from the radiator sub fan shroud.
- 2) Remove the radiator sub fan from the sub fan motor.

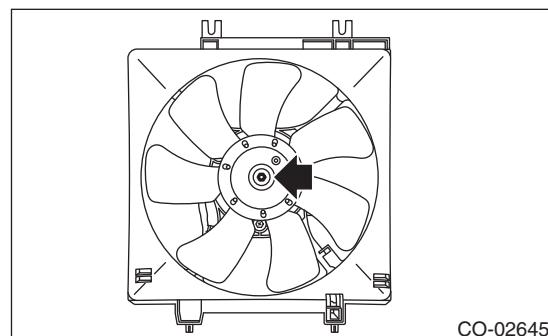

- 3) Remove the sub fan motor from the radiator sub fan shroud.

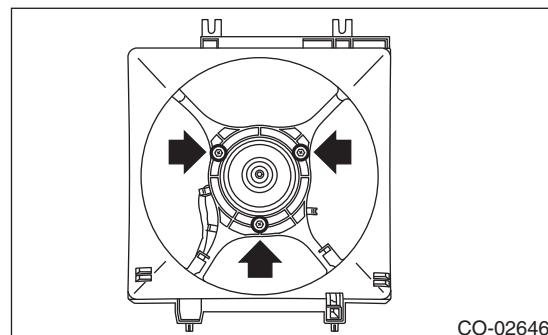

# Radiator Sub Fan and Fan Motor


## COOLING

### D: ASSEMBLY

Assemble in the reverse order of disassembly.

**Tightening torque:**


5 N·m (0.5 kgf-m, 3.7 ft-lb)

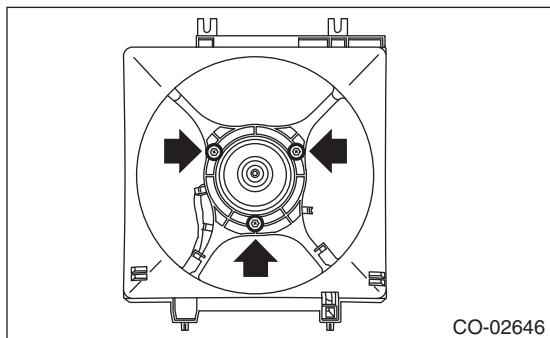

CO-02646

**Tightening torque:**

3.4 N·m (0.3 kgf-m, 2.5 ft-lb)

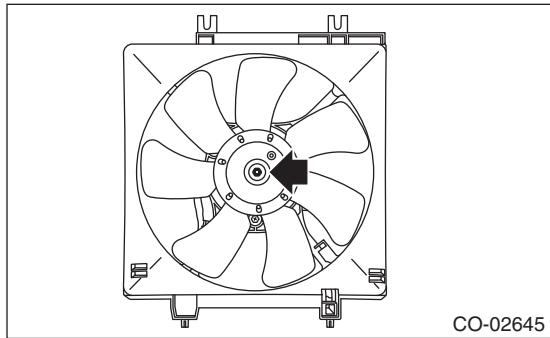

CO-02645

### E: INSPECTION

Check that the radiator sub fan, radiator sub fan shroud and sub fan motor do not have deformation, cracks or damage.