

3. Ignition Coil

A: REMOVAL

Direct ignition type has been adopted. Refer to "Spark Plug", "REMOVAL" for removal procedures.
<Ref. to IG(H4DOTC)-4, REMOVAL, Spark Plug.>

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf·m, 11.8 ft-lb)

C: INSPECTION

For inspection procedure, refer to "Diagnostics for Engine Starting Failure". <Ref. to EN(H4DOTC)(diag)-73, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>