

Camshaft Position Sensor

FUEL INJECTION (FUEL SYSTEMS)

6. Camshaft Position Sensor

A: REMOVAL


1. INTAKE SIDE

1) Remove the collector cover.


NOTE:

Follow these procedures for removal of the collector cover.


- (1) Lift up the rear side holding two positions (A).
- (2) Lift up the front side holding two positions (B) while moving it in the forward direction of the vehicle.

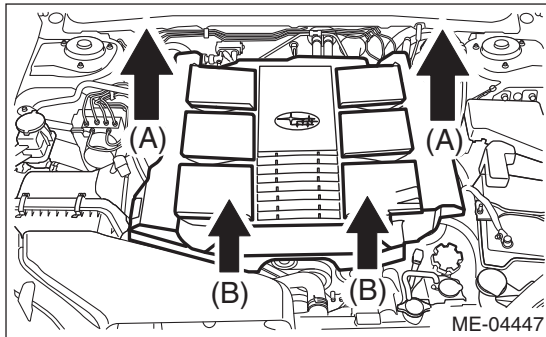


- 2) Disconnect the ground cable from battery.
- 3) Remove the securing clips from the two locations on the fuel pipe protector LH.

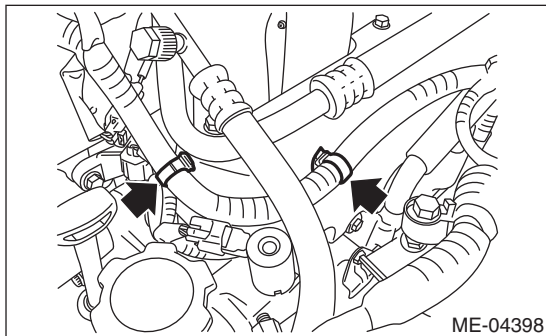


4) Disconnect the PCV hose and blow-by hose.

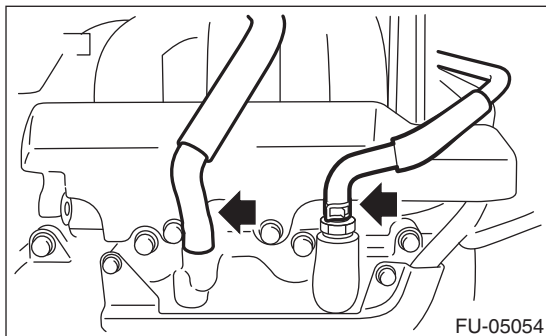


5) Remove the fuel pipe protector LH.

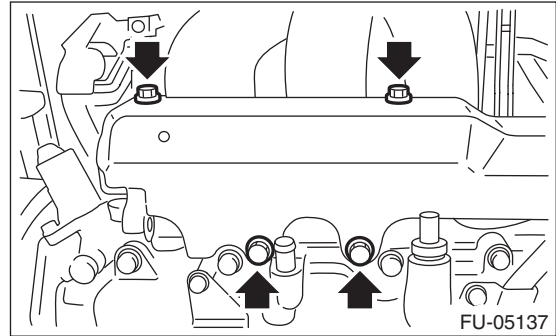

6) Disconnect the connector from intake camshaft position sensor LH.

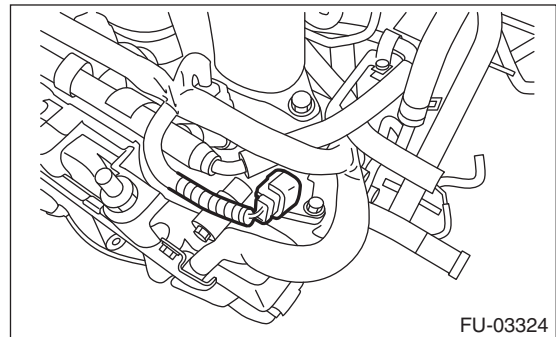


7) Remove the intake camshaft position sensor LH.

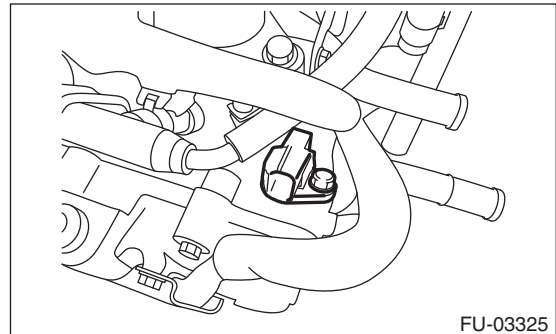


8) Remove the intake camshaft position sensor RH in the same procedure as LH side.

2. EXHAUST SIDE

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the under cover.
- 4) Disconnect the connector from exhaust camshaft position sensor LH.

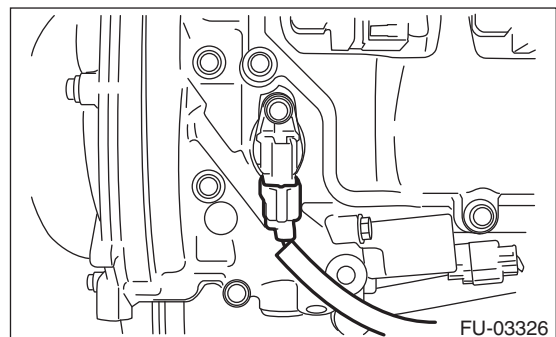

5) Remove the exhaust camshaft position sensor LH.

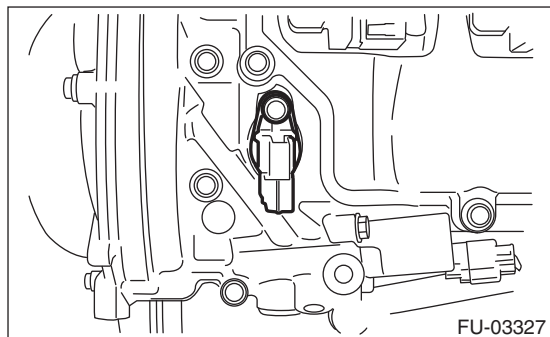

6) Remove the exhaust camshaft position sensor RH in the same procedure as LH side.

B: INSTALLATION

1. INTAKE SIDE

Install in the reverse order of removal.

Tightening torque:

Intake camshaft position sensor

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

Fuel pipe protector

19 N·m (1.9 kgf-m, 14.0 ft-lb)

2. EXHAUST SIDE

Tightening torque:

Exhaust camshaft position sensor


6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

C: INSPECTION

1. CAMSHAFT POSITION SENSOR (METHOD WITH OSCILLOSCOPE)

- 1) Prepare an oscilloscope.
- 2) Remove the glove box lid assembly. <Ref. to EI-65, REMOVAL, Glove Box.>
- 3) Connect the probe to ECM connector.


- Intake camshaft position sensor

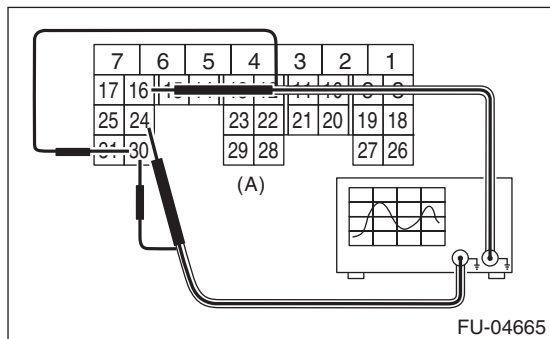

(A) To ECM connector

Camshaft position sensor	Terminal No.	Probe
RH	24	+
LH	16	+
RH and LH	30	-

- Exhaust camshaft position sensor

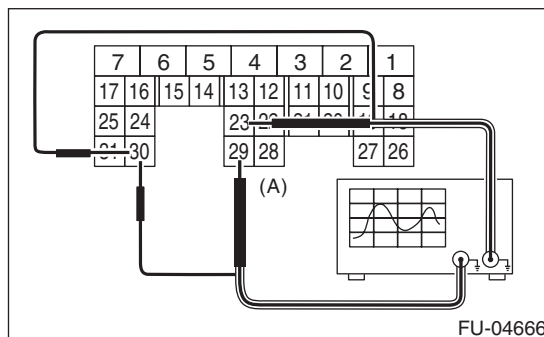


(A) To ECM connector

Camshaft position sensor	Terminal No.	Probe
RH	23	+
LH	29	+
RH and LH	30	-

4) Start the engine and let it idle.

5) Check that the pattern is the same as the waveform and voltage shown below.

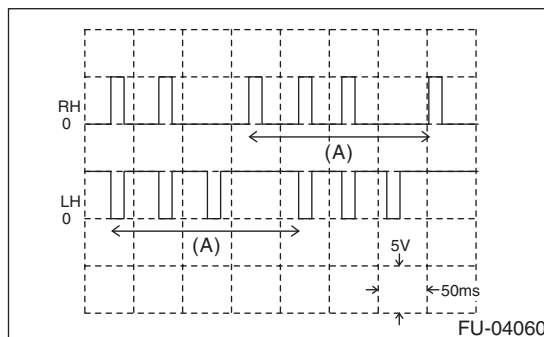

(A) One camshaft rotation

6) After inspection, install the related parts in the reverse order of removal.

2. OTHER INSPECTIONS

Check that the camshaft position sensor has no deformation, cracks or other damages.