


PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


13. PCV Valve

A: REMOVAL

- 1) Disconnect the PCV hose.

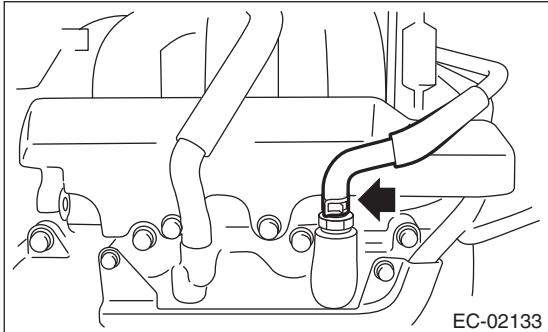

- 2) Remove the PCV valve from rocker cover.

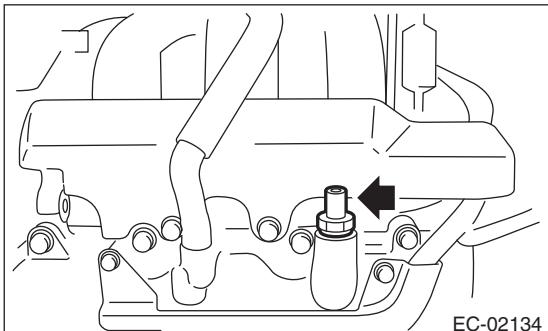

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the bolt threads of PCV valve.

Liquid gasket:

THREE BOND 1141G or equivalent


Tightening torque:

25 N·m (2.5 kgf-m, 18.4 ft-lb)


C: INSPECTION

1. PCV VALVE

- 1) Check that the PCV valve has no deformation, cracks or other damages.
- 2) Check that air is discharged from (B) when air is blown into (A).

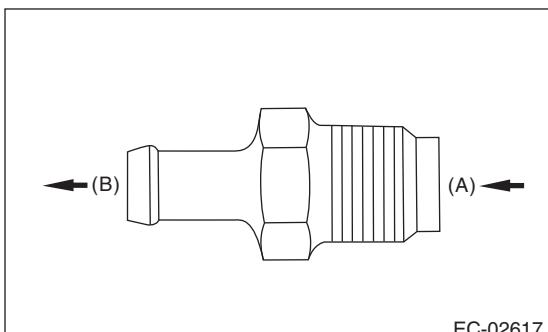

- 3) Check that air does not come out from (B) when air is blown into (A).

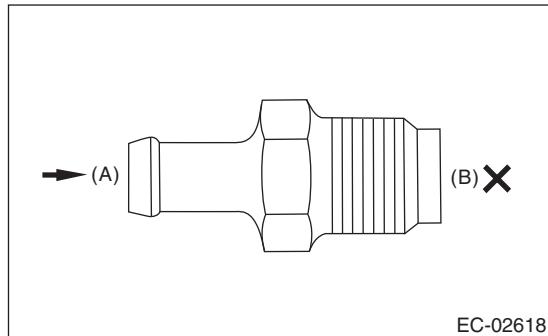

2. OTHER INSPECTIONS

Check the vacuum hose for cracks, damage or looseness.

PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)
