

4. EGR Valve

A: REMOVAL

Refer to “EGR Valve” for removal procedure. <Ref. to FU(H6DO)-39, REMOVAL, EGR Valve.>

B: INSTALLATION

Refer to “EGR Valve” for the installation procedure. <Ref. to FU(H6DO)-39, INSTALLATION, EGR Valve.>

C: INSPECTION

Refer to “EGR Valve” for inspection procedures. <Ref. to FU(H6DO)-39, INSPECTION, EGR Valve.>