

7. Fuel Level Sensor

A: REMOVAL

For removal procedures, refer to the “FU(H4DOTC)” section. <Ref. to FU(H6DO)-69, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For installation procedures, refer to the “FU(H4DOTC)” section. <Ref. to FU(H6DO)-69, INSTALLATION, Fuel Level Sensor.>

C: INSPECTION

For inspection procedures, refer to the “FU(H4DOTC)” section. <Ref. to FU(H6DO)-69, INSPECTION, Fuel Level Sensor.>