


General Description

INTAKE (INDUCTION)

1. General Description

A: COMPONENT

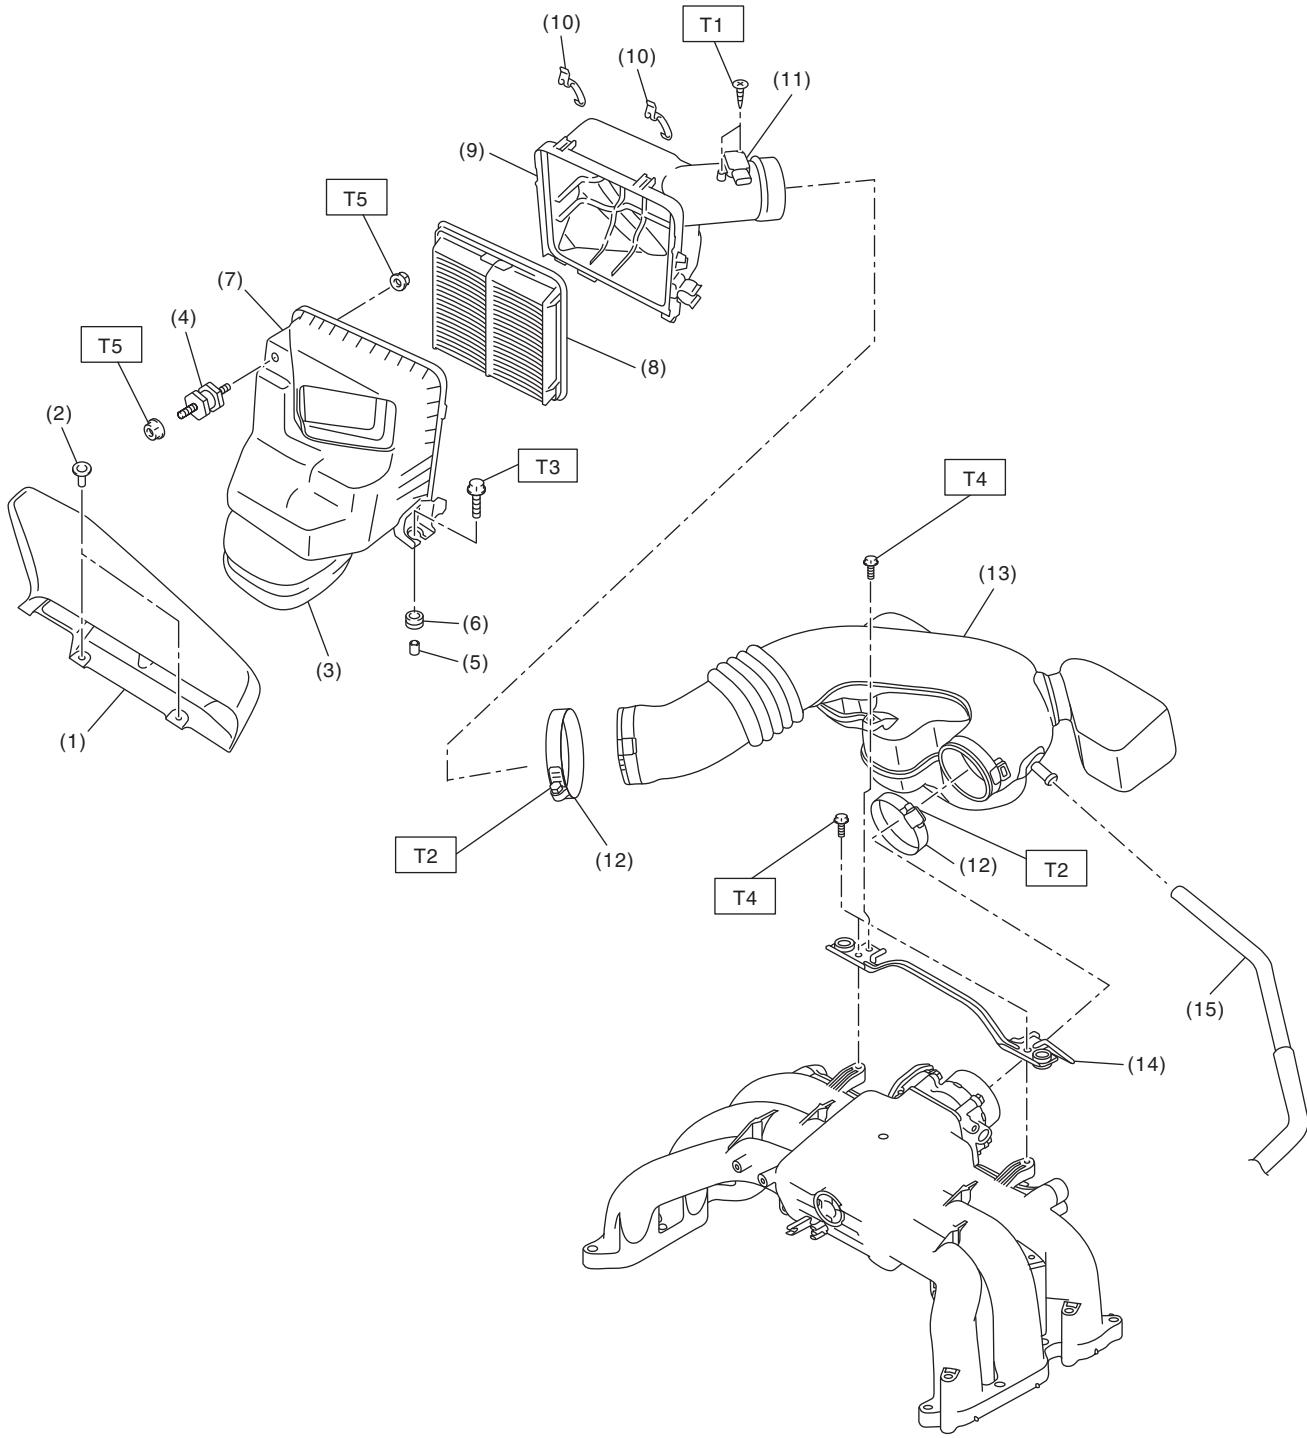

IN-02774

General Description

INTAKE (INDUCTION)

(1) Air intake duct	(9) Air cleaner case (rear)
(2) Clip	(10) Clip
(3) Resonator chamber	(11) Mass air flow and intake air temperature sensor
(4) Cushion	(12) Clamp
(5) Spacer	(13) Air intake boot ASSY
(6) Cushion	(14) Collector cover bracket
(7) Air cleaner case (front)	(15) Blow-by hose
(8) Air cleaner element	

Tightening torque:N·m (kgf-m, ft-lb)

T1: 1 (0.1, 0.7)

T2: 3 (0.3, 2.2)

T3: 6 (0.6, 4.4)

T4: 6.5 (0.7, 4.8)

T5: 7.5 (0.8, 5.5)

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.