

## 25.Crankshaft

### A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of the crankshaft. <Ref. to ME(H6DO)-96, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-101, INSTALLATION, Cylinder Block.>