

## 3. Idle Speed

### A: INSPECTION

1) Before checking the idle speed, check the following item:

- (1) Check the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and hoses are connected properly.
- (2) Check the malfunction indicator light does not illuminate.

2) Warm up the engine.

3) Read the engine idle speed using Subaru Select Monitor. <Ref. to EN(H6DO)(diag)-36, READ CURRENT DATA FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>

#### NOTE:

- Idle speed cannot be adjusted manually, because the idle speed is automatically adjusted.
- If idle speed is out of standard, refer to the General Diagnosis Table under "Engine Control System". <Ref. to EN(H6DO)(diag)-2, Basic Diagnostic Procedure.>

- (1) Check the idle speed when no-loaded.  
(Headlight, heater fan, rear defroster, radiator fan, A/C and etc. are OFF)

***Idle speed (No load and gears in "P" or "N" range):***

**Standard**

***700±100 rpm***

- (2) Check the idle speed when loaded. (Turn the A/C switch to "ON" and operate the compressor for at least one minute before measurement.)

***Idle speed (A/C ON and gear in "P" or "N" range):***

**Standard**

***700 — 910±100 rpm***