

9. Radiator Sub Fan and Fan Motor

A: REMOVAL


Refer to the Radiator Main Fan and Fan Motor.
<Ref. to CO(H6DO)-21, REMOVAL, Radiator Main Fan and Fan Motor.>

B: INSTALLATION


Refer to the Radiator Main Fan and Fan Motor.
<Ref. to CO(H6DO)-22, INSTALLATION, Radiator Main Fan and Fan Motor.>

C: DISASSEMBLY


- 1) Disconnect the connector from the radiator fan control unit, and remove the harness.

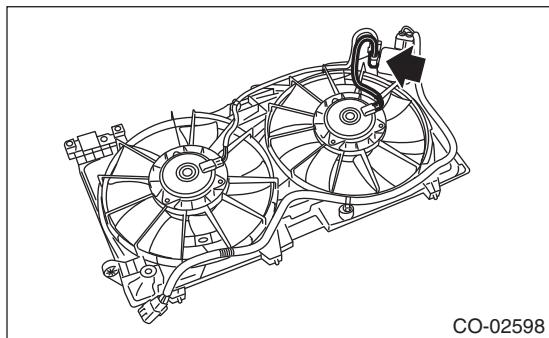

- 2) Remove the radiator sub fan.

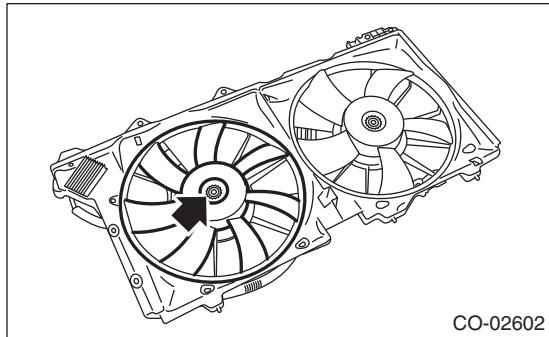

- 3) Remove the radiator sub fan motor.

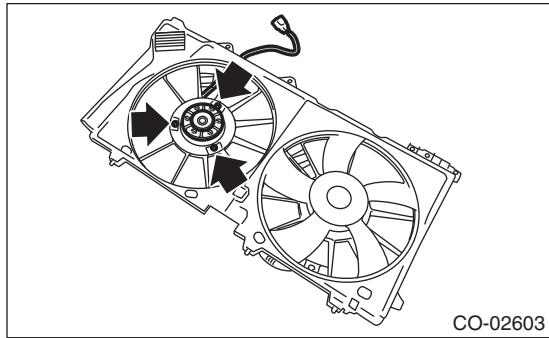


D: ASSEMBLY

Assemble in the reverse order of disassembly.


Tightening torque:

3.8 N·m (0.4 kgf-m, 2.8 ft-lb)

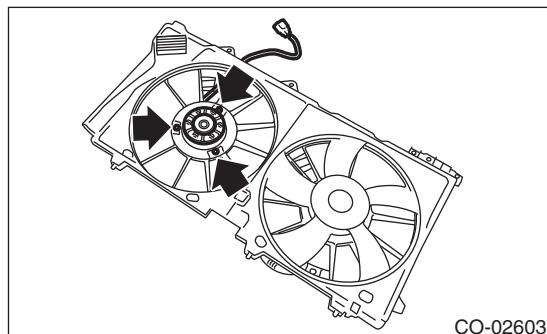

Tightening torque:

6.3 N·m (0.6 kgf-m, 4.6 ft-lb)

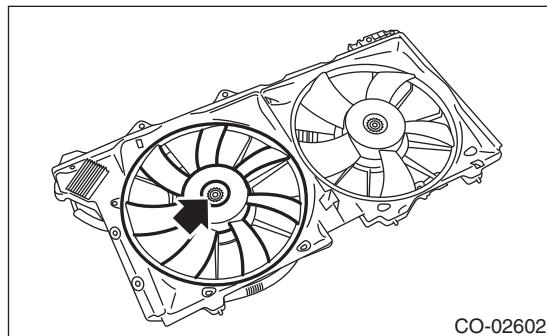

E: INSPECTION

Check that the radiator sub fan, radiator sub fan shroud and sub fan motor do not have deformation, cracks or damage.