



### 3. Select Lever

#### A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Shift the select lever to "N" range.
- 3) Disconnect the ground cable from battery.
- 4) Lift up the vehicle.
- 5) Remove the rear exhaust pipe.
  - 2.5 L non-turbo model  
<Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.>
  - 3.6 L model  
<Ref. to EX(H6DO)-8, REMOVAL, Rear Exhaust Pipe.>
- 6) Remove the heat shield cover.

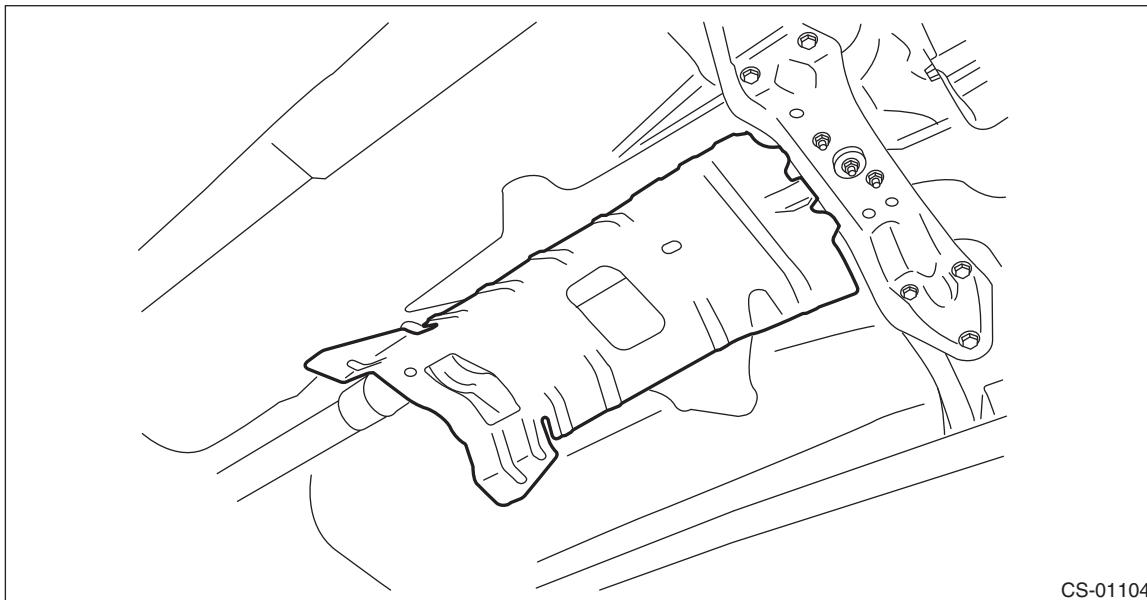

- 7) Remove the cable from arm assembly.

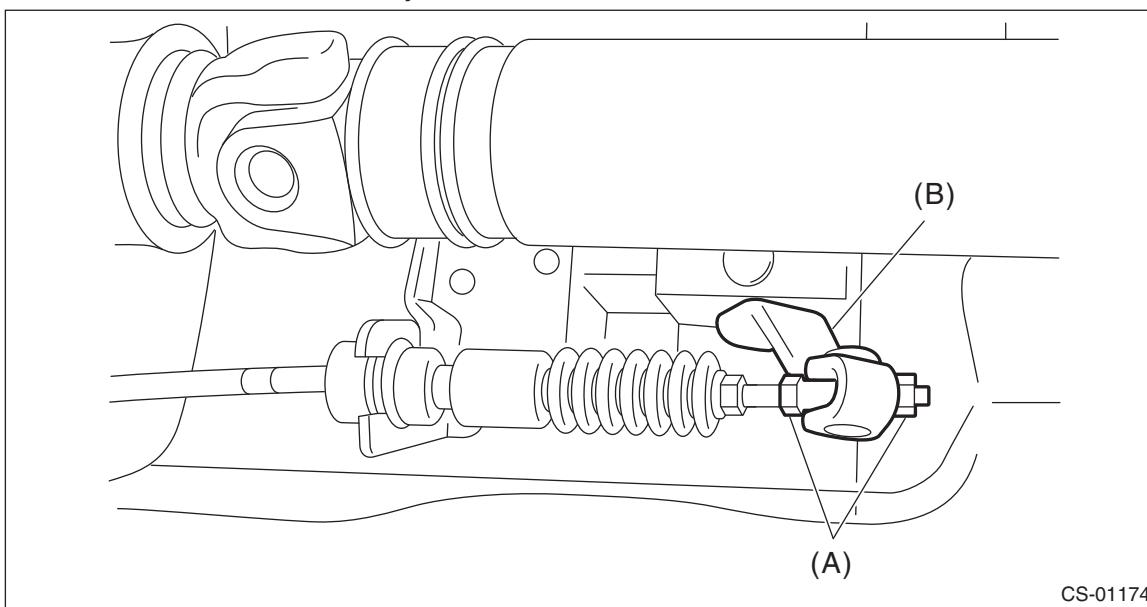


(A) Nut  
(B) Arm ASSY

## Select Lever

### CONTROL SYSTEMS

8) Raise the claw of the clamp and remove the cable.

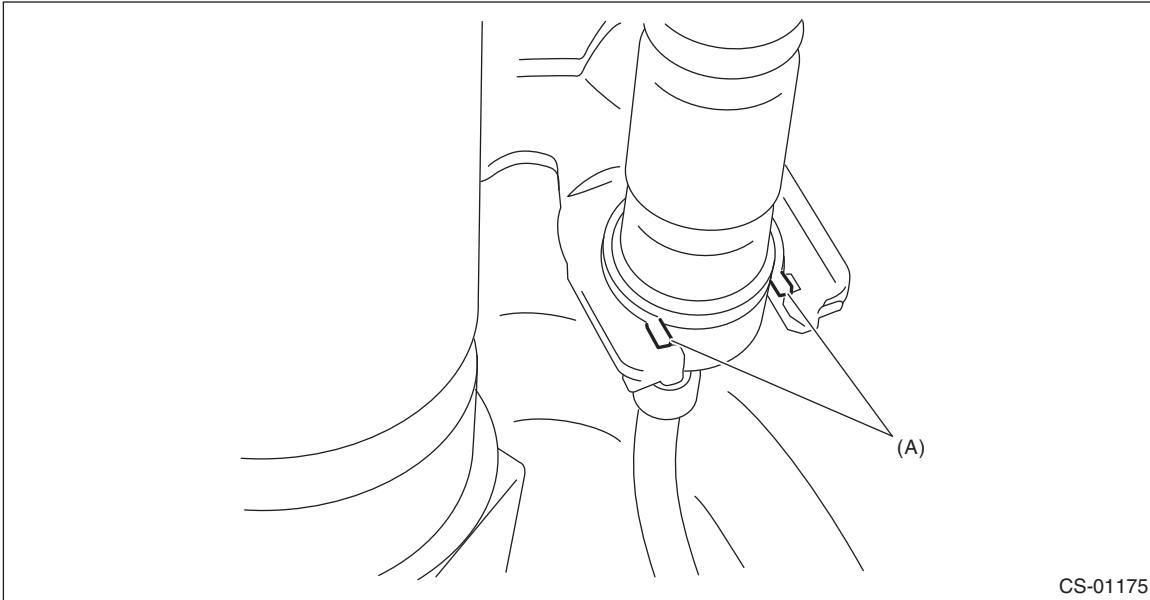


CS-01175

(A) Claw

9) Lower the vehicle.


10) Lower the cover grip AT vertically toward the lever.

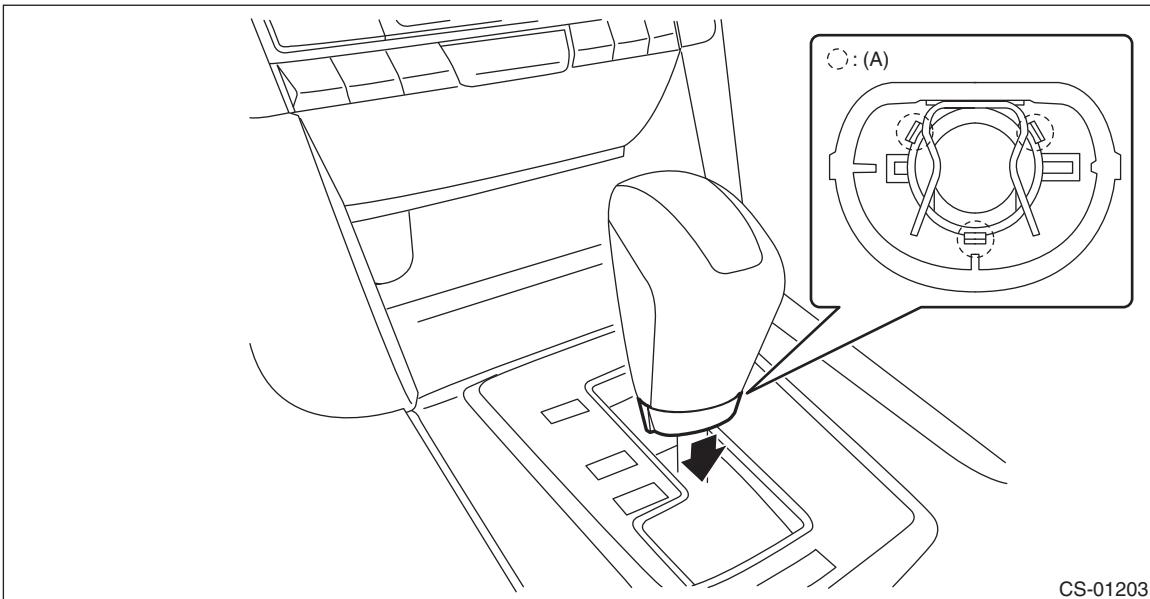


CS-01203

(A) Claws (3 places)

11) Remove the clamp grip pin.

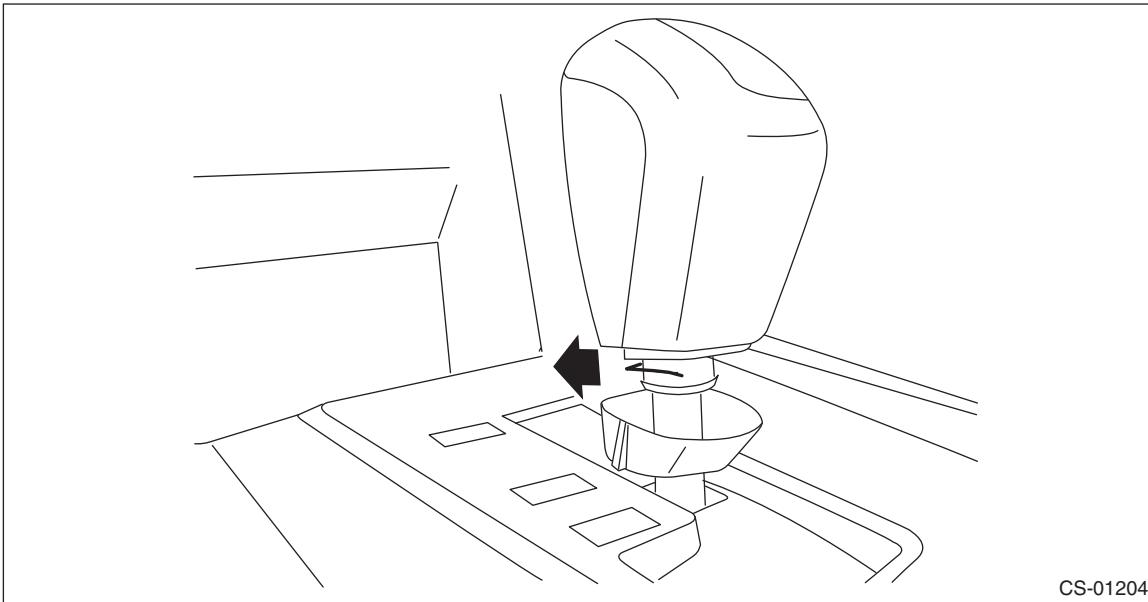



12) Remove the grip assembly.

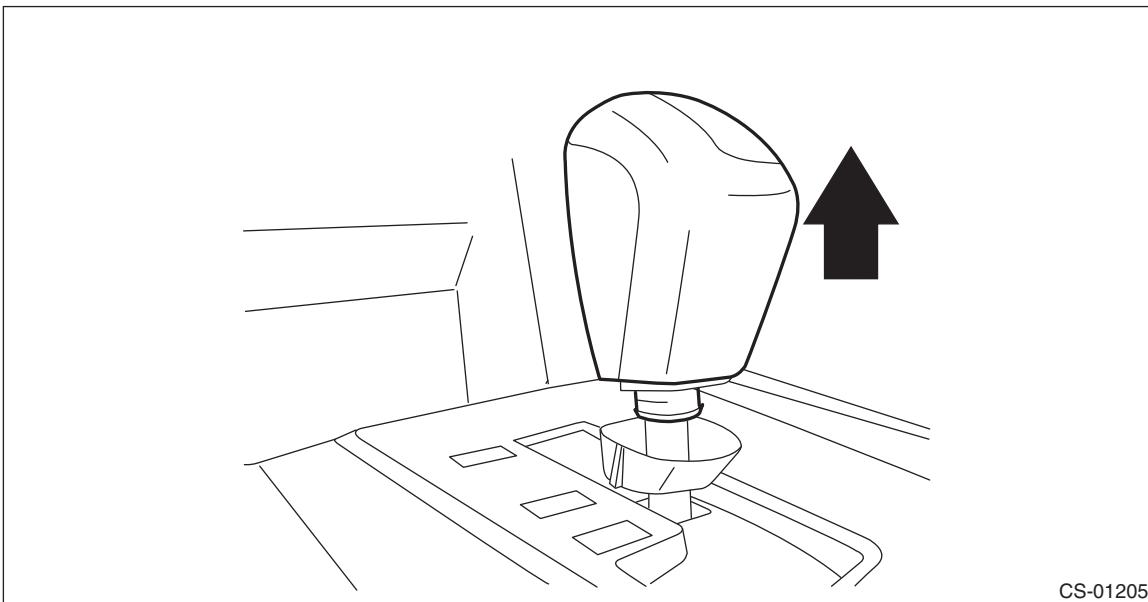

## Select Lever

### CONTROL SYSTEMS


13) Turn over the rubber and remove the console front cover assembly.

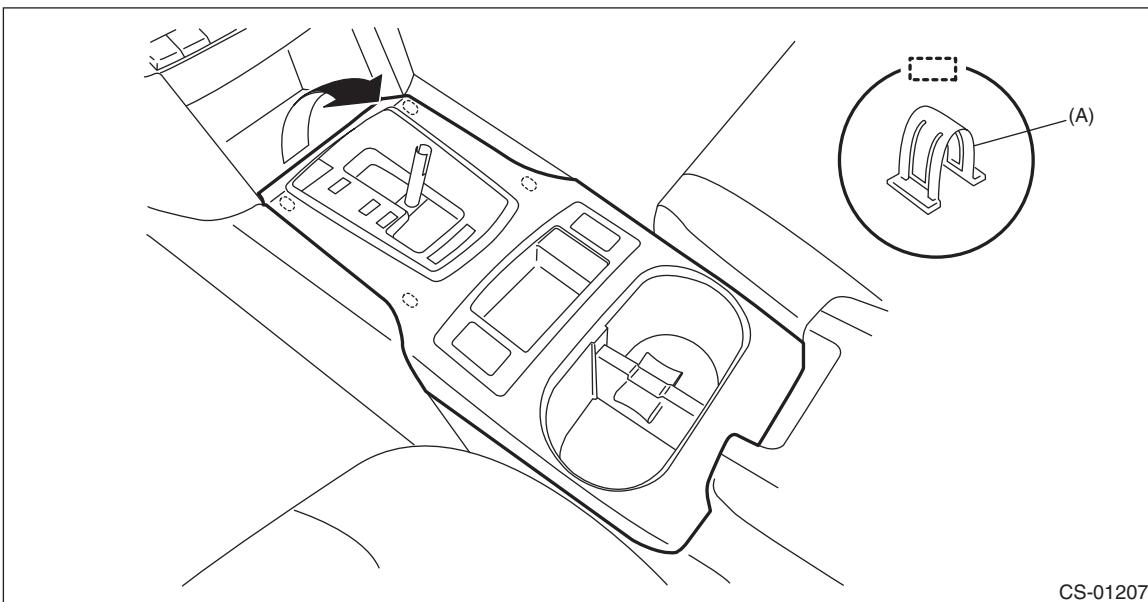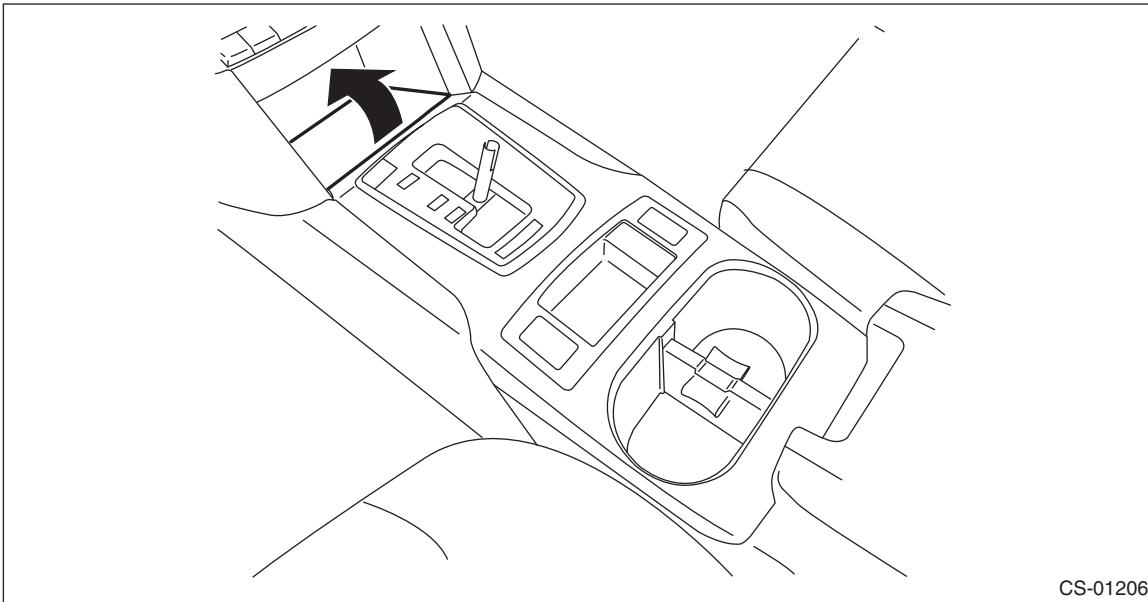


(A) Hooks (4 places)

14) Remove the console box. <Ref. to EI-72, REMOVAL, Console Box.>

15) Remove the harness clip from the select lever.

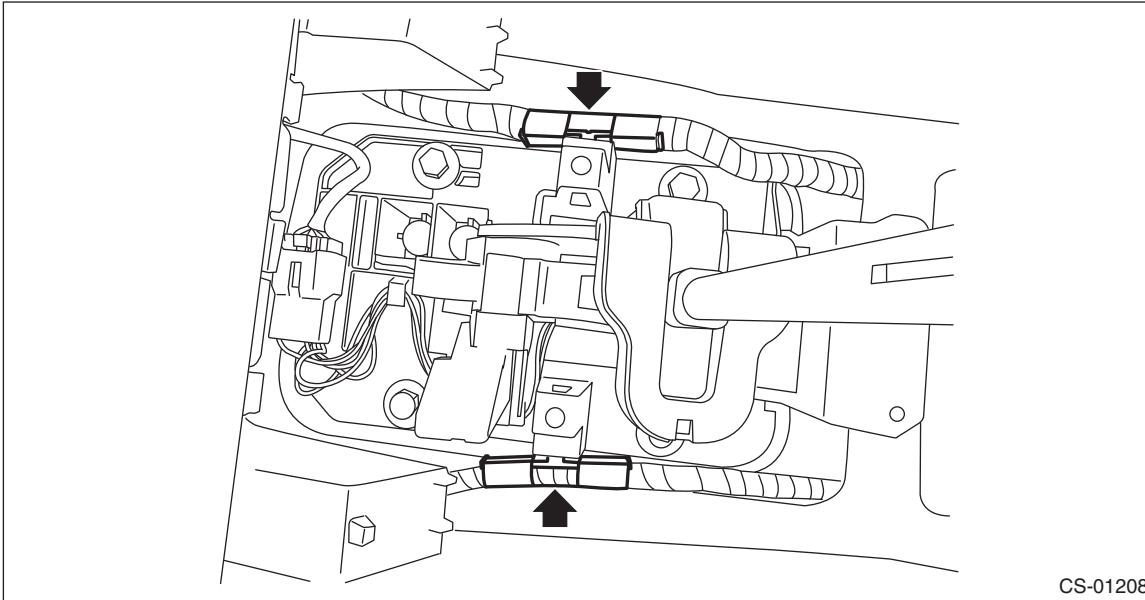


16) Disconnect the harness connector.

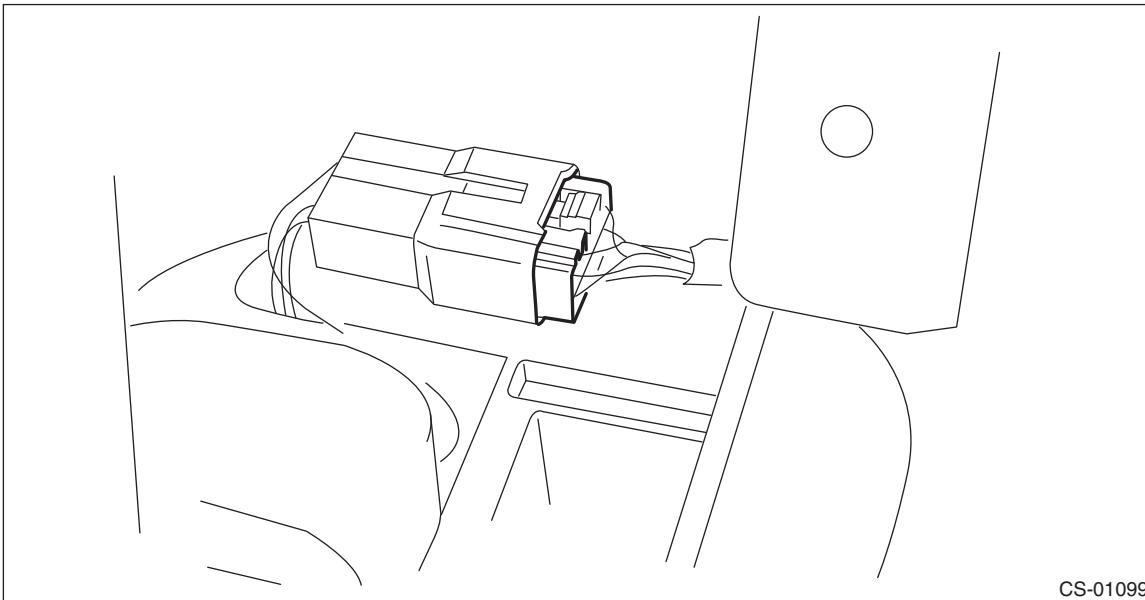

## Select Lever

### CONTROL SYSTEMS

17) Remove the four bolts to remove the select lever assembly.

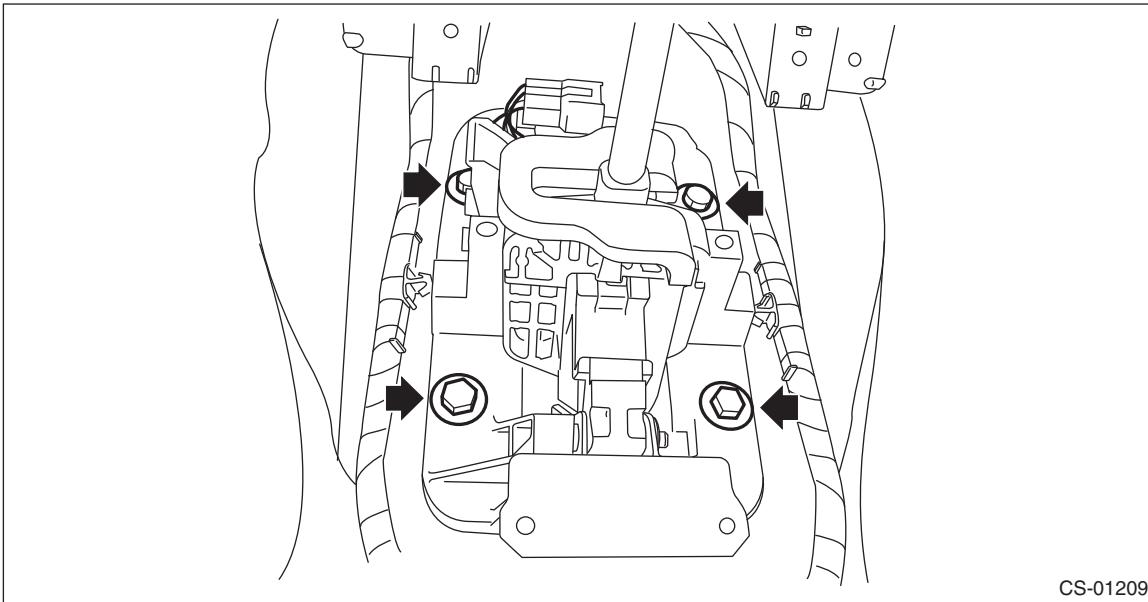


### B: INSTALLATION


- 1) Set the select lever to vehicle body.
- 2) Tighten the four mounting bolts to attach the select lever to the vehicle body.

***Tightening torque:***

***18 N·m (1.8 kgf·m, 13.3 ft-lb)***

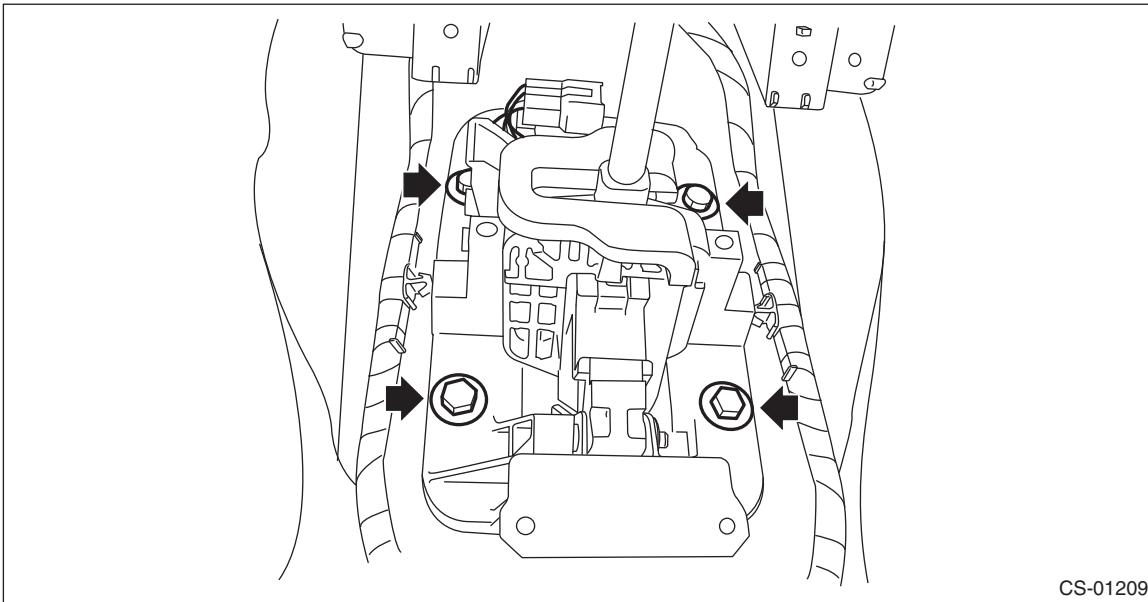


3) Connect the harness connector.

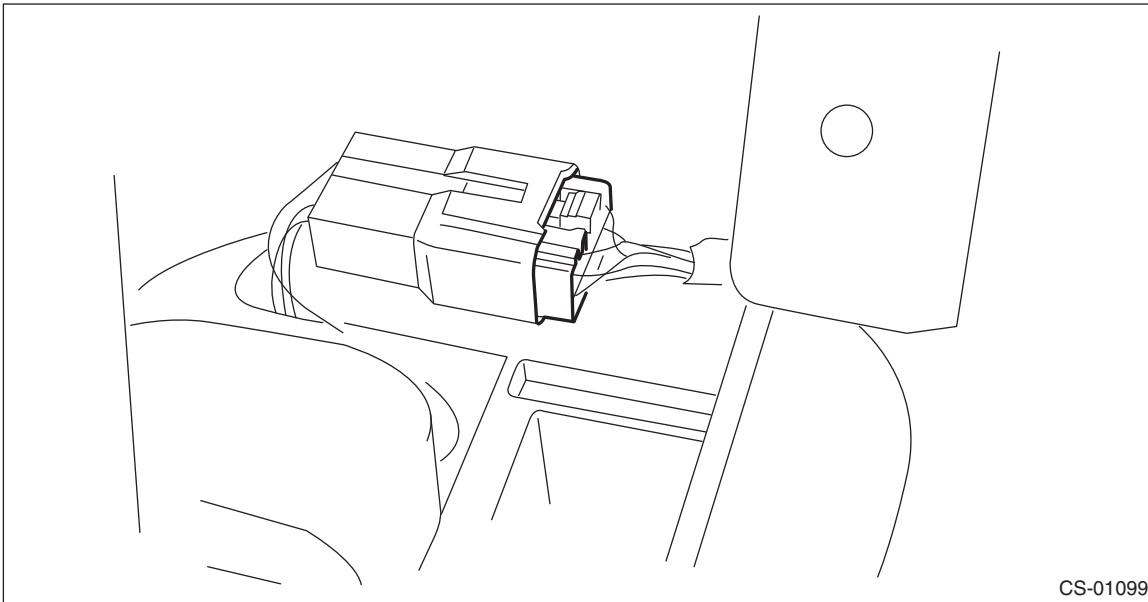

CS-01099

4) Install the harness clip to the select lever.

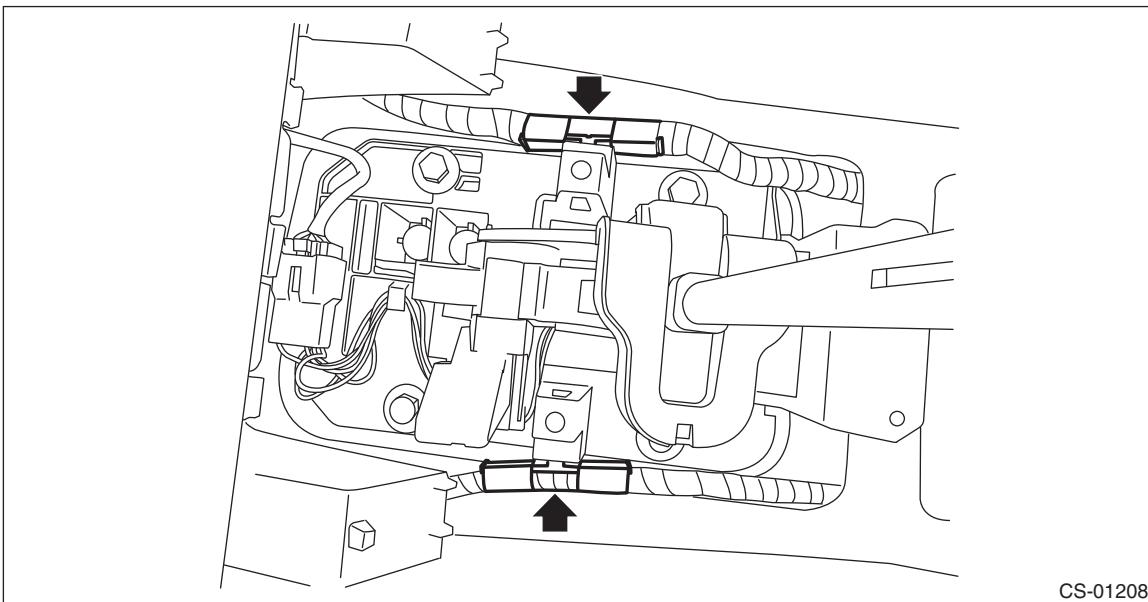

CS-01208


5) Shift the select lever to "N" range.

6) Install the console box and the console front cover assembly. <Ref. to EI-74, INSTALLATION, Console Box.>

## Select Lever

### CONTROL SYSTEMS

7) Accessing from the button side of the grip, attach the clamp grip pin.

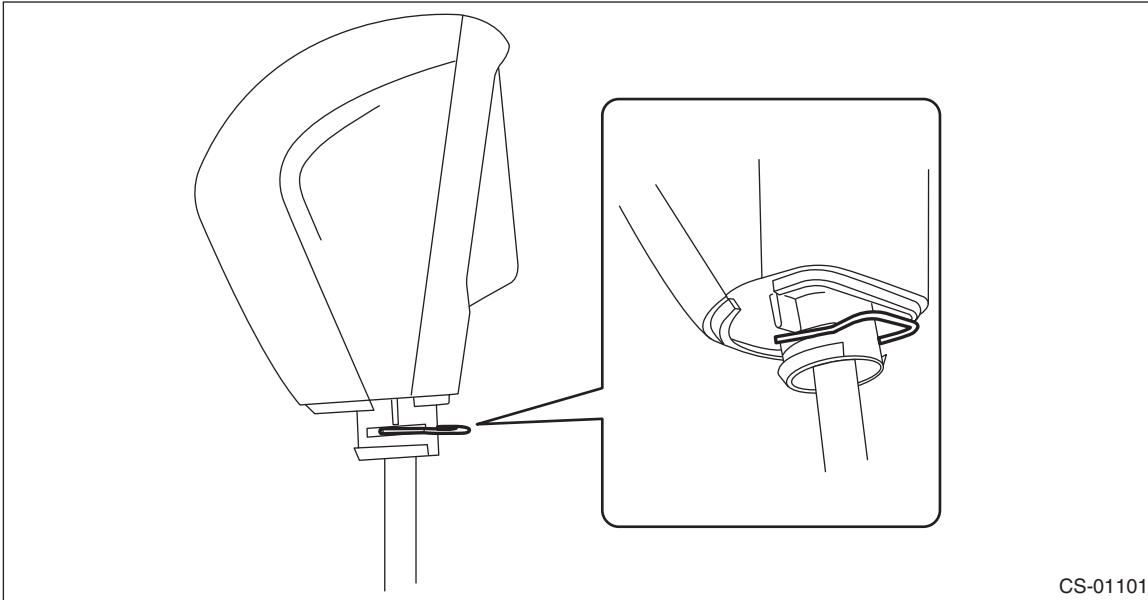


CS-01101

8) Install the cover grip AT securely.


NOTE:

After installation, check that the cover grip AT cannot be detached.

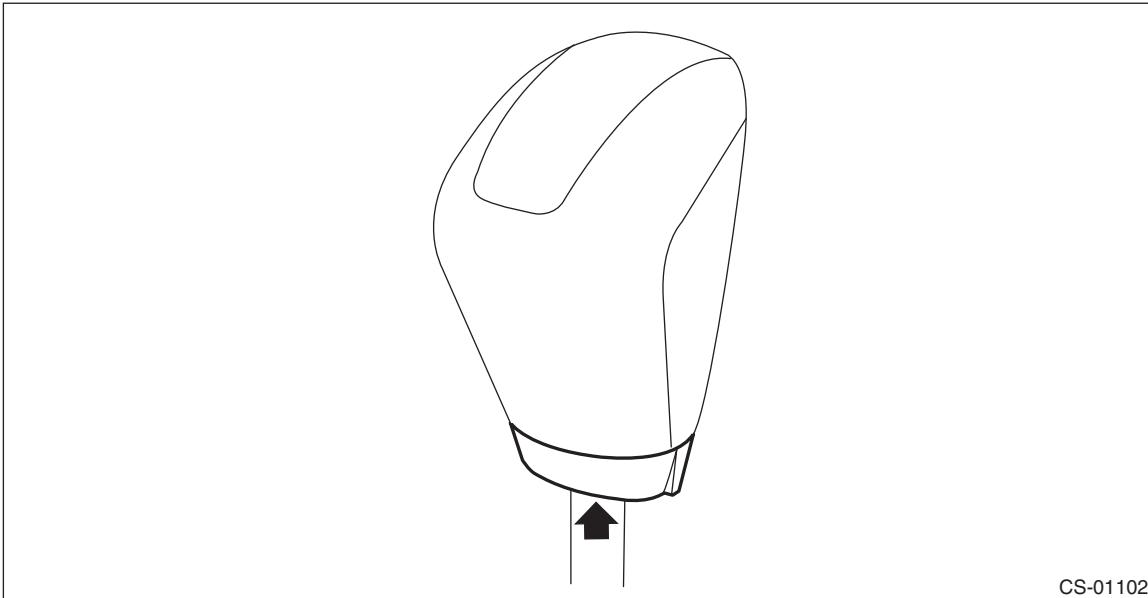

CS-01102

9) Insert the grip assembly to the select lever and press it down until a click is heard.

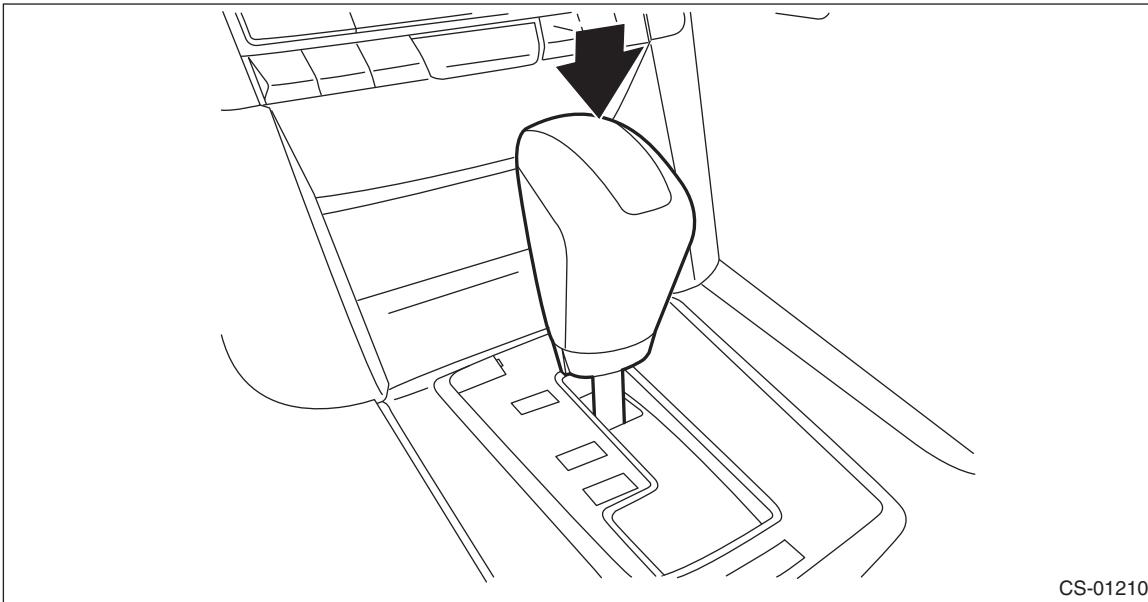

10) After installation of grip, check the following points.

- The grip will not come off.
- The button on the grip operates normally.

11) Lift up the vehicle.

12) Shift the range select lever to "N" range.

13) Secure the cable to the bracket. <Ref. to CS-45, INSTALLATION, Select Cable.>


14) Adjust the select cable position. <Ref. to CS-49, ADJUSTMENT, Select Cable.>

15) After adjustment, confirm that the select lever operates properly at all range positions using the shift lock release button.

16) Install the heat shield cover.

***Tightening torque:***

**18 N·m (1.8 kgf·m, 13.3 ft-lb)**

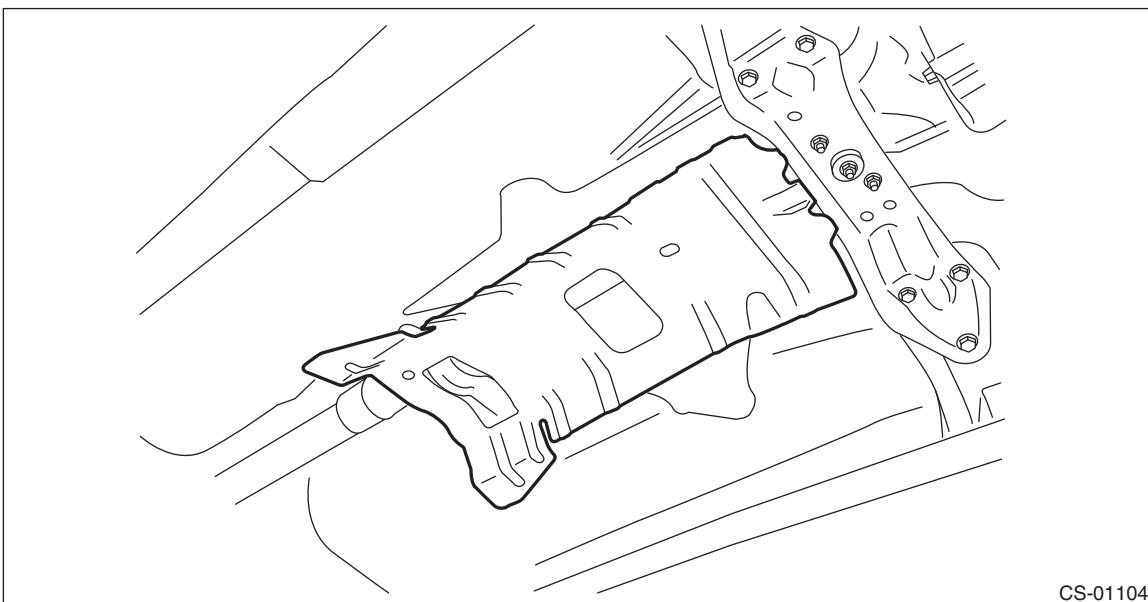

17) Install the rear exhaust pipe.

- 2.5 L non-turbo model

<Ref. to EX(H4SO)-8, INSTALLATION, Rear Exhaust Pipe.>

- 3.6 L model

<Ref. to EX(H6DO)-8, INSTALLATION, Rear Exhaust Pipe.>

# Select Lever

## CONTROL SYSTEMS


18) Inspect the following items. If a malfunction is found in the inspection, adjust the select cable or inhibitor switch (CVT model).

- (1) The shift lock operates normally. <Ref. to CS-11, SHIFT LOCK OPERATION, INSPECTION, AT Shift Lock Control System. >
- (2) Engine starts when the select lever is in "P" or "N" range, but not in other ranges.
- (3) Back-up light illuminates when the select lever is in the "R" range, but not in other ranges.
- (4) Select lever and indicator positions are matched.

## C: DISASSEMBLY


### 1. GRIP ASSY

1) Remove the cover grip AT.

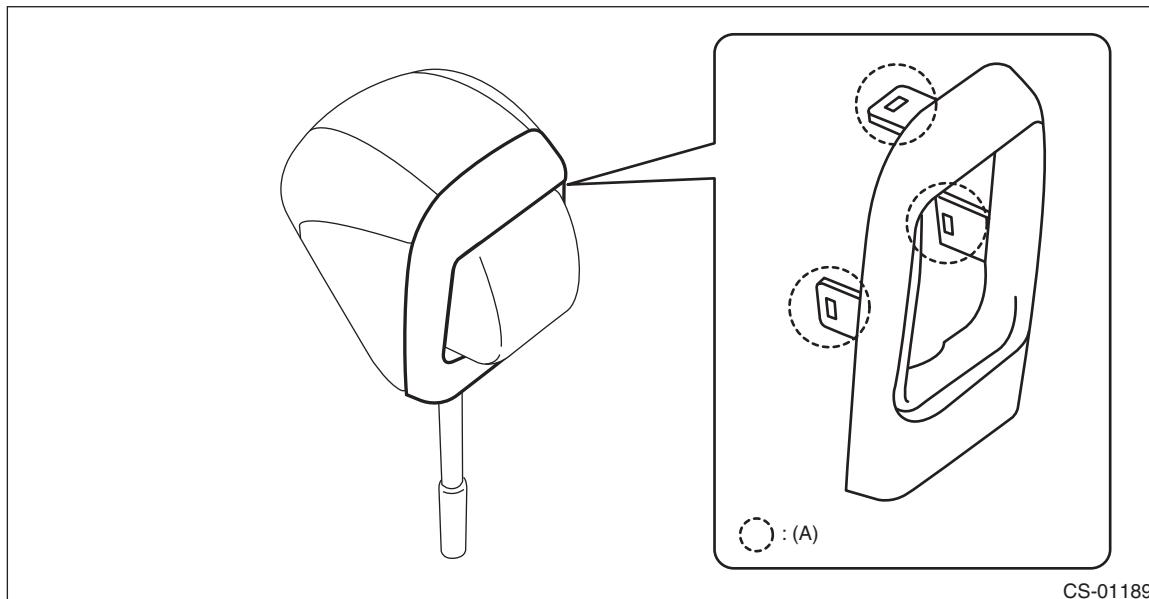

(A) Claws (3 places)

2) Remove the button assembly-AT.

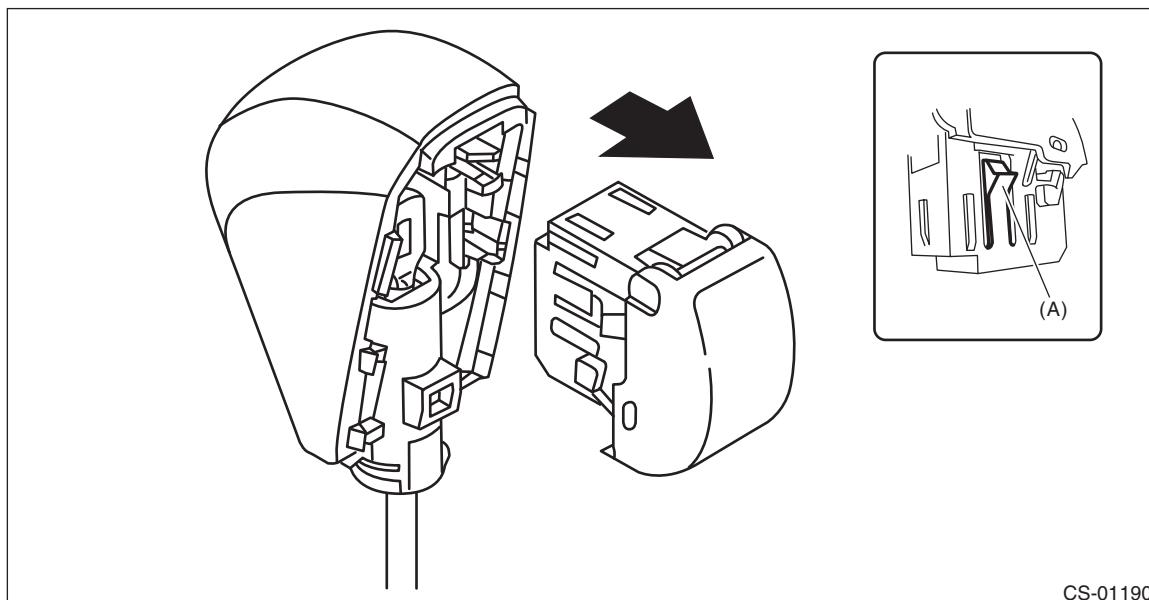


(A) Claw


3) Remove the rod COMPL.

## 2. AT SELECT LEVER ASSEMBLY

- 1) Remove the spacer.

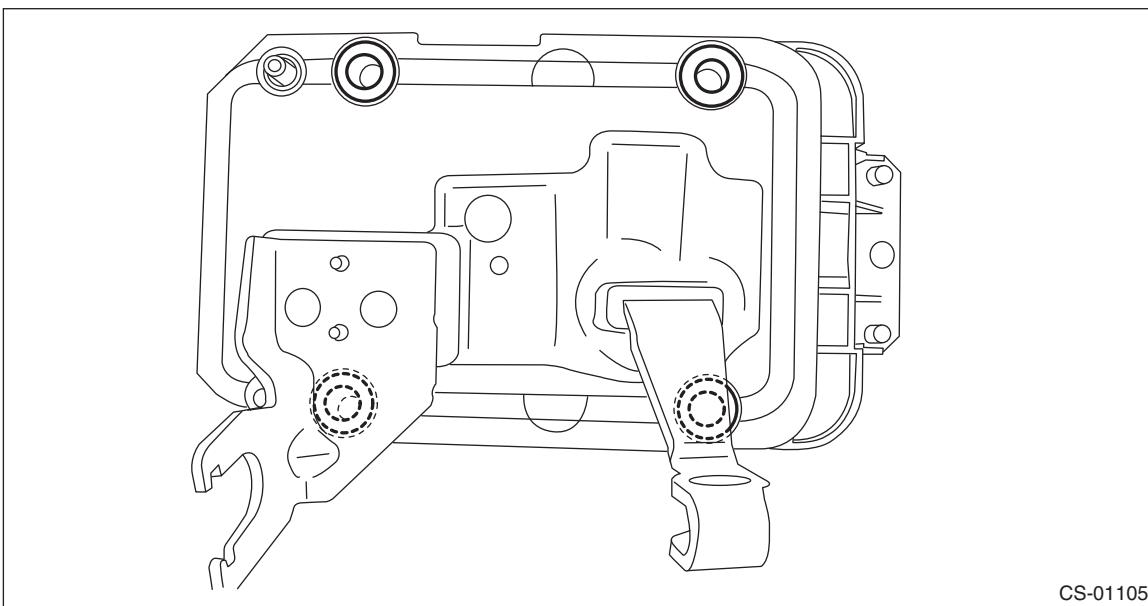


- 2) Remove the gasket.

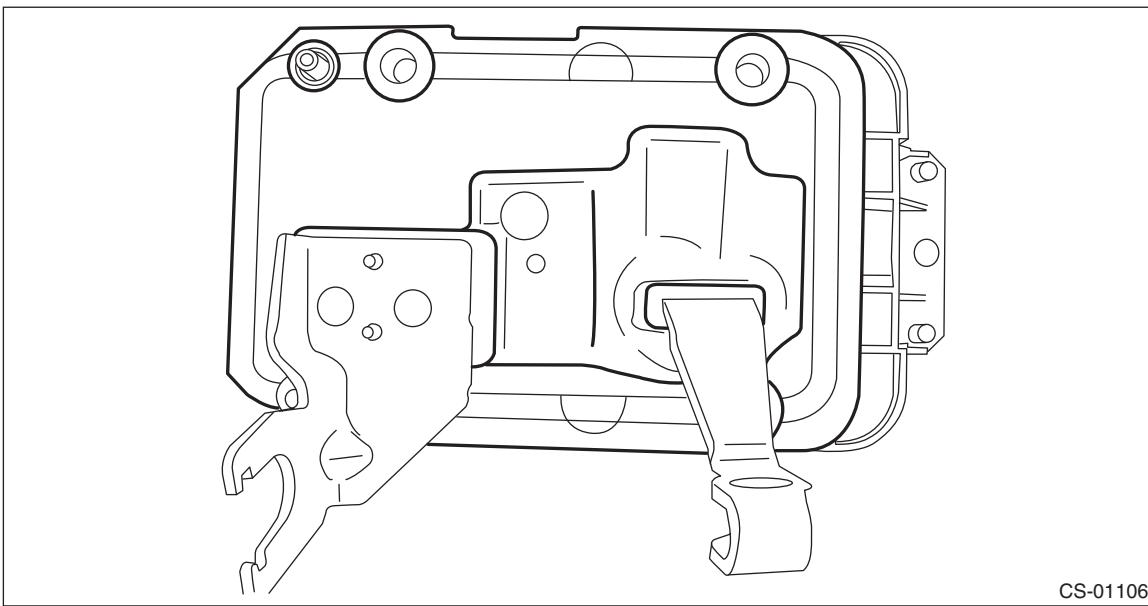


## Select Lever

### CONTROL SYSTEMS


3) Insert a flat tip screwdriver with a thin tip under the connector and disconnect the harness connector from the plate COMPL.

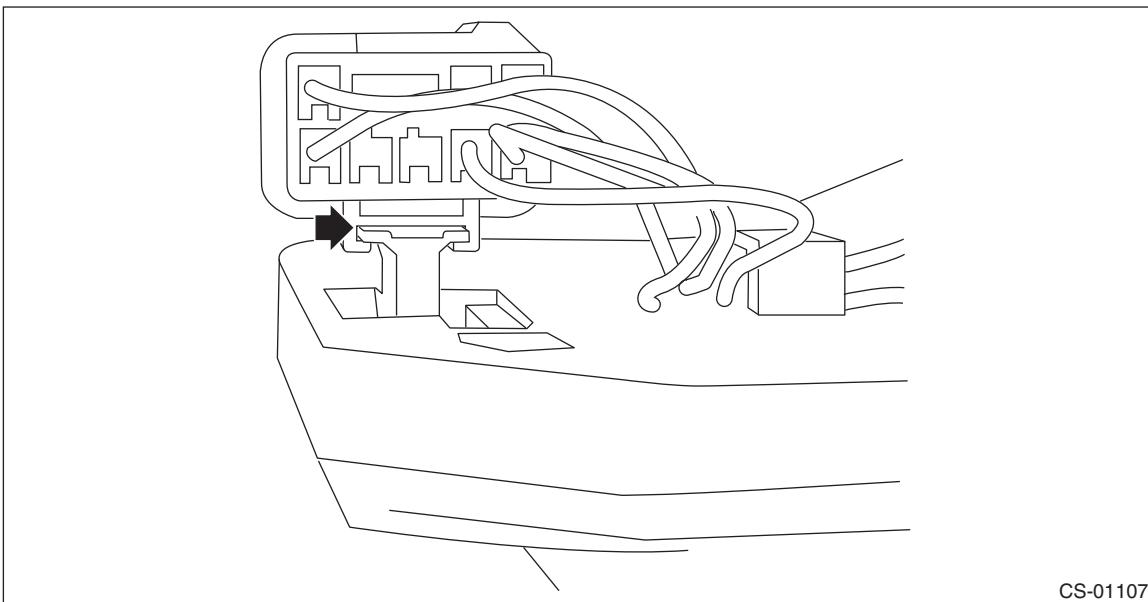


4) Remove the harness from the plate COMPL.

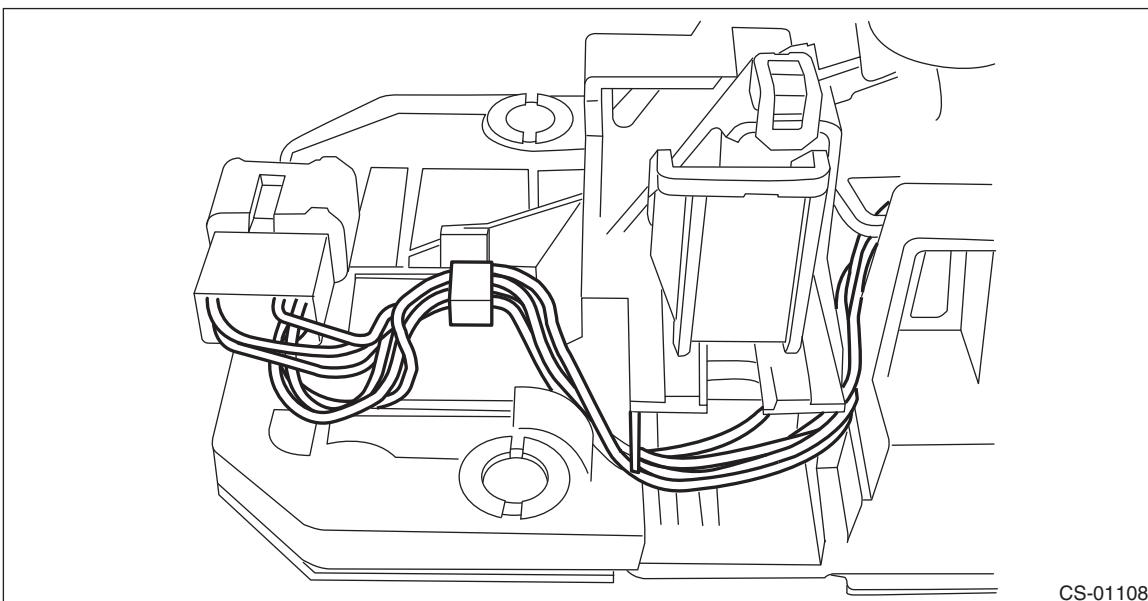

5) Raise the claw with a flat tip screwdriver with a thin tip and remove the solenoid unit.

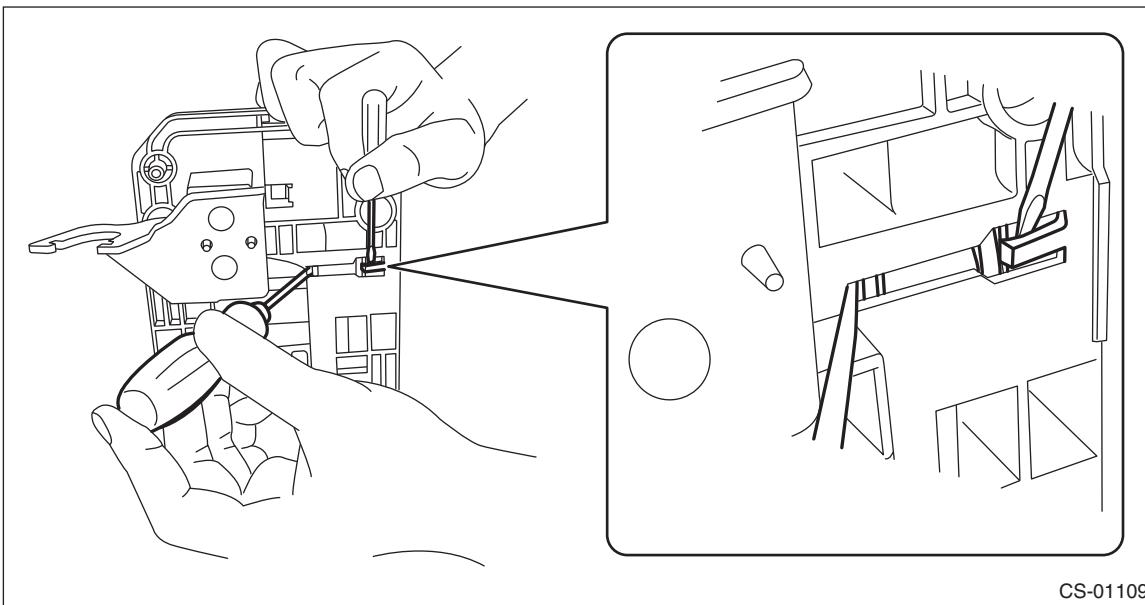

6) Using a flat tip screwdriver with a thin tip, remove the solenoid unit terminals from the connector.

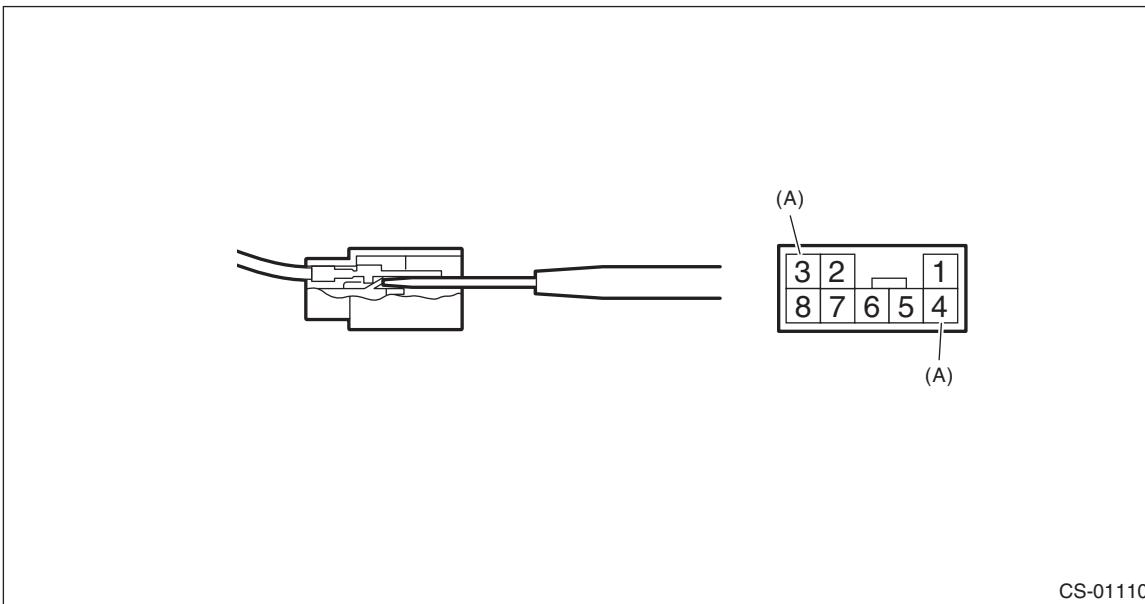

(A) Solenoid unit terminals


## Select Lever

### CONTROL SYSTEMS


7) Remove the clamp push nut.

NOTE:

Replace the clamp push nut with a new part.

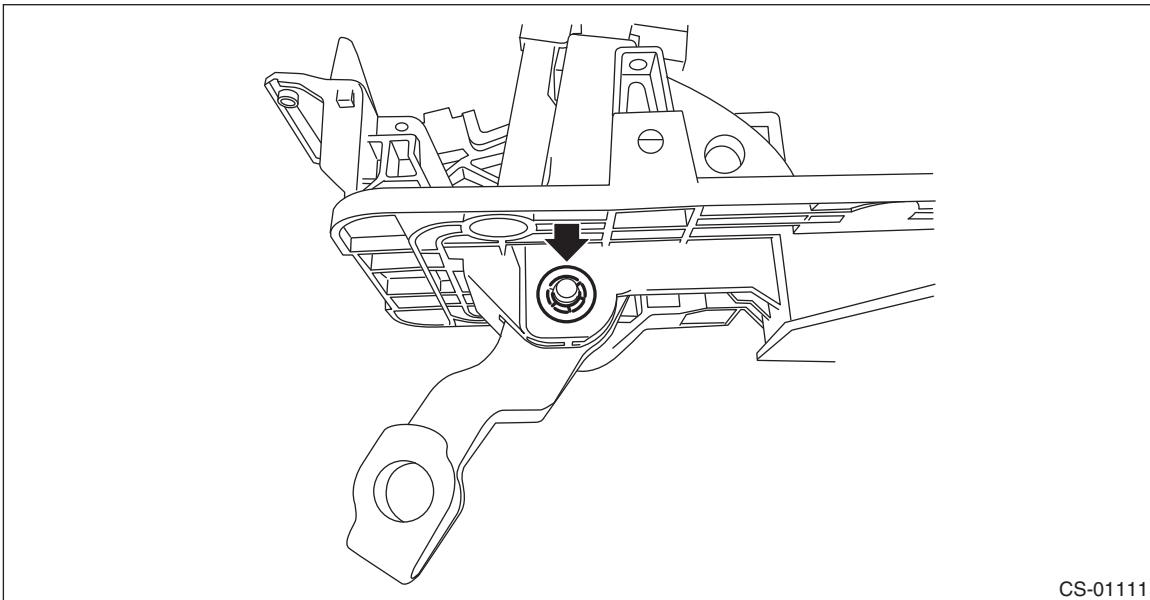


8) Pull out shaft control.

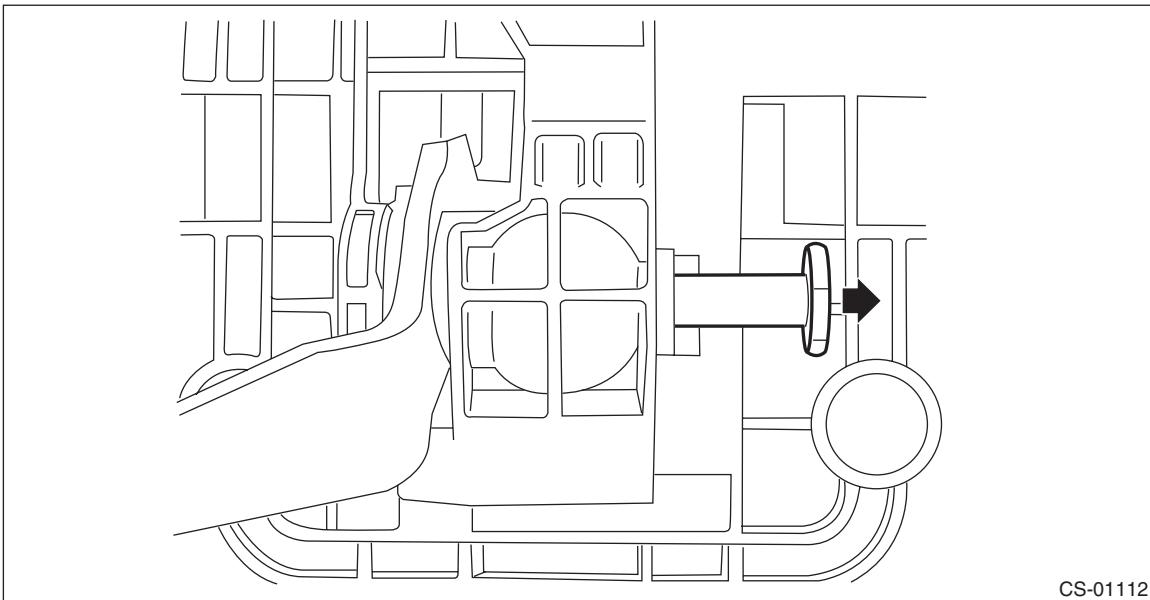

9) Remove the clamp push nut.


NOTE:

Replace the clamp push nut with a new part.

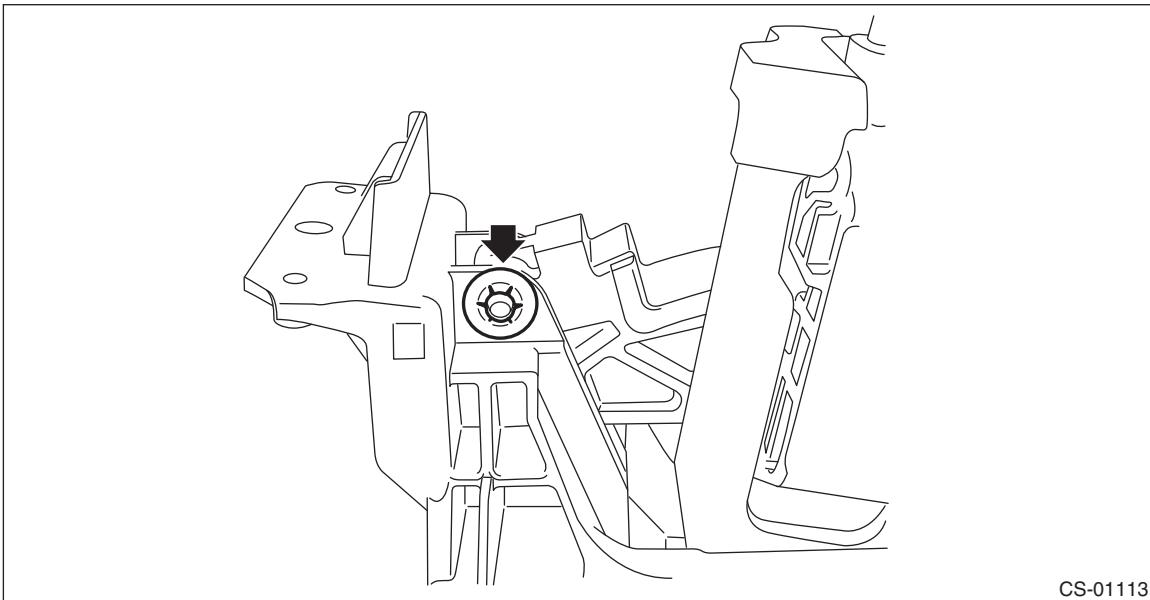

CS-01113

10) Pull out spacer pin guide.

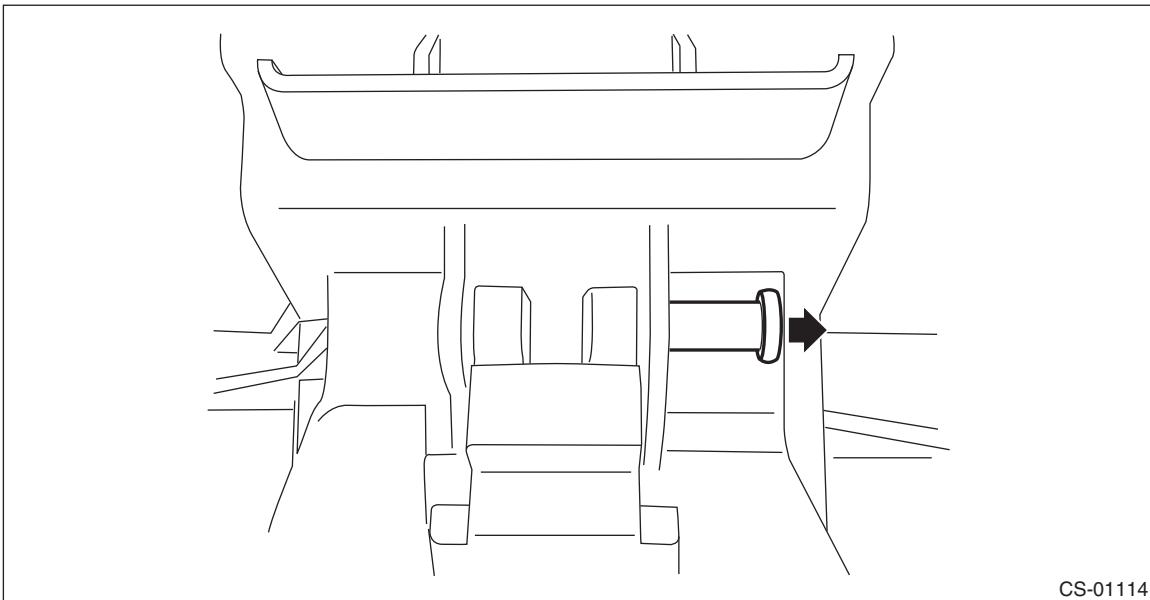


CS-01114


## Select Lever

### CONTROL SYSTEMS


11) Remove the clamp pin.

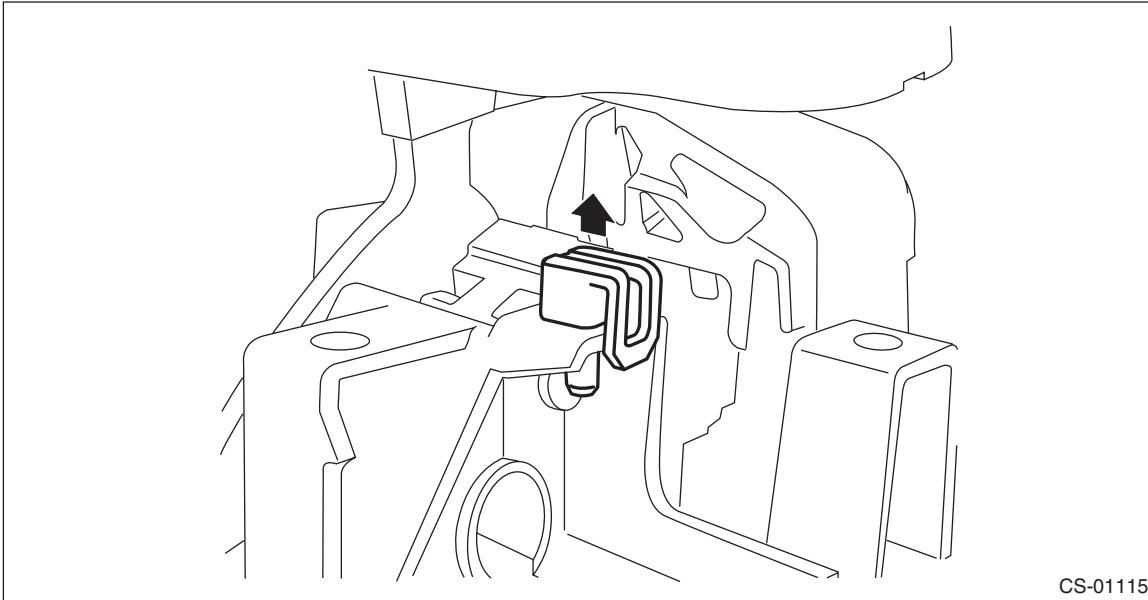


12) Remove the spacer pin guide.

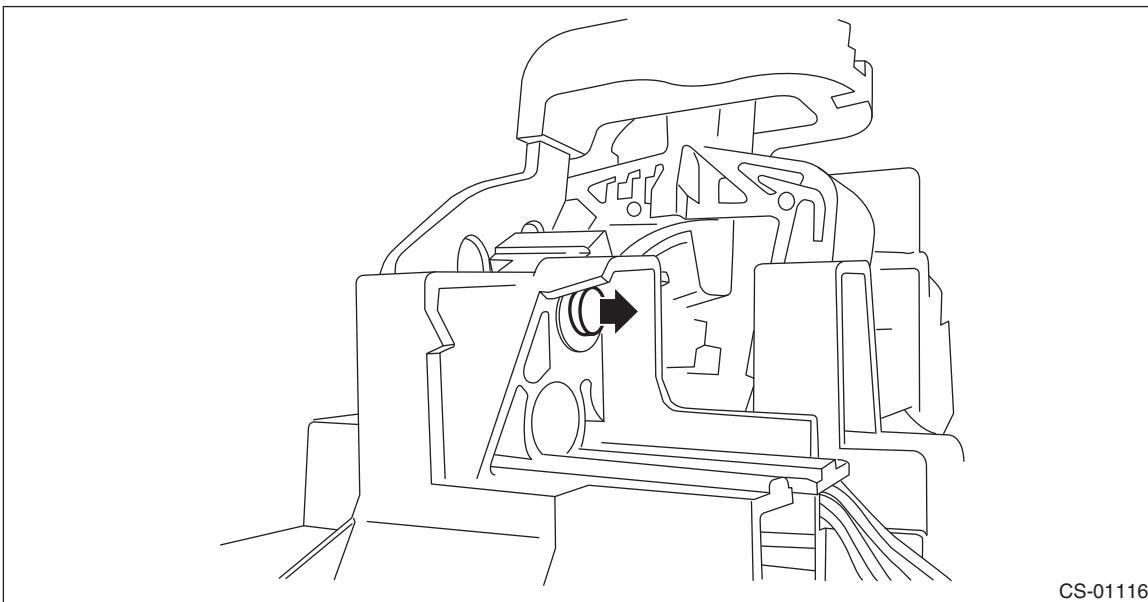

13) Remove the select lever COMPL from the plate COMPL.

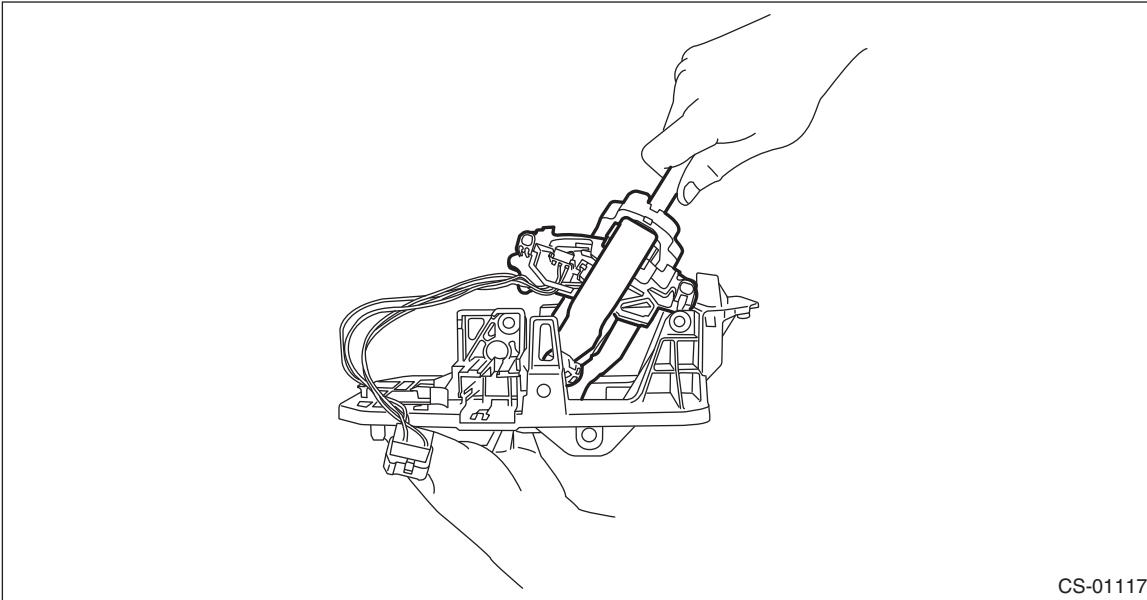

14) Remove the arm assembly.

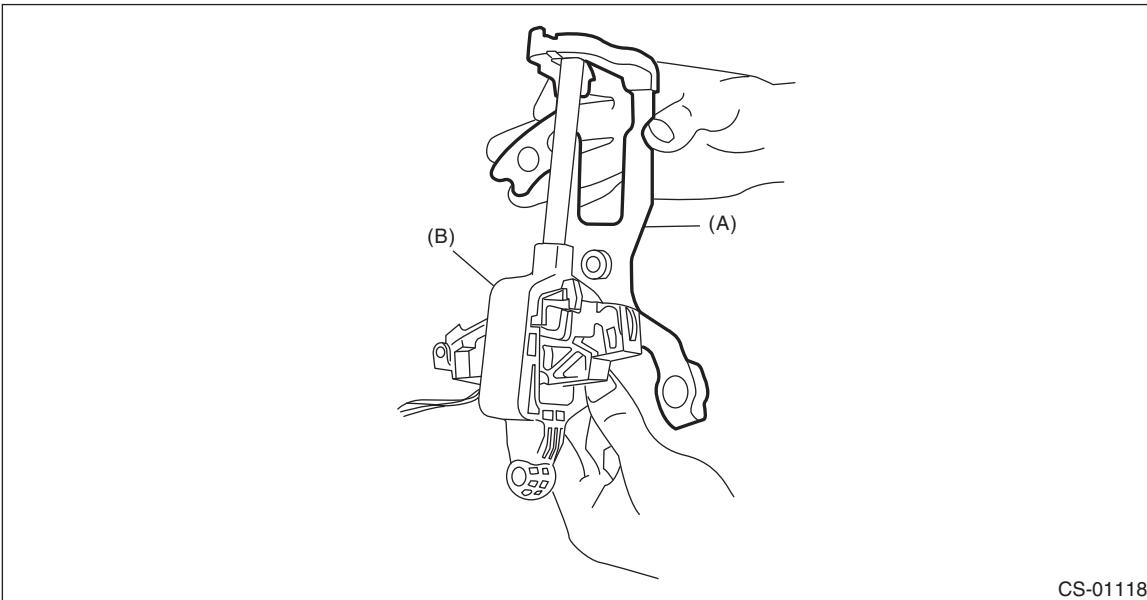


(A) Arm ASSY

(B) Selector lever COMPL


## Select Lever

### CONTROL SYSTEMS

15) Remove the guide assembly from the select lever COMPL.

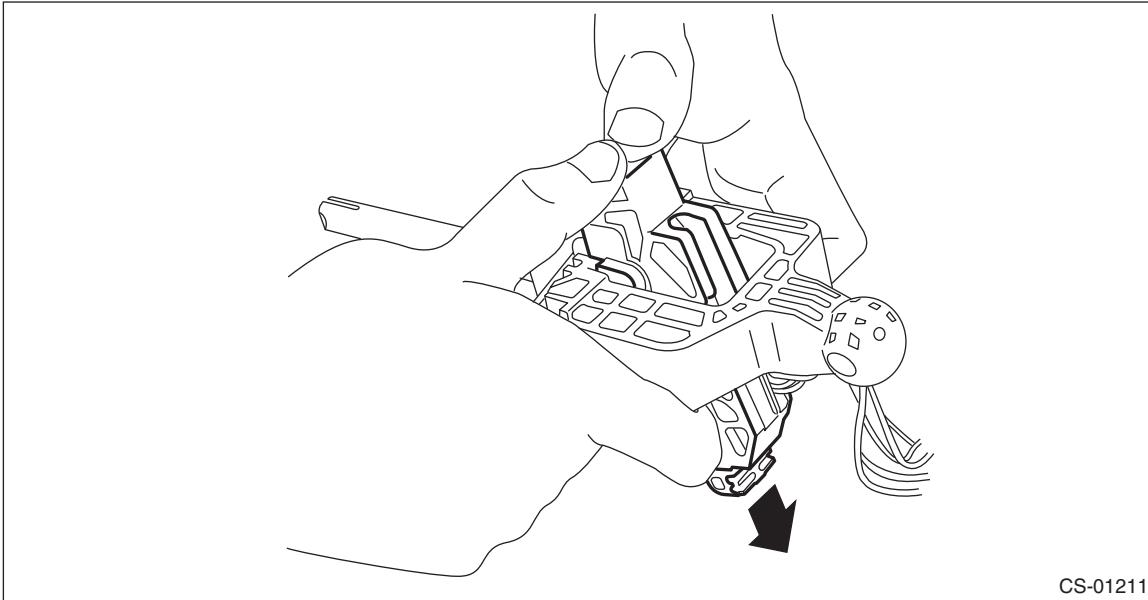


16) Remove the rod detent and detent spring from the select lever COMPL.

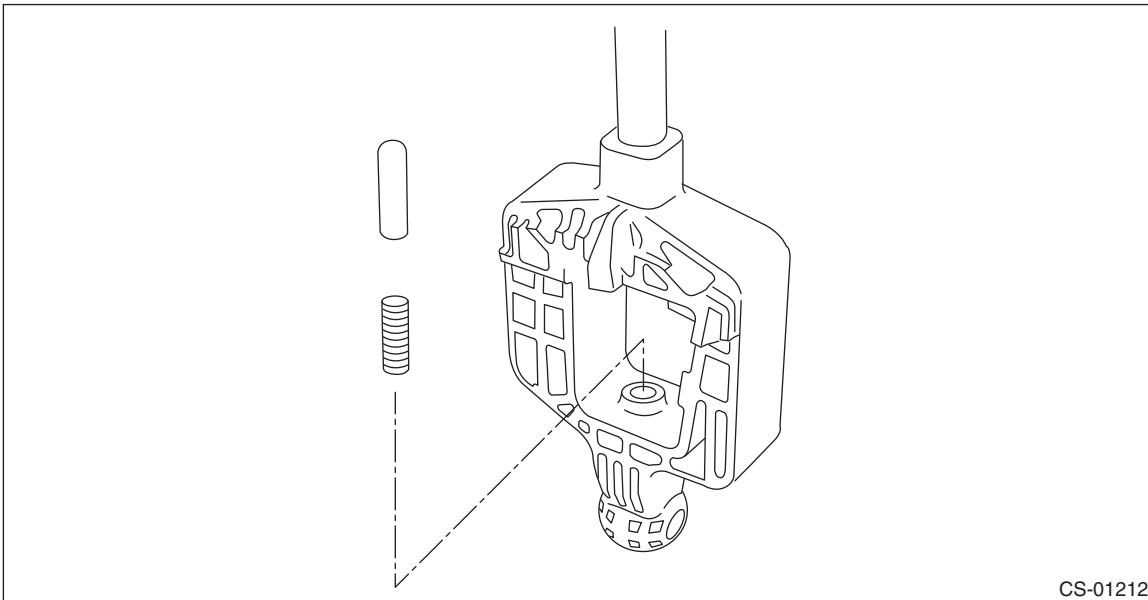


### 3. INDICATOR ASSY

- 1) Disconnect the harness connector from the console front cover assembly.

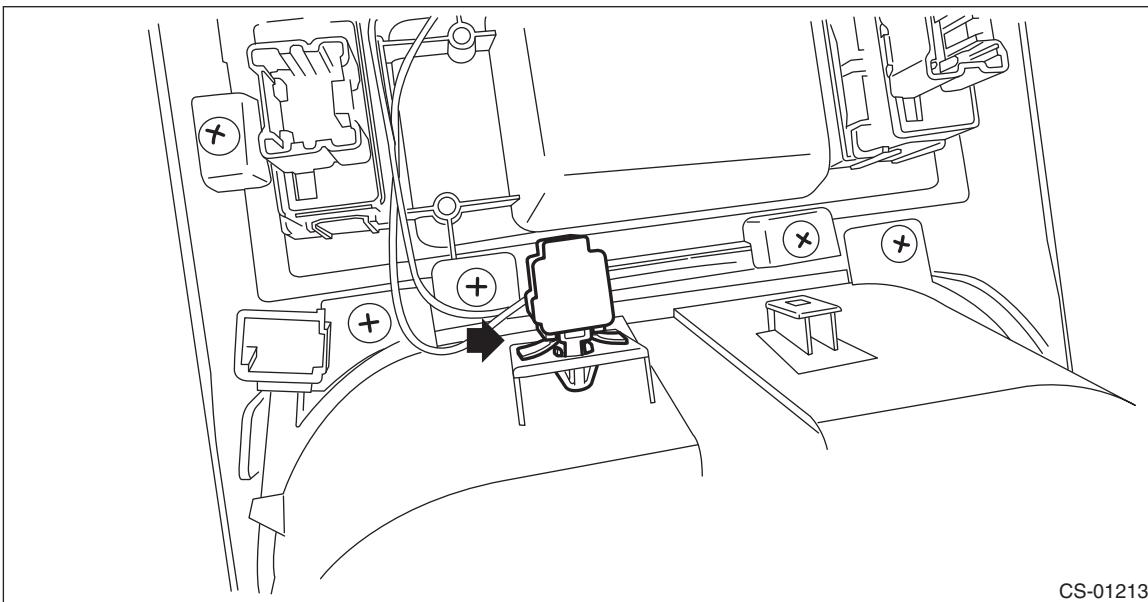

- 2) Remove the four screws and remove the indicator assembly from the console front cover assembly.

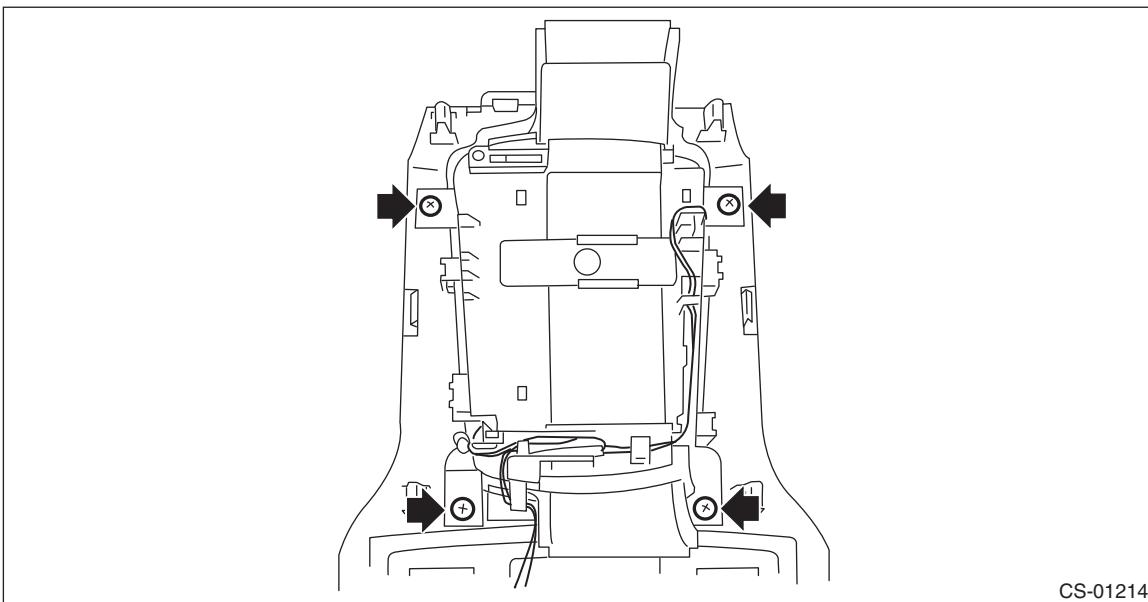


## D: ASSEMBLY

- 1) Clean all the parts before assembly.
- 2) Apply Multemp D or equivalent to each part.
- 3) Assemble in the reverse order of disassembly.

NOTE:

Insert the solenoid unit terminals to the harness connector.

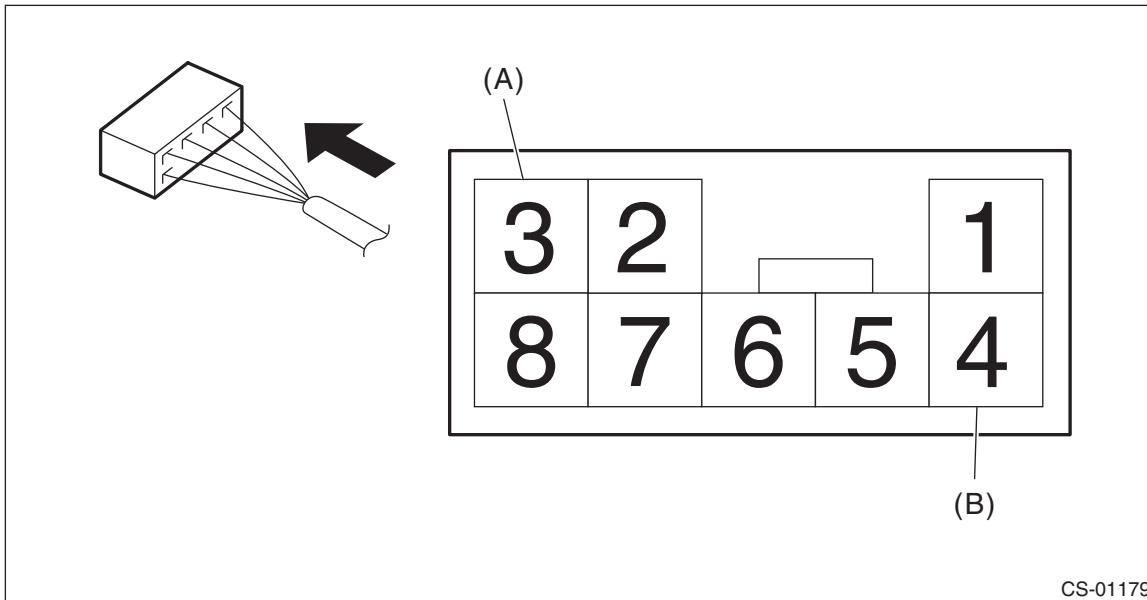

(A) Solenoid unit (color code: blue)  
(B) Solenoid unit (color code: black)

4) After installation, check the following points.

- The select indicator matches the select lever position when the select lever is changed from "P" range to "D" range.
- The select lever position and the position mark match each other.
- Operating force to move the select lever from "P" to "D" range.

## E: INSPECTION

- 1) Inspect the removed parts by comparing with new ones for deformation, damage and wear. Repair or replace if defective.
- 2) Inspect the select lever assembly operating condition before assembly. Normal if it operates smoothly.