



## 12. Transmission Mounting System

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the center exhaust pipe. <Ref. to EX(H4SO)-7, REMOVAL, Center Exhaust Pipe.>
- 4) Remove the heat shield cover.

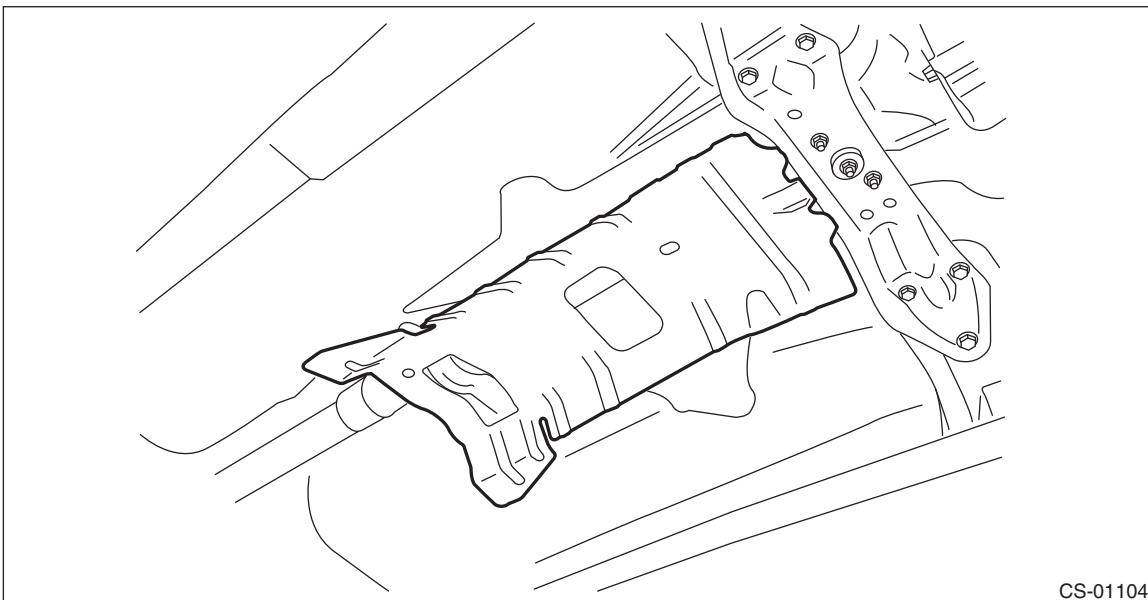

- 5) Set the transmission jack under the transmission. Make sure that the support plate of transmission jack does not touch the oil pan.
- 6) Remove the transmission rear crossmember.

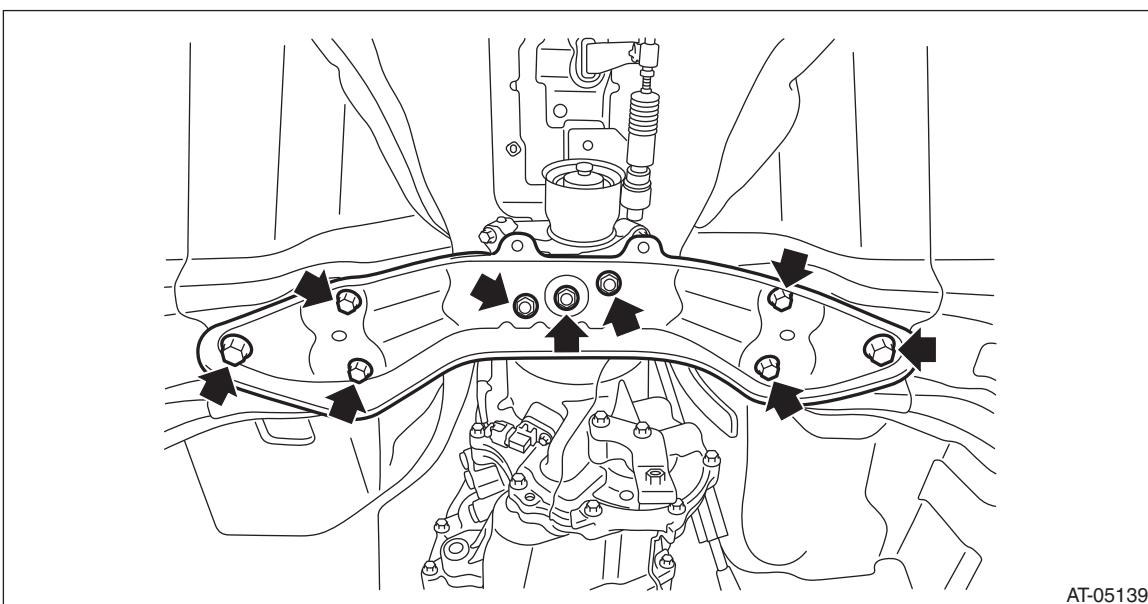

- 7) Remove the rear cushion rubber.

# Transmission Mounting System

## CONTINUOUSLY VARIABLE TRANSMISSION

### B: INSTALLATION

- 1) Attach the rear cushion rubber to the transmission.

**Tightening torque:**


**40 N·m (4.1 kgf-m, 29.5 ft-lb)**

- 2) Install the crossmember.

**Tightening torque:**

**T1: 35 N·m (3.6 kgf-m, 25.8 ft-lb)**

**T2: 75 N·m (7.6 kgf-m, 55.3 ft-lb)**

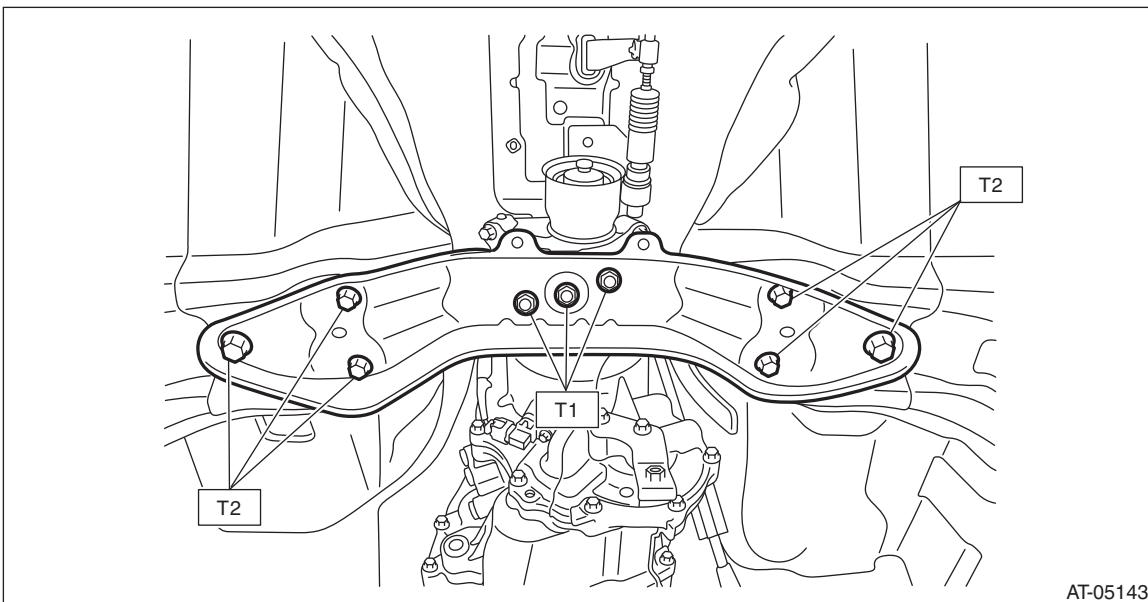


- 3) Remove the transmission jack.

- 4) Install the heat shield cover.

**Tightening torque:**

**18 N·m (1.8 kgf-m, 13.3 ft-lb)**

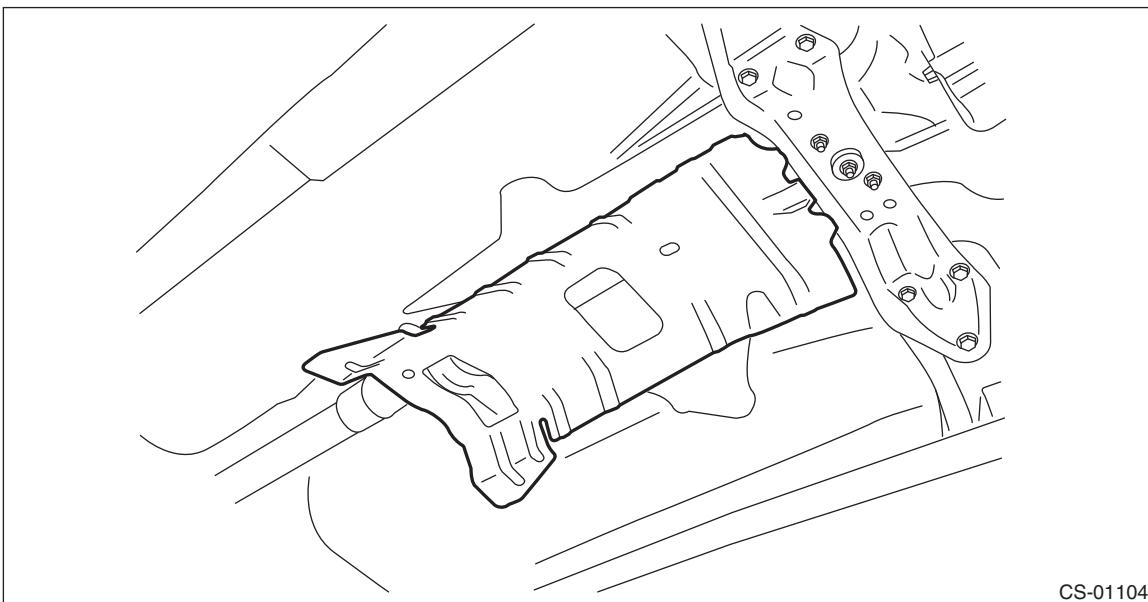

- 5) Install the center exhaust pipe. <Ref. to EX(H4SO)-7, INSTALLATION, Center Exhaust Pipe.>

- 6) Connect the ground cable to battery.

### C: INSPECTION

- Check the crossmember for bends or damage.
- Check that the cushion rubber is not stiff, cracked or otherwise damaged.