



24. CVT Oil Cooler

A: REMOVAL

- 1) Remove the front bumper. <Ref. to EI-39, REMOVAL, Front Bumper.>
- 2) Remove the headlight assembly (LH). <Ref. to LI-26, REMOVAL, Headlight Assembly.>
- 3) Remove the inlet hose and outlet hose.

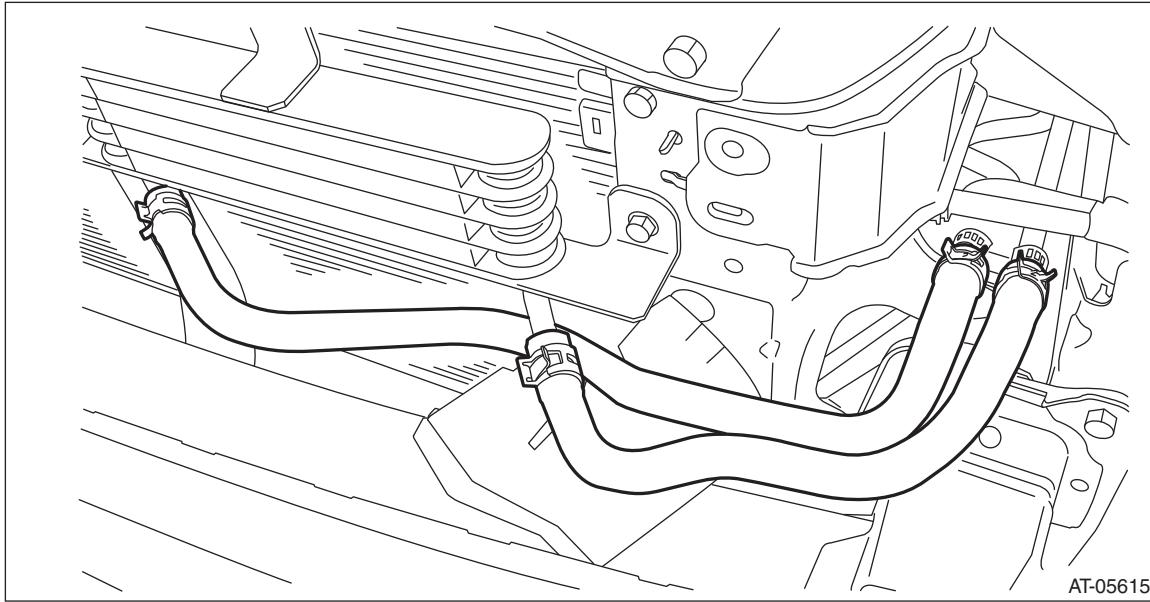

- 4) Remove the CVTF oil cooler.

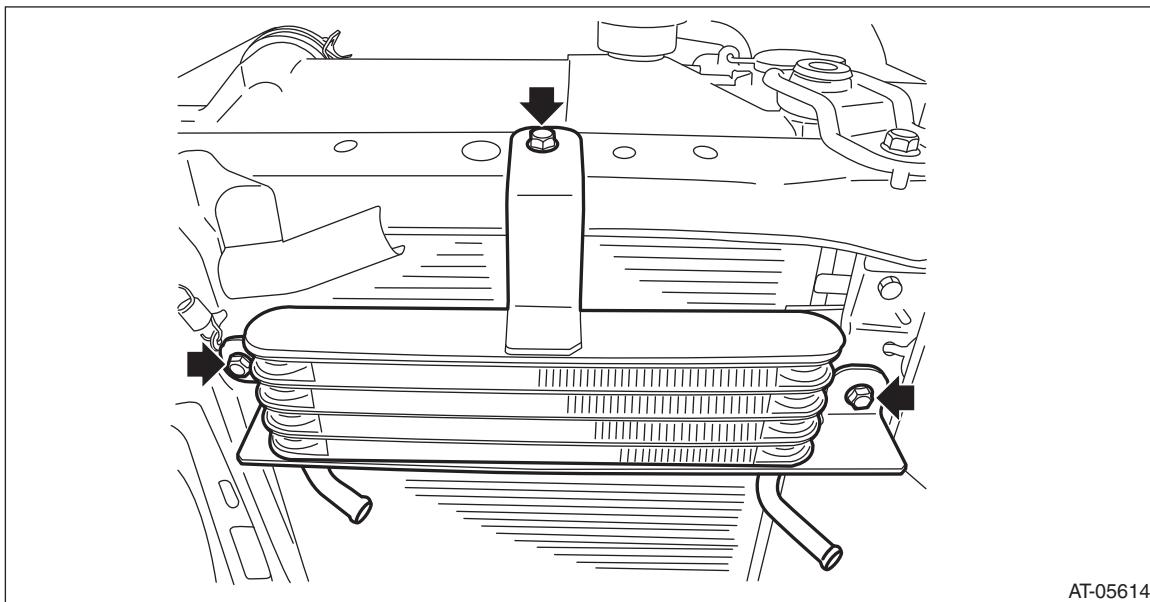

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Use the new inlet hose and outlet hose.

C: INSPECTION

Check that the CVTF oil cooler has no deformation, cracks or other damages.