


33. Parking Pawl

A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to CVT-54, REMOVAL, Automatic Transmission Assembly.>
- 2) Shift the range select lever to "N" range.
- 3) Remove the extension case. <Ref. to CVT-140, REMOVAL, Extension Case.>
- 4) Remove the parking pawl shaft, return spring and parking pawl.

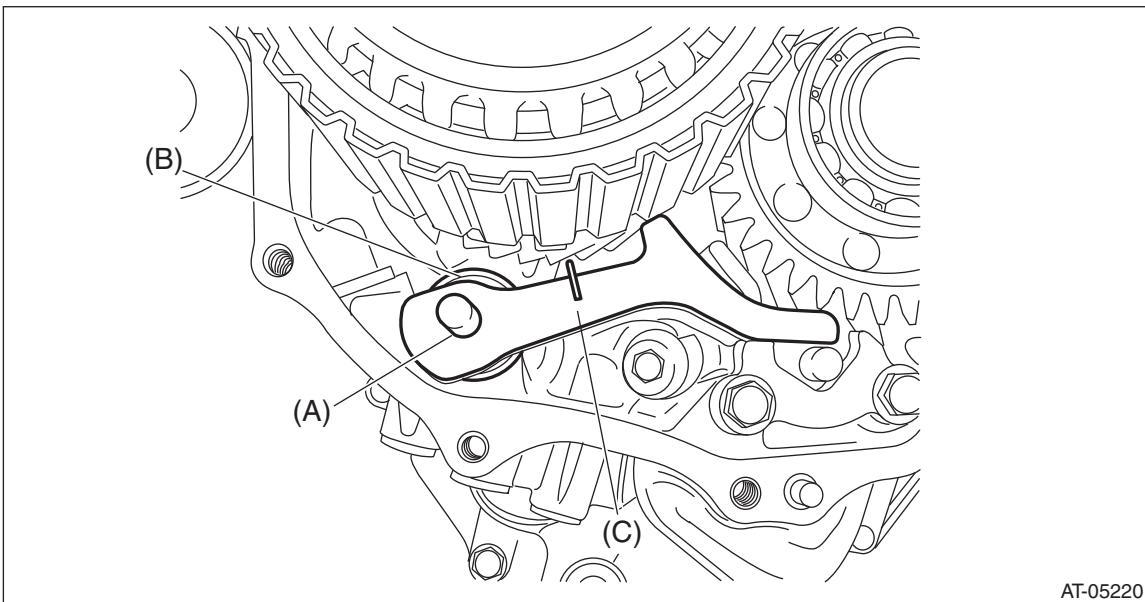


- (A) Parking pawl shaft
- (B) Return spring
- (C) Parking pawl

B: INSTALLATION

- 1) Set the range select lever to the "N" range.
- 2) Install the parking pawl shaft, return spring and parking pawl.

NOTE:

Make sure the return spring sticks out of parking pawl.

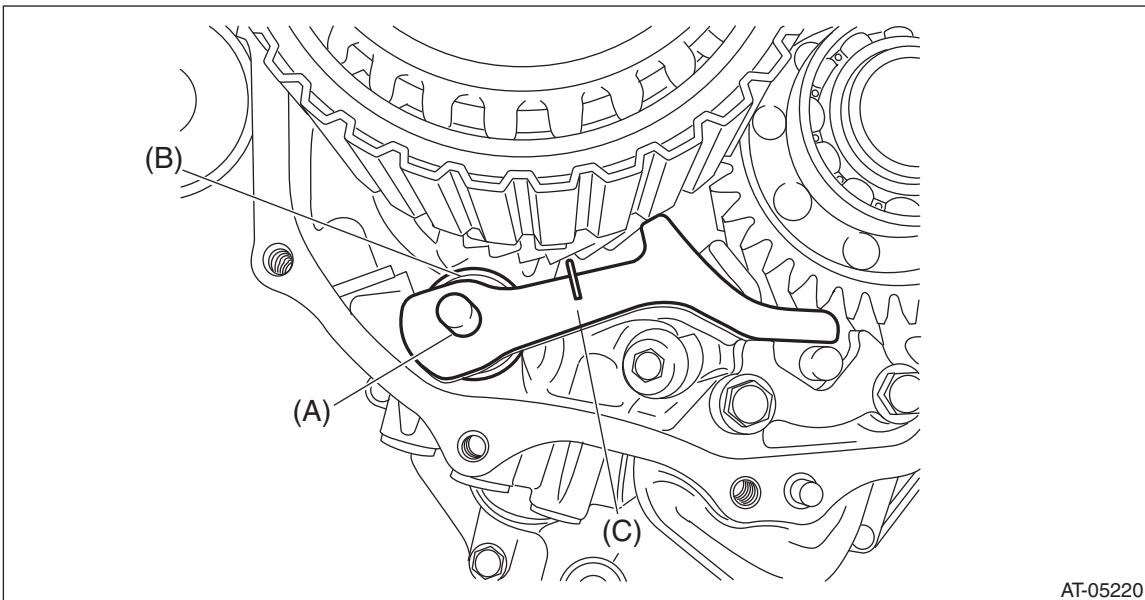

AT-05220

- (A) Parking pawl shaft
- (B) Return spring
- (C) Parking pawl

- 3) Install the extension case. <Ref. to CVT-140, INSTALLATION, Extension Case.>
- 4) Install the transmission assembly to the vehicle. <Ref. to CVT-69, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

- Check the parking pawl for breakage or damage.
- Check the return spring for fatigue.