

### 35. CVTF Filter

#### A: REMOVAL

NOTE:

- Although CVTF filter is a maintenance-free part, replace it if a large quantity of wear debris and metal particles are found in CVTF and CVTF filter.
- For removal of CVTF filter, refer to “Intermediate Case”. <Ref. to CVT-167, REMOVAL, Intermediate Case.>

#### B: INSTALLATION

NOTE:

For removal of CVTF filter, refer to “Intermediate Case”. <Ref. to CVT-168, INSTALLATION, Intermediate Case.>

#### C: INSPECTION

- Check if a large quantity of wear debris or metal particles are in CVTF and CVTF filter.
- Check for broken part or damaged O-ring.