

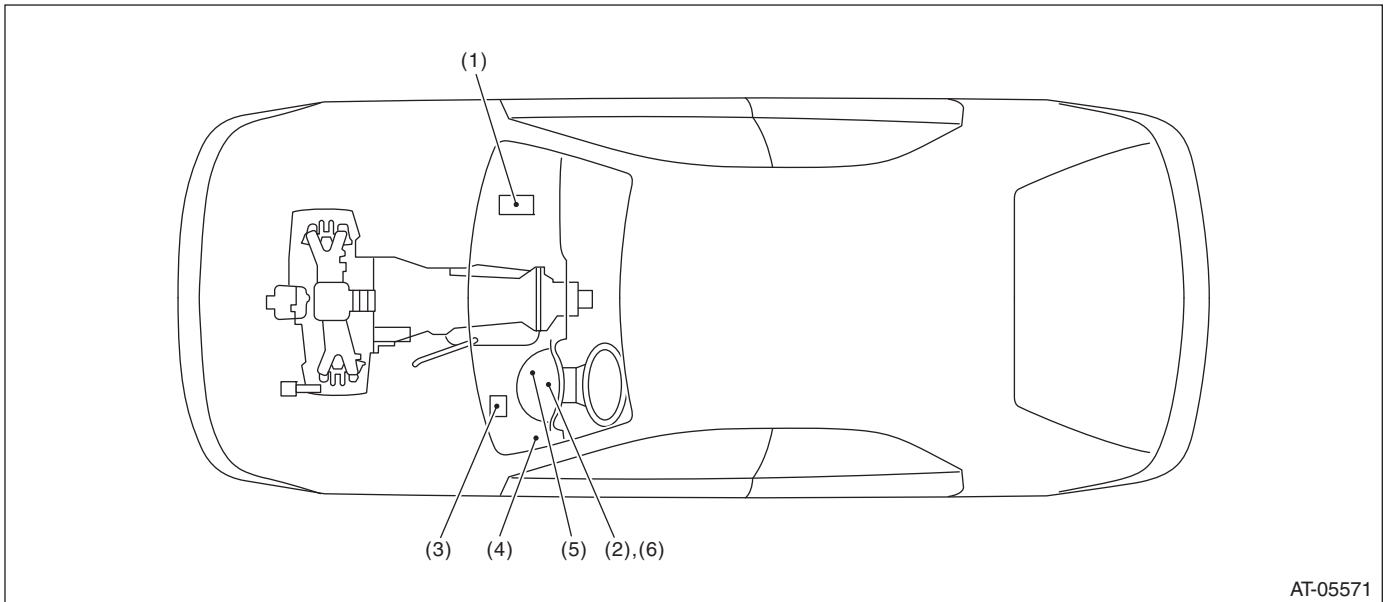
Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

1. CONTROL MODULE



(1) Engine control module (ECM)

(3) Transmission control module (TCM)

(5) Body integrated unit

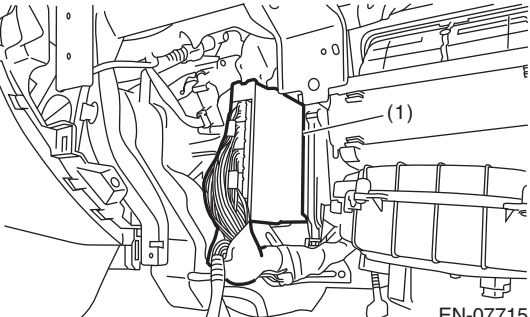
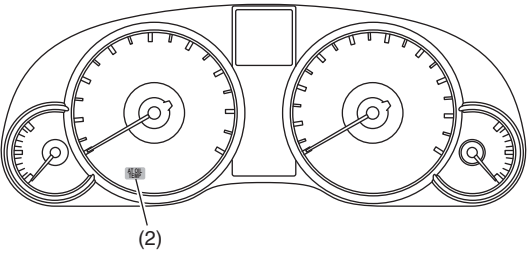
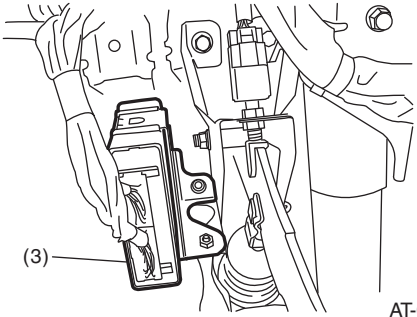
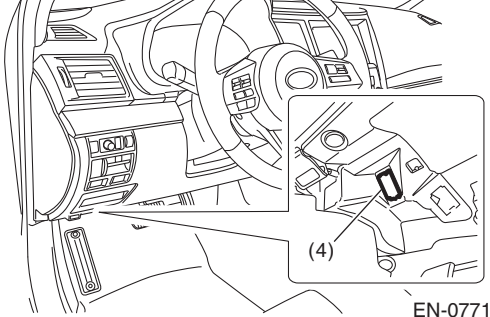
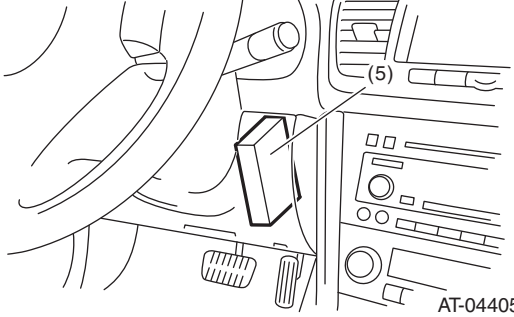
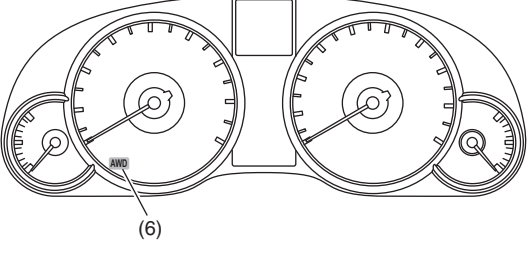
(2) AT OIL TEMP light

(4) Data link connector

(6) AWD light

Electrical Component Location


CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

 (1) EN-07715	 (2) AT-05106
 (3) AT-05684	 (4) EN-07717
 (5) AT-04405	 (6) AT-05395

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

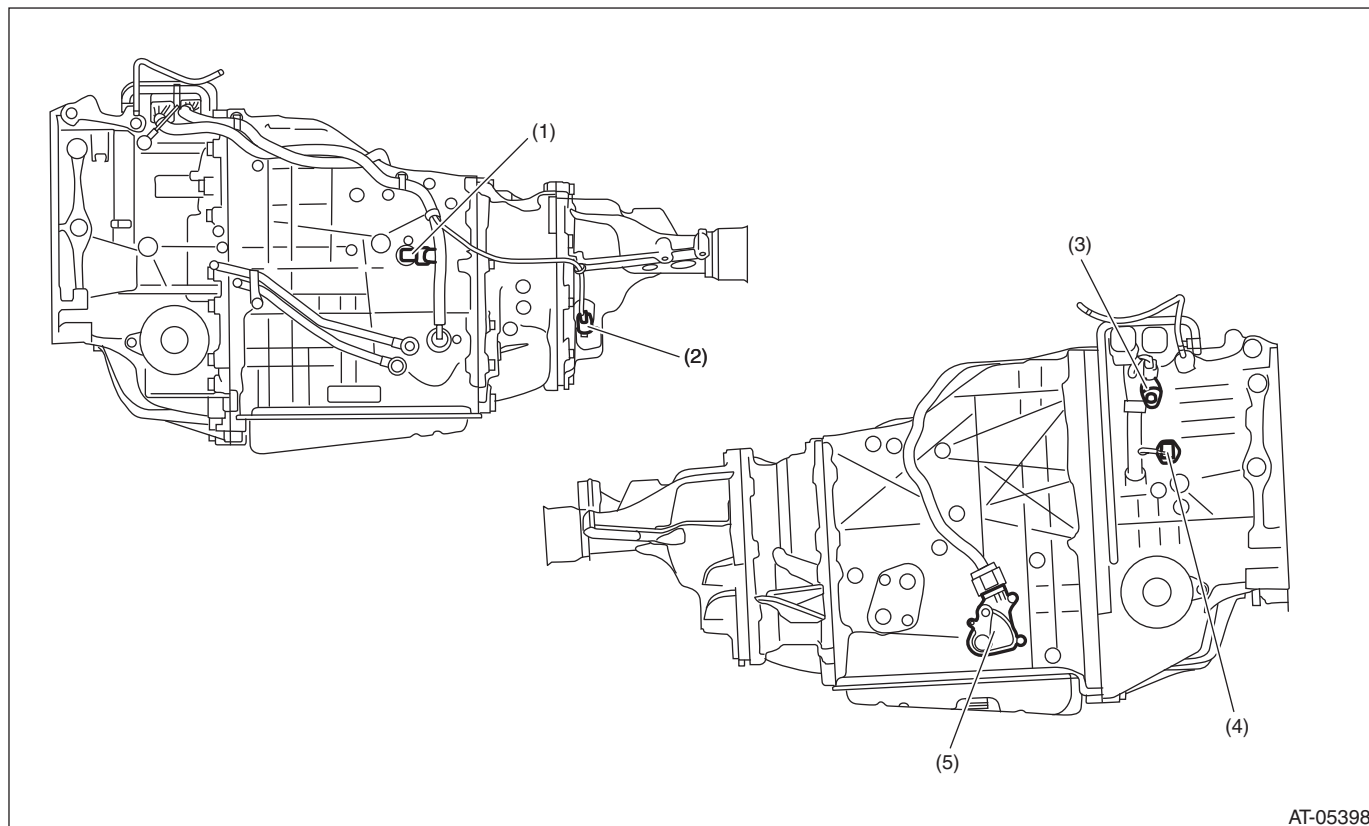2. SENSOR



AT-05398

(1) Secondary speed sensor

(2) Front wheel speed sensor

(3) Primary speed sensor

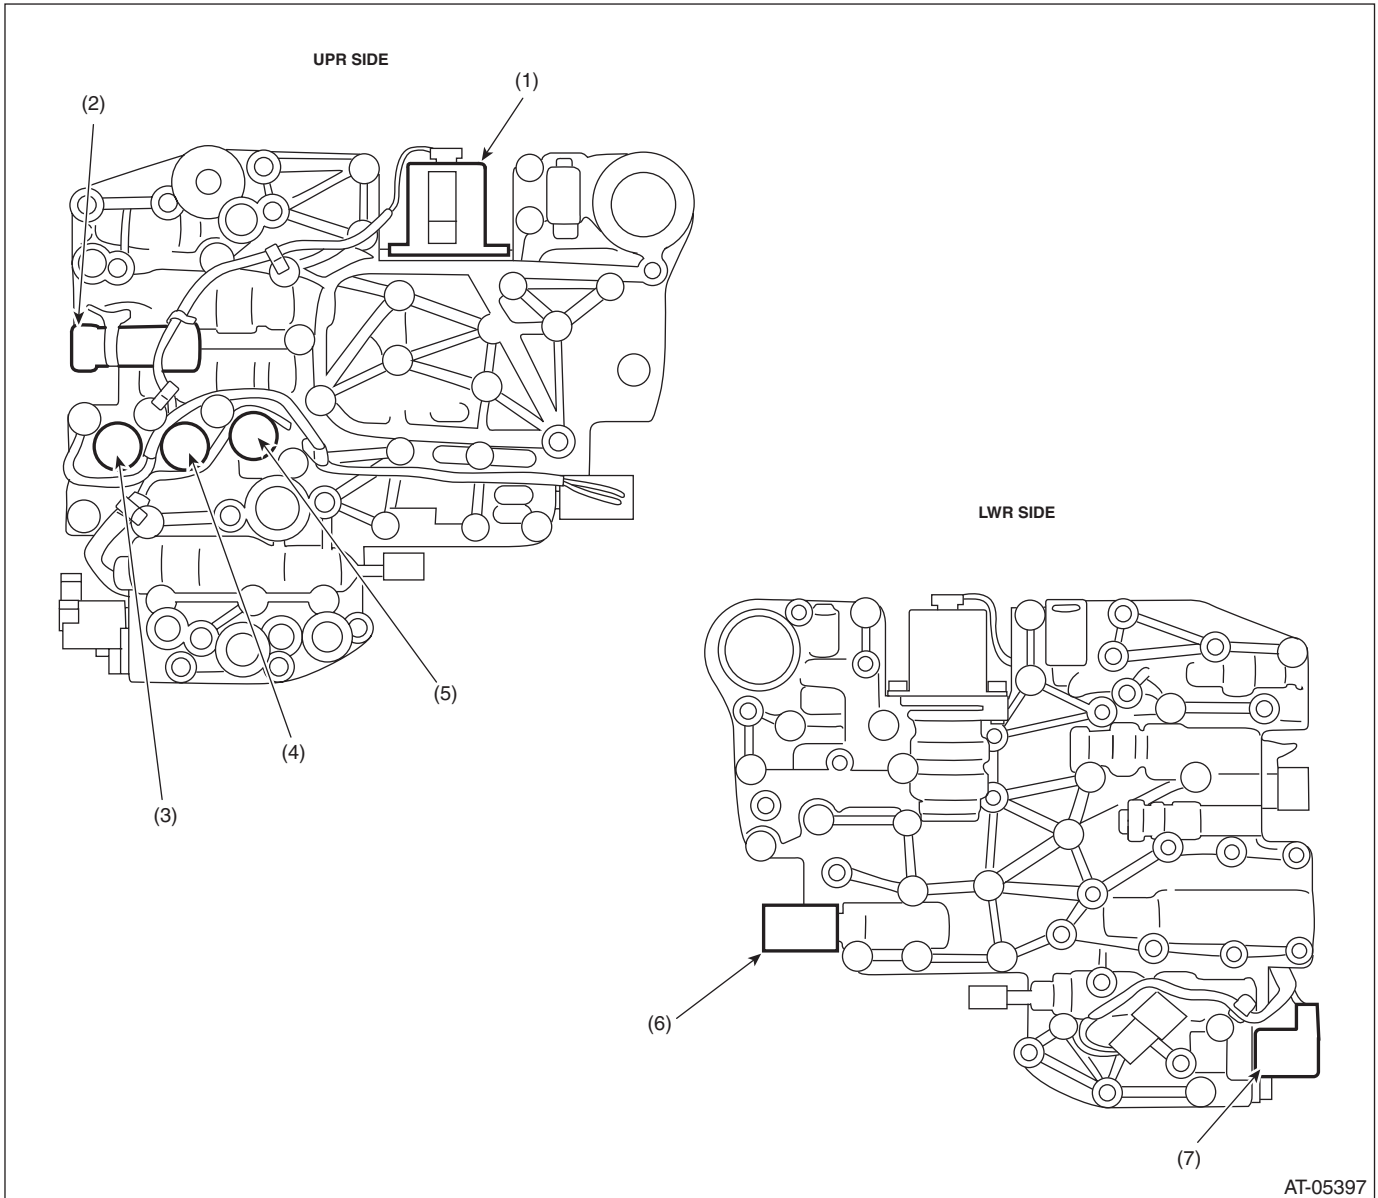
(4) Secondary pressure sensor

(5) Inhibitor switch

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

3. SOLENOID



- (1) Secondary solenoid
- (2) AWD solenoid
- (3) Lock-up duty solenoid

- (4) Primary DOWN solenoid
- (5) Primary UP solenoid

- (6) F&R solenoid
- (7) Lock-up ON/OFF solenoid