

20. Air Breather Hose


A: REMOVAL

- 1) Remove the collector cover.


NOTE:

Follow the steps below when removing the collector cover.

- (1) Pull up the two points at the rear (A).
- (2) Pull up the two points at the front (B) while moving them forward.

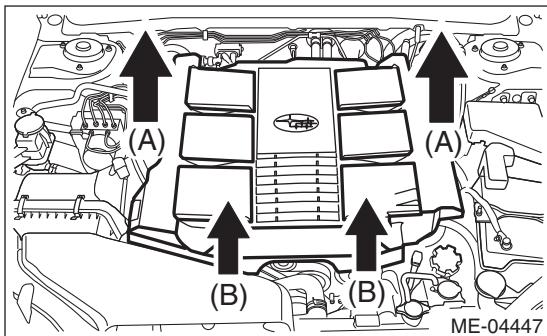


- 2) Remove the air intake boot. <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Boot.>
- 3) Disconnect the air breather hose.

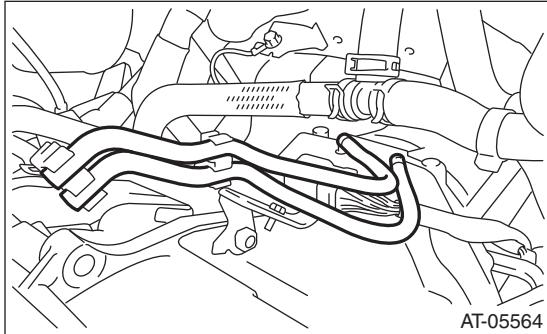

B: INSTALLATION

- 1) Connect the air breather hose.

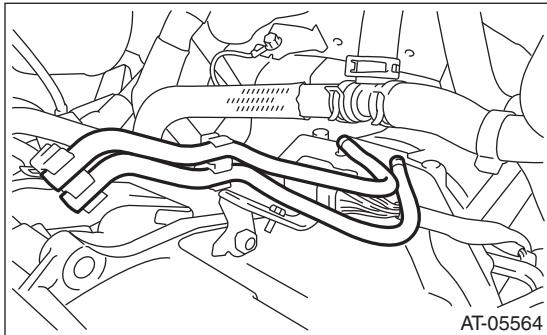

- 2) Install the air intake boot. <Ref. to IN(H6DO)-7, INSTALLATION, Air Intake Boot.>

- 3) Install the collector cover.

C: INSPECTION

Make sure the air breather hose is not cracked or clogged.