


## 2. Front Brake Pad

### A: REMOVAL

- 1) Lift up the vehicle, and remove the front wheels.
- 2) Remove the caliper bolt.

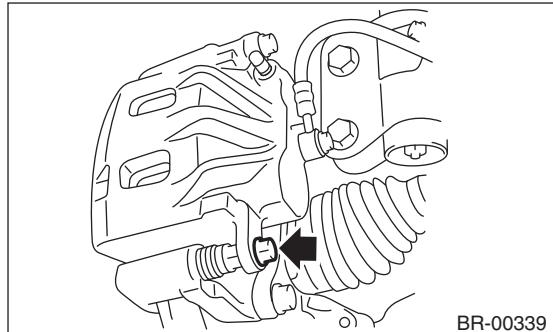


- 3) Raise the caliper body and support it.

**NOTE:**

Do not disconnect the brake hose from the caliper body.


- 4) Remove the pad.

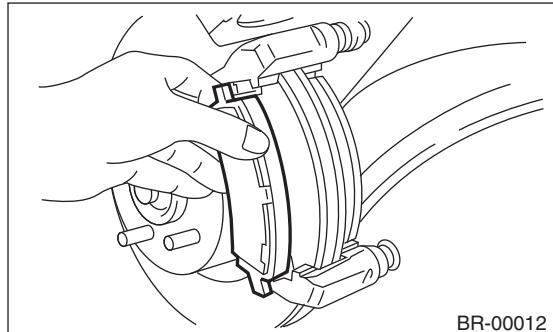


### B: INSTALLATION

#### 1. 16-INCH TYPE

- 1) Apply a thin coat of Molykote M7439 (Part No. K0770YA000) or grease contained in the pad kit to the pad clip.

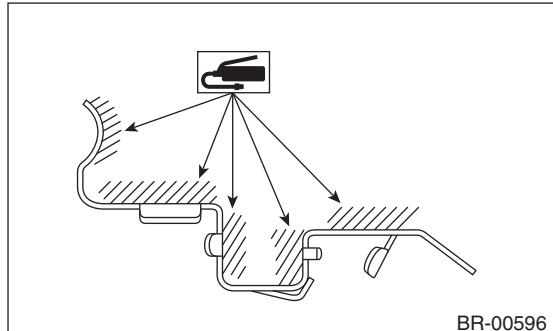

- 2) Apply a thin coat of Molykote AS880N (Part No. K0777YA010) or grease contained in the pad kit to both surfaces of the pad and inner shim.

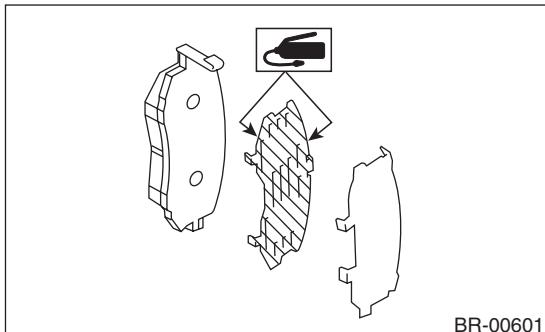


- 3) Install the pad to support.
- 4) Install the caliper body to the support.

**Tightening torque:**


**27 N·m (2.8 kgf·m, 19.9 ft-lb)**

#### 2. 17-INCH TYPE

- 1) Apply a thin coat of Molykote M7439 (Part No. K0770YA000) or grease contained in the pad kit to the pad clip.

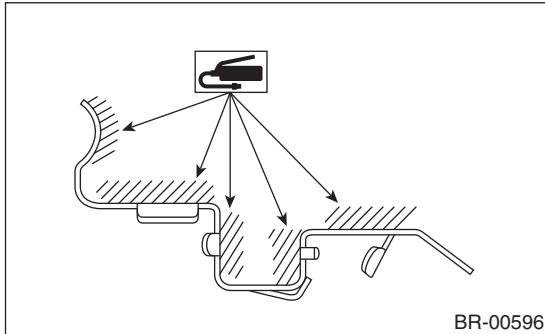

- 2) Apply a thin coat of Molykote AS880N (Part No. K0777YA010) or grease contained in the pad kit to both surfaces of the pad and inner shim.

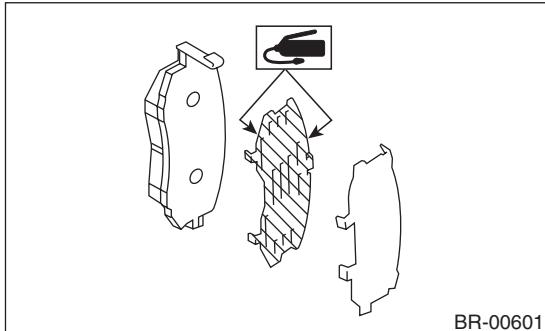


- 3) Install the pad to support.

# Front Brake Pad

## BRAKE

### NOTE:


Install the pad indicator in proper direction.

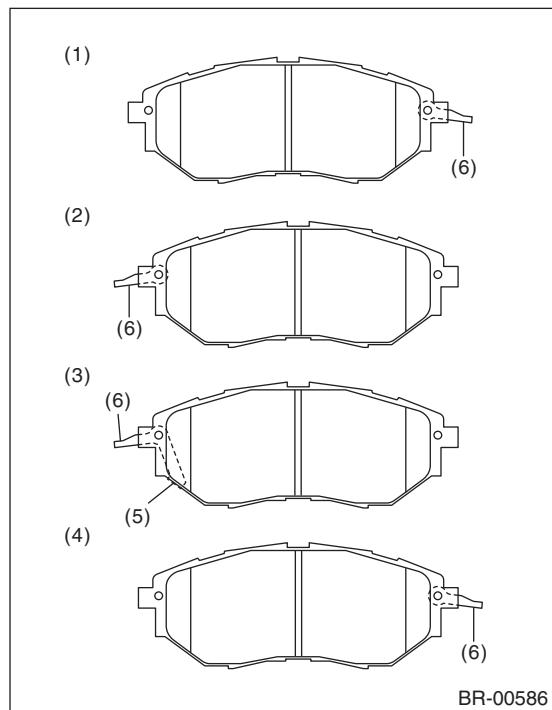

- (1) LH – IN
- (2) LH – OUT
- (3) RH – IN
- (4) RH – OUT
- (5) Pad indicator
- (6) Pad return spring

### CAUTION:

- Be sure to install so that the pad return spring faces the input side of the direction of brake rotor rotation, as shown in the figure.
- Correctly install the pad return spring to the supporting surface of the pad clip as shown in the figure.
- If the pad return spring is deformed or damaged, replace the brake pad.

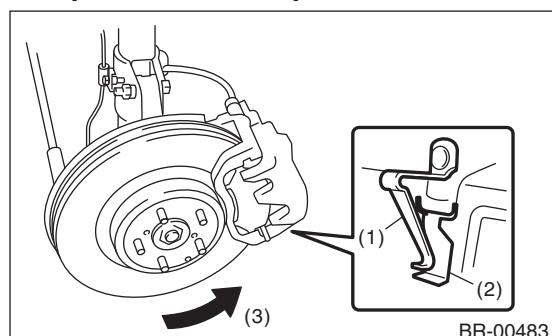

- (1) Pad return spring
- (2) Supporting surface of pad clip
- (3) Direction of brake rotor rotation

- 4) Install the caliper body to the support.


### Tightening torque:

27 N·m (2.8 kgf-m, 19.9 ft-lb)

## C: INSPECTION

### 1. 16-INCH TYPE

Check the pad thickness A.

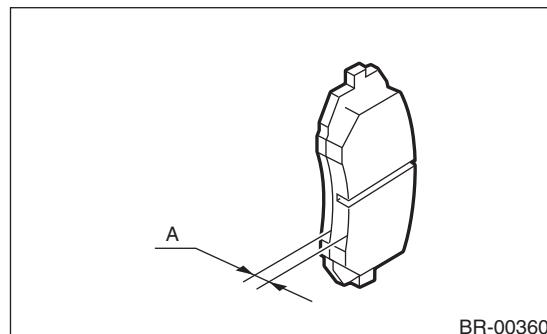


Pad thickness mm (in)	Standard	11 (0.43)
	Wear limit	1.5 (0.059)

### NOTE:

- Always replace the pads of both wheels and both sides as a set.
- Replace pad clips if they are twisted or worn.
- Replace the pad if there is oil or grease on it.

### 2. 17-INCH TYPE

Check the pad thickness A.

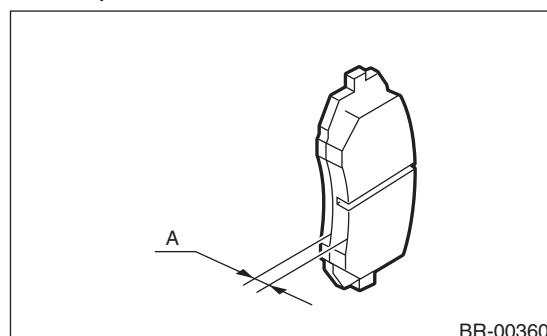

Pad thickness mm (in)	Standard	11 (0.43)
	Wear limit	1.5 (0.059)

### NOTE:

- Always replace the pads of both wheels and both sides as a set.
- Replace the pad if there is oil or grease on it.