


4. Parking Brake Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the screws and remove the parking brake switch.

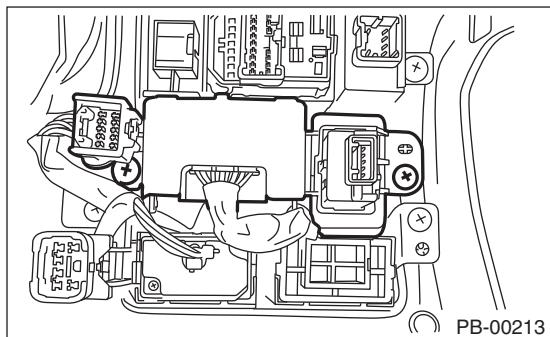

B: INSTALLATION


Install in the reverse order of removal.

C: INSPECTION

1. PARKING BRAKE CONTROL SWITCH

Measure the resistance between parking brake control switch terminals.

Switch position	Terminal No.	Specification
Press	2, 3 and 9	Less than 1 Ω
Neutral	2 and 9 1 and 3	Less than 1 Ω
Pull	1, 2 and 3	Less than 1 Ω

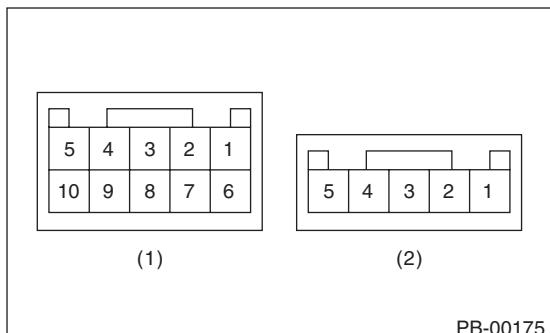

(1) Parking brake control switch
(2) Hill hold switch


NOTE:

If it is not within the specification, replace the switch.

2. HILL HOLD SWITCH

Measure the resistance between hill hold switch terminals.

Switch position	Terminal No.	Specification
ON	1 and 4	Less than 1 Ω
OFF	—	1 MΩ or more

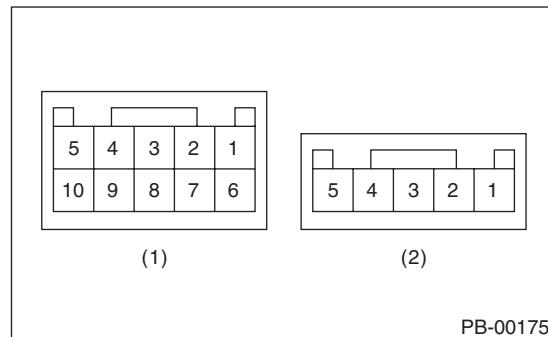

(1) Parking brake control switch
(2) Hill hold switch

NOTE:

If it is not within the specification, replace the switch.