

## 8. Reservoir Tank


### A: REMOVAL

- 1) Drain fluid from the reservoir tank.
- 2) Disconnect the hose from reservoir tank.

**CAUTION:**

**Plug the ends of the hose and pipe to prevent foreign matter from entering.**

- 3) Remove the reservoir tank from the body.

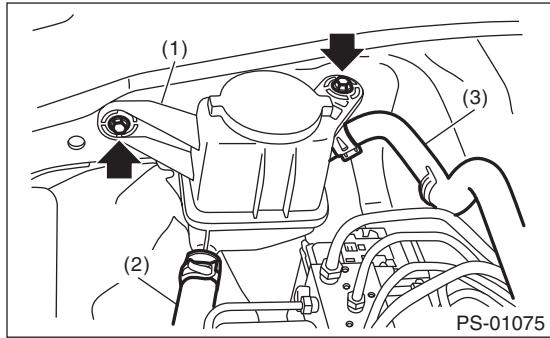

- (1) Reservoir tank
- (2) Suction hose
- (3) Return hose


### B: INSTALLATION

- 1) Install the reservoir tank to the body.

**Tightening torque:**

**13 N·m (1.3 kgf·m, 9.6 ft-lb)**

- 2) Connect the hose to the reservoir tank.

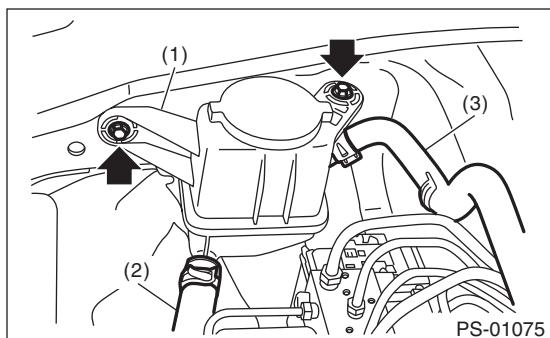

- (1) Reservoir tank
- (2) Suction hose
- (3) Return hose

- 3) Replenish power steering fluid up to the specified level. <Ref. to PS-47, INSPECTION, Power Steering Fluid.>

### C: INSPECTION

Check the reservoir tank for cracks, breakage or damage. If a failure is found, replace the reservoir tank.