

## 6. Read Diagnostic Trouble Code (DTC)

### A: OPERATION

For the operation procedure, refer to the “PC application help for Subaru Select Monitor”.

NOTE:

- For details concerning DTCs, refer to List of Diagnostic Trouble Code (DTC). <Ref. to TPM(diag)-23, List of Diagnostic Trouble Code (DTC).>
- All detected DTCs are displayed.
- If a particular DTC is not stored in memory properly at the occurrence of problem (due to a drop in tire inflation pressure monitoring control module power supply etc.), the DTC suffixed with a question mark “?” is displayed on Subaru Select Monitor display screen. This shows it may be an unreliable reading.
- When DTC is not displayed, check the indicator circuit and the communication circuit. <Ref. to TPM(diag)-17, Tire Pressure Warning Light / Trouble Indicator Light Illumination Pattern.>