

7. Rear Differential Side Oil Seal

A: INSPECTION


Make sure that there is no leakage from side oil seal. If there is any leakage, replace the oil seal.

B: REPLACEMENT

- 1) Remove the rear differential. <Ref. to DI-26, REMOVAL, Rear Differential (T-type).> <Ref. to DI-45, REMOVAL, Rear Differential (VA-type).>
- 2) Remove the rear differential side oil seal using a ST or screwdriver wrapped with vinyl tape to prevent the side retainer from scratching.
- 3) Using the ST, install the oil seal to the side retainer.

- T-type and VA2-type


ST 398437700 DRIFT

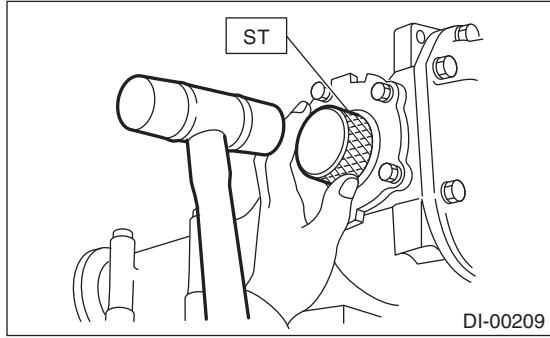

DI-00209

- VA1-type

ST 498447100 INSTALLER

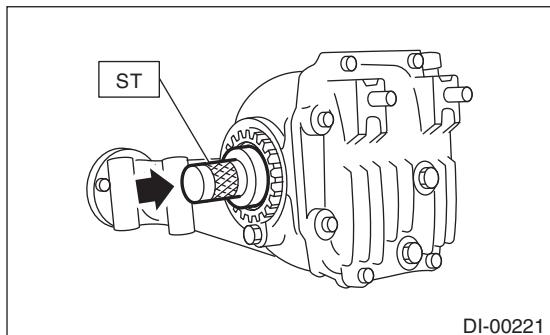

DI-00221

- 4) Install the rear differential. <Ref. to DI-28, INSTALLATION, Rear Differential (T-type).> <Ref. to DI-45, INSTALLATION, Rear Differential (VA-type).>