

3. Transfer Clutch

A: NOTE

For removal, installation and inspection, refer to
“5AT” or “CVT” section.

5AT model:

<Ref. to 5AT-68, Transfer Clutch.>

CVT model:

<Ref. to CVT-148, Transfer Clutch.>