


## 11. VDC OFF Switch

### A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the VDC OFF switch.

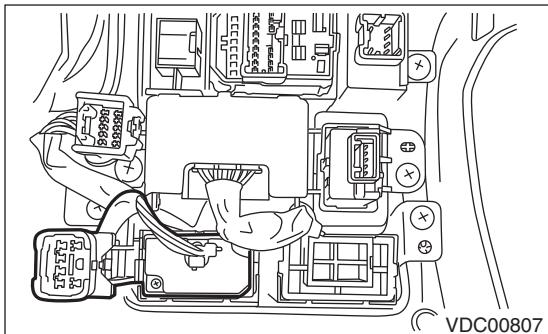


### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the resistance between the VDC OFF switch terminals.

Switch position	Terminal No.	Specification
OFF	1 — 3	1 MΩ or more
ON	1 — 3	Less than 1 Ω

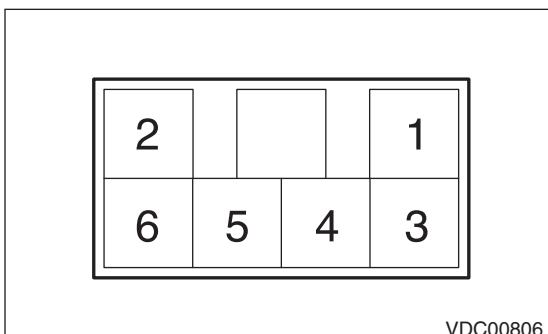

If it exceeds the standard, replace the VDC OFF switch.

## **VDC OFF Switch**

VEHICLE DYNAMICS CONTROL (VDC)

---