


Rear ABS Wheel Speed Sensor

VEHICLE DYNAMICS CONTROL (VDC)

8. Rear ABS Wheel Speed Sensor

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the clips, turn over the mud guard, and disconnect the rear ABS wheel speed sensor connector.

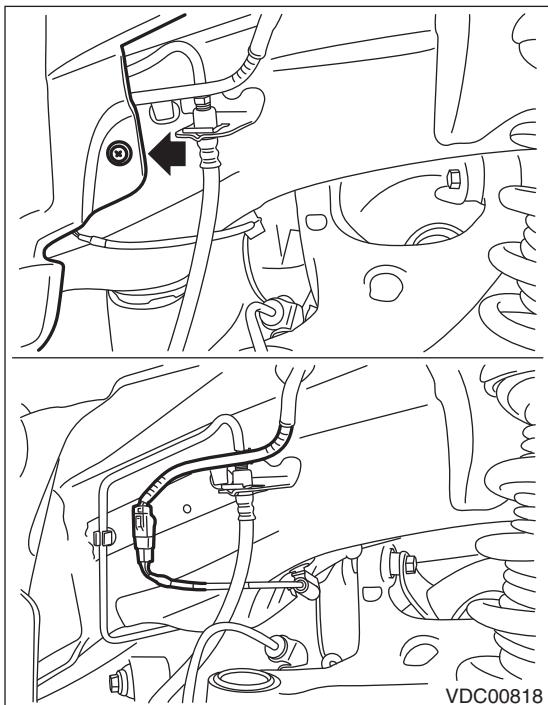

- 3) Remove the rear ABS wheel speed sensor from the rear housing.


CAUTION:

- Be careful not to damage the sensor.
- Do not apply excessive force to the sensor harness.

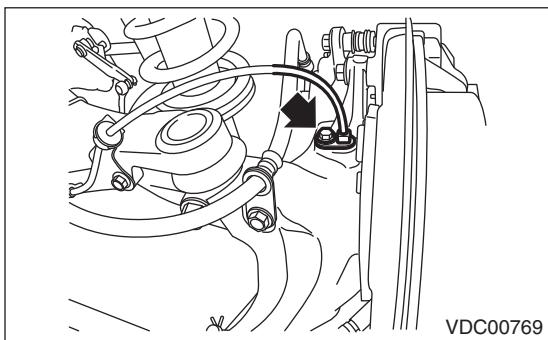

- 4) Remove the sensor harness clip.

- 5) Remove the sensor harness bracket from the upper arm.

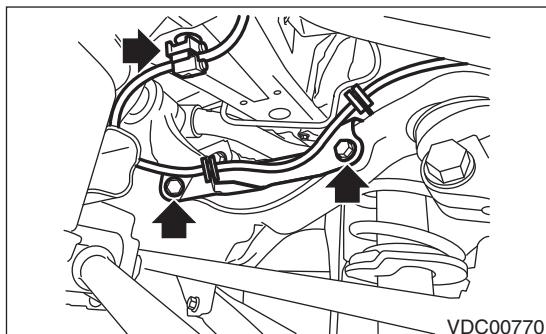

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to damage the sensor.

Tightening torque:

Sensor:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

Bracket:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

NOTE:

Check the identification (mark) on the harness to make sure there is no warpage. <Ref. to VDC-2, SPECIFICATION, General Description.>

C: INSPECTION

1. ABS WHEEL SPEED SENSOR

<Ref. to VDC-20, ABS WHEEL SPEED SENSOR, INSPECTION, Front ABS Wheel Speed Sensor.>