


# Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## 4. Electrical Component Location

### A: LOCATION

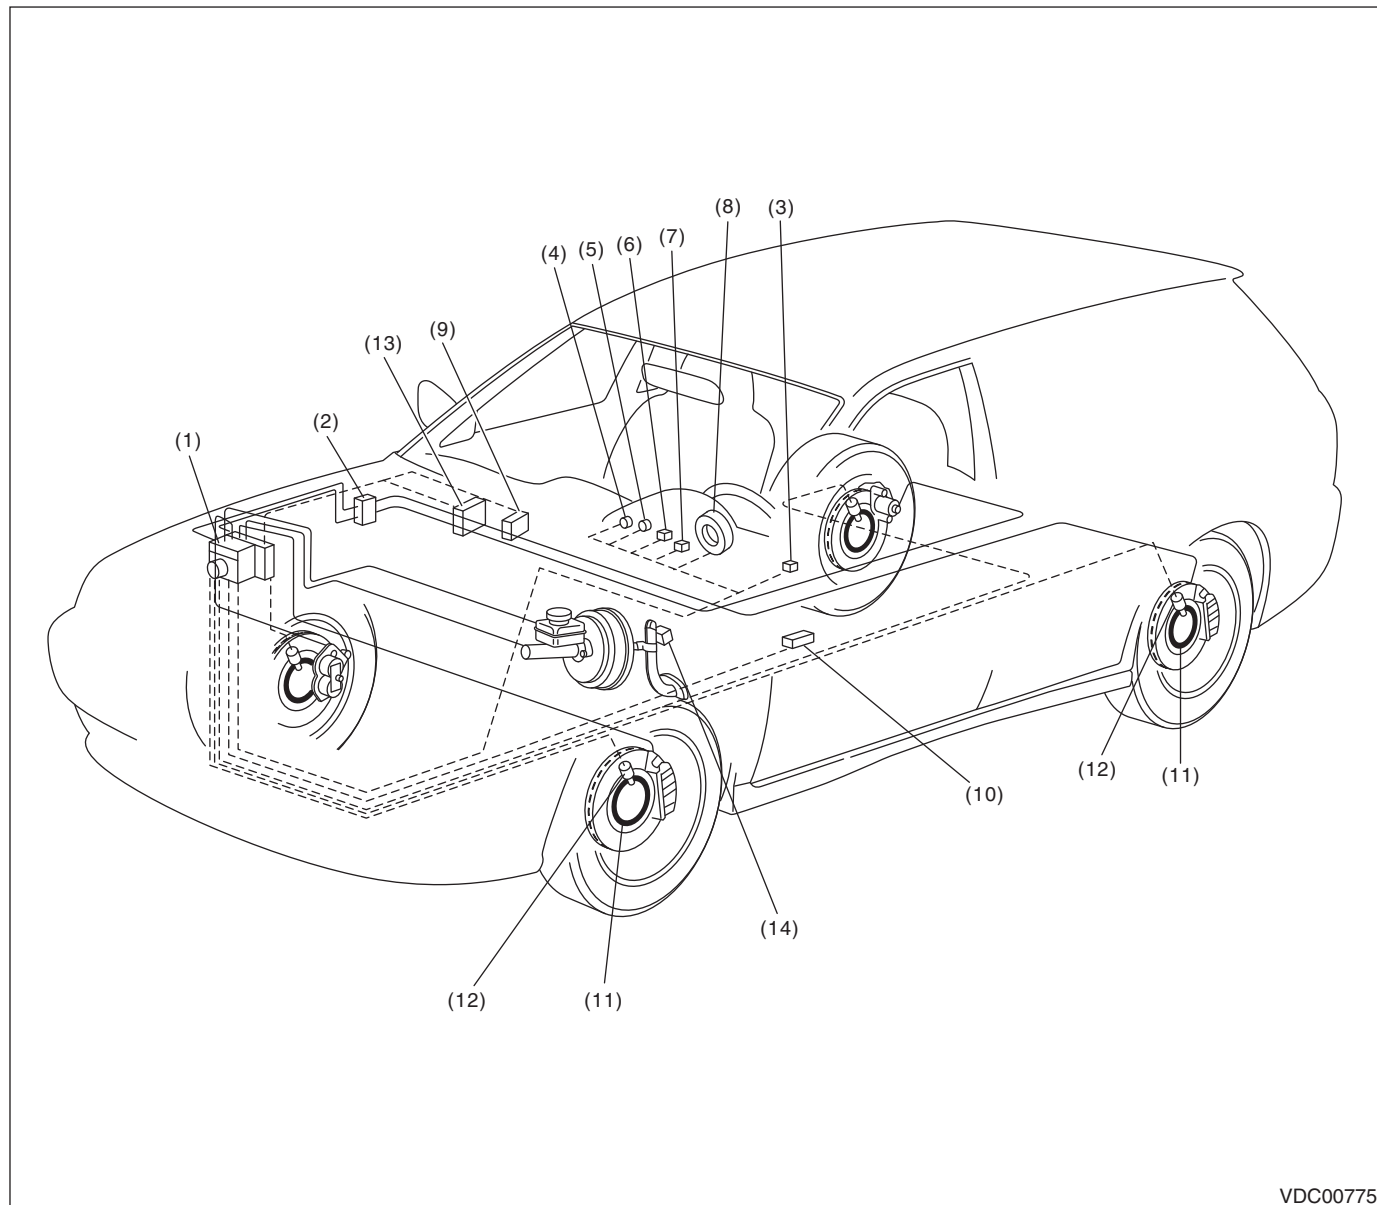

VDC00775

- |                                                             |                                             |                                  |
|-------------------------------------------------------------|---------------------------------------------|----------------------------------|
| (1) VDC control module & hydraulic control unit (VDCCM&H/U) | (6) VDC warning light & VDC indicator light | (11) Magnetic encoder            |
| (2) Connector                                               | (7) VDC OFF indicator light                 | (12) ABS wheel speed sensor      |
| (3) VDC OFF switch                                          | (8) Steering angle sensor                   | (13) Engine control module (ECM) |
| (4) ABS warning light                                       | (9) Transmission control module (TCM)       | (14) Stop light & brake switch   |
| (5) Brake warning light (EBD warning light)                 | (10) Data link connector                    |                                  |

# Electrical Component Location

## VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

