


### 6. Relay and Fuse

#### A: LOCATION

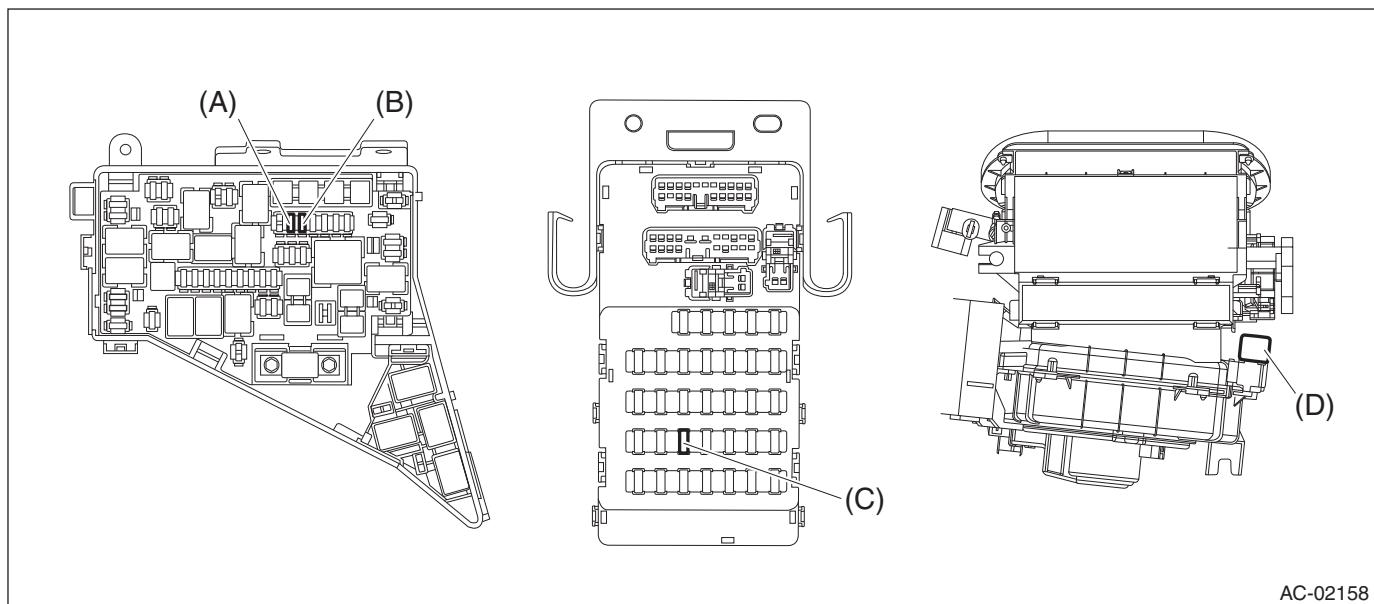

AC-02158

Main Fuse Box	Fuse 15 A	(A)
	Fuse 15 A	(B)
Relay & fuse box	Fuse 15 A	(C)
BLOWER MOTOR UNIT	Blower motor relay	(D)

#### B: INSPECTION

##### 1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

##### 2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 4	Always	1 MΩ or more	
1 — 4	Apply battery voltage between terminals 2 — 3.	Less than 1 Ω	

AC-02218

- 2) Replace the relay if it is found defective.