



9. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips, and remove the glove box under cover.

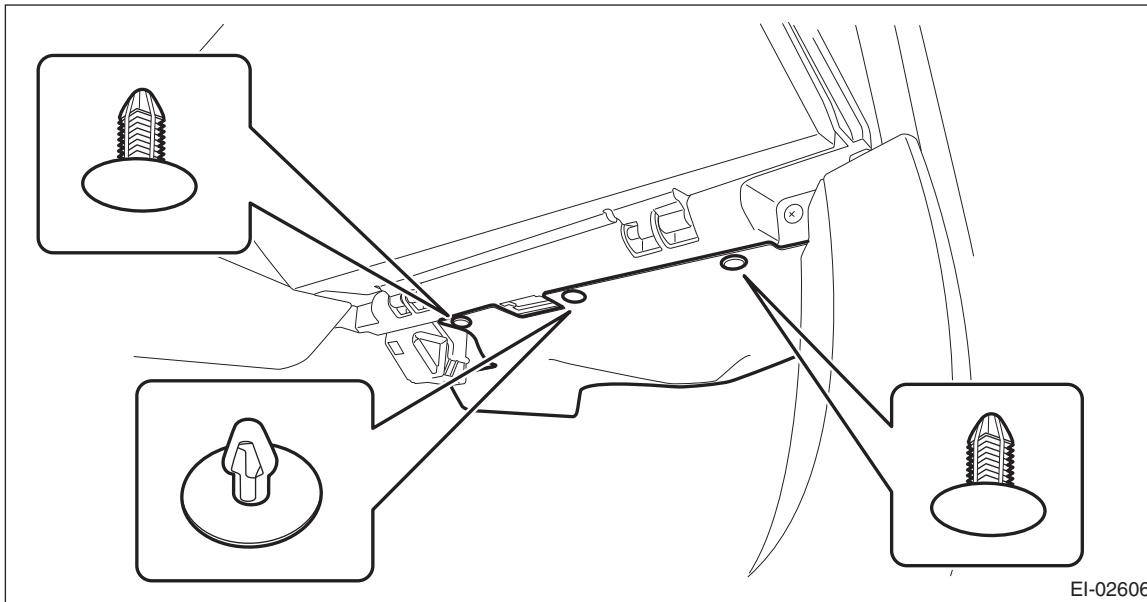

- 3) Remove the blower motor.
 - (1) Disconnect the connector.
 - (2) Remove the screw and remove the blower motor.

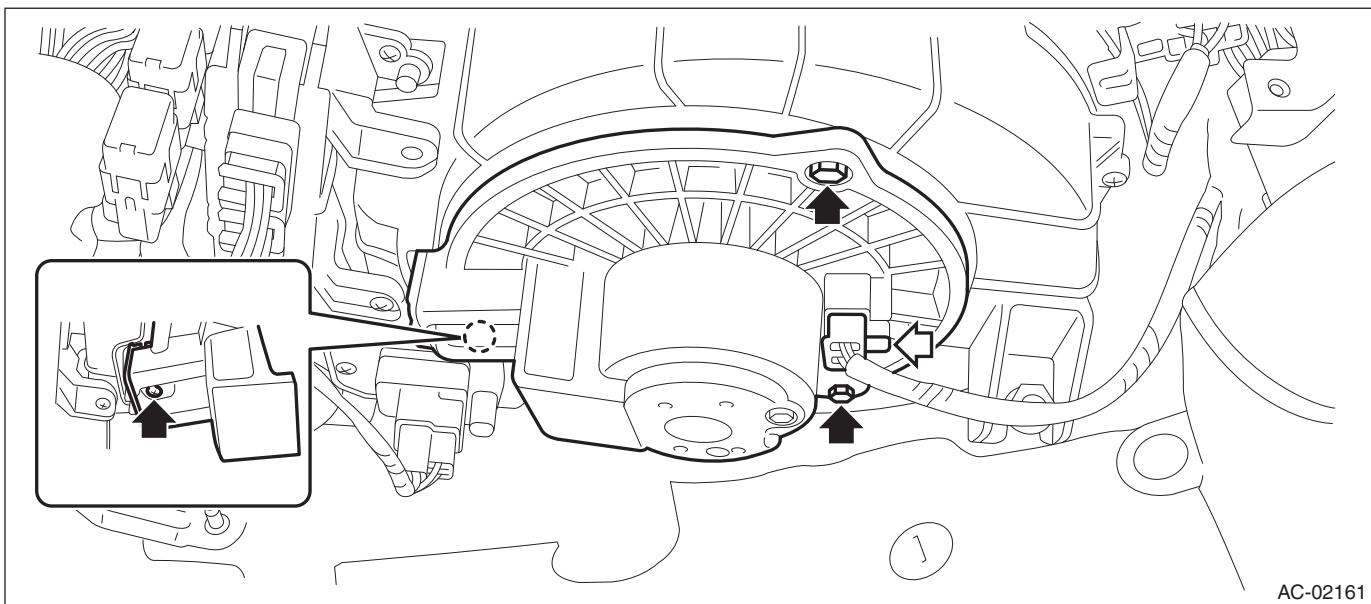

B: INSTALLATION


Install each part in the reverse order of removal.

Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

C: INSPECTION

- 1) Disconnect the blower motor connector.
- 2) Apply battery voltage between the blower motor terminals.
 - (1) Connect the positive (+) cable to the No. 2 terminal.
 - (2) Connect the negative (-) cable to the No. 1 terminal and check that the blower motor rotates normally.

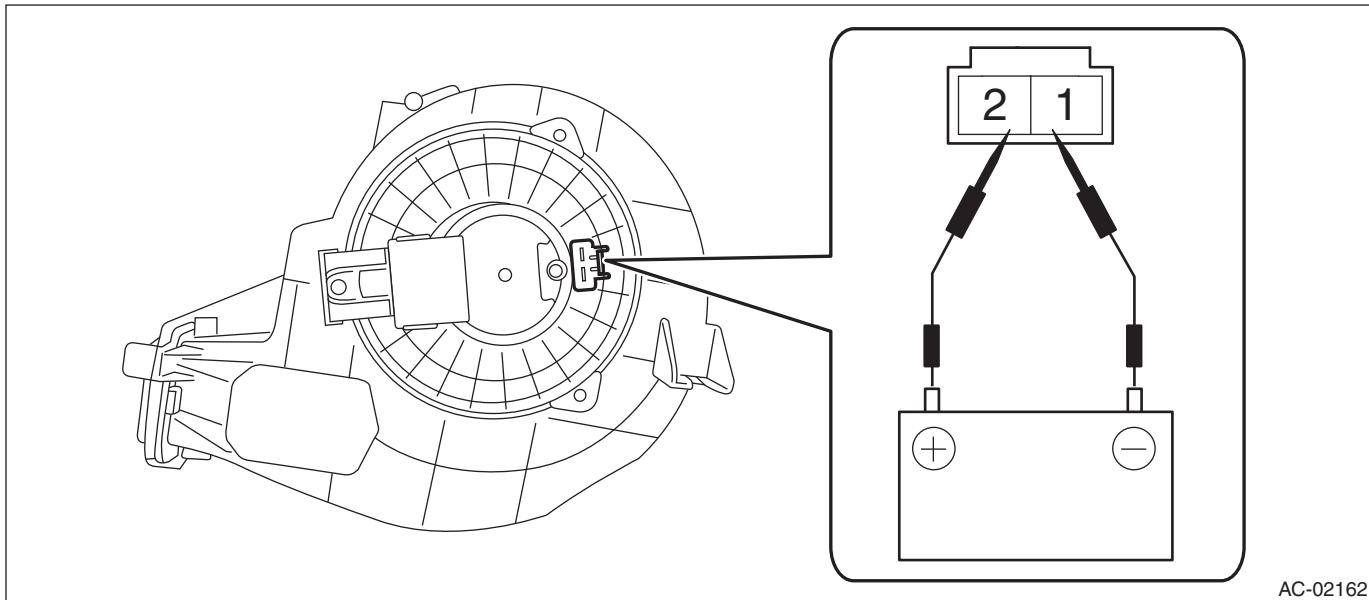

AC-02162

- 3) If the blower motor does not operate normally, replace the blower motor.