


## Blower Resistor (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


### 11. Blower Resistor (Manual A/C Model)

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips, and remove the glove box under cover.

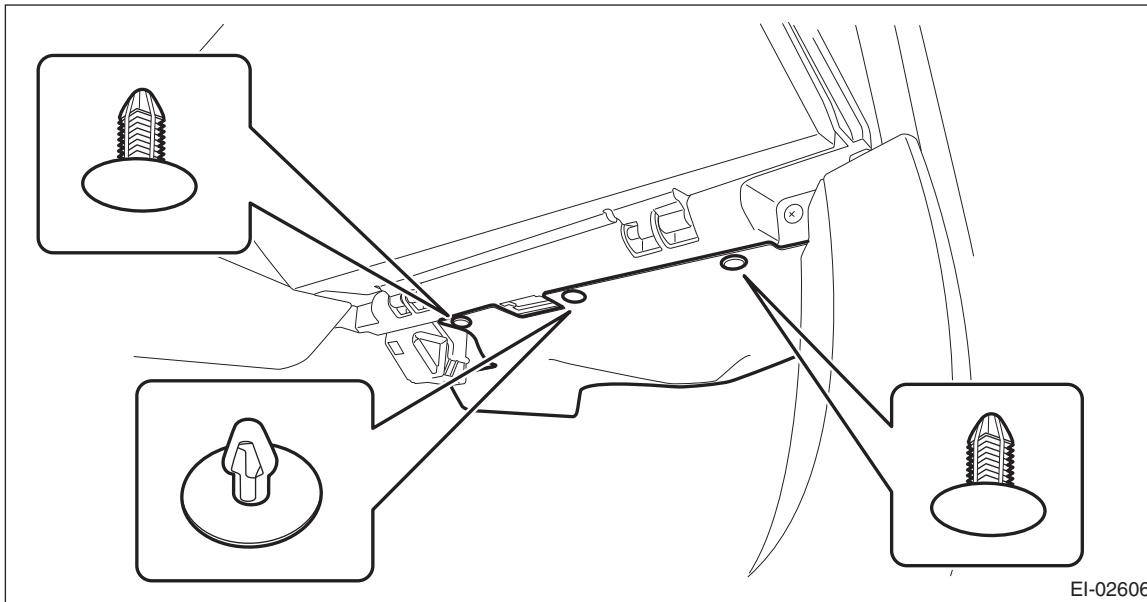

- 3) Remove the blower resistor.
  - (1) Disconnect the connector.
  - (2) Remove the screw and remove the blower resistor.

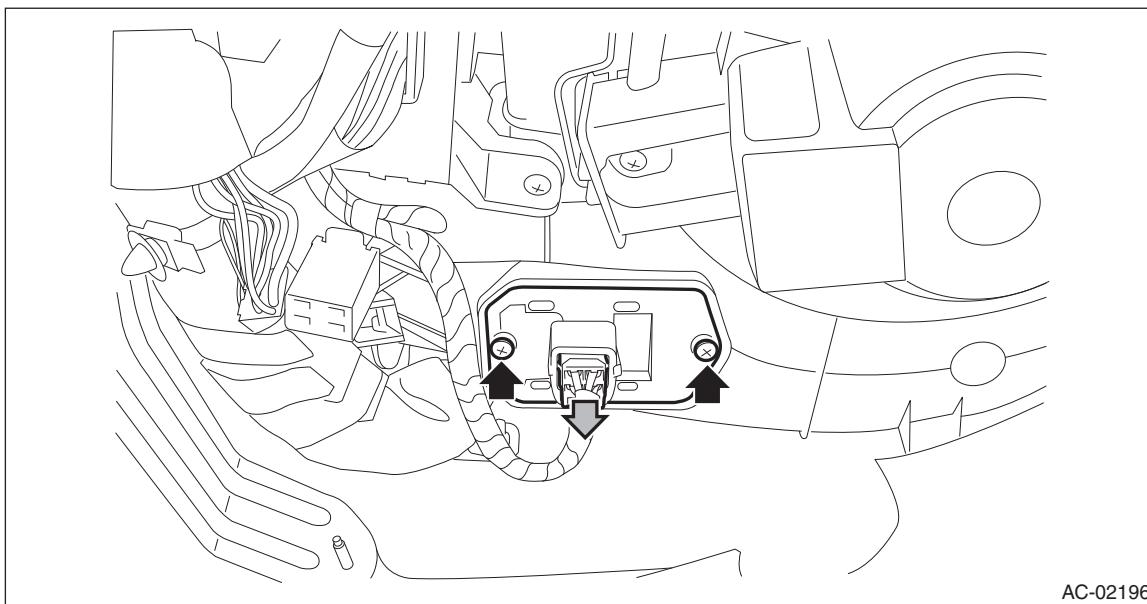


#### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Disconnect the blower resistor connector.
- 2) Check the resistance between blower resistor terminals.

**Preparation tool: Circuit tester**

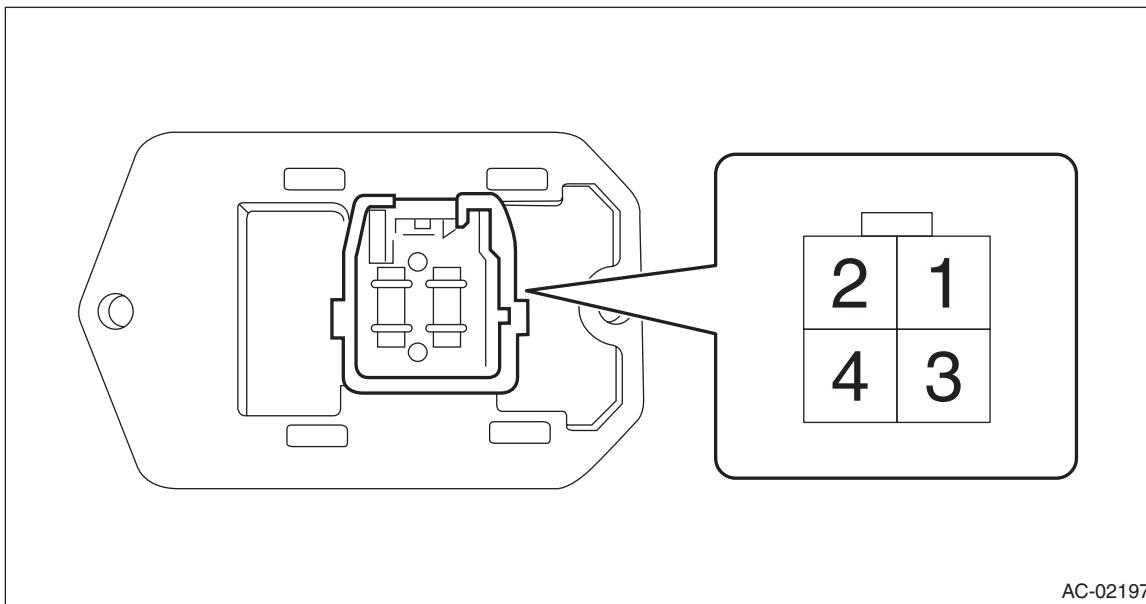

| Terminal No. | Standard              |
|--------------|-----------------------|
| 4 — 2        | Approx. $0.44 \Omega$ |
| 4 — 3        | Approx. $1.12 \Omega$ |
| 4 — 1        | Approx. $2.92 \Omega$ |

- 3) Replace the blower resistor if the inspection result is not within the standard value.