

13. Control Panel

A: REMOVAL


1. AUTO A/C MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center panel assembly.

CAUTION:

Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.

- (1) Attach the protective tape (a) to the meter visor.

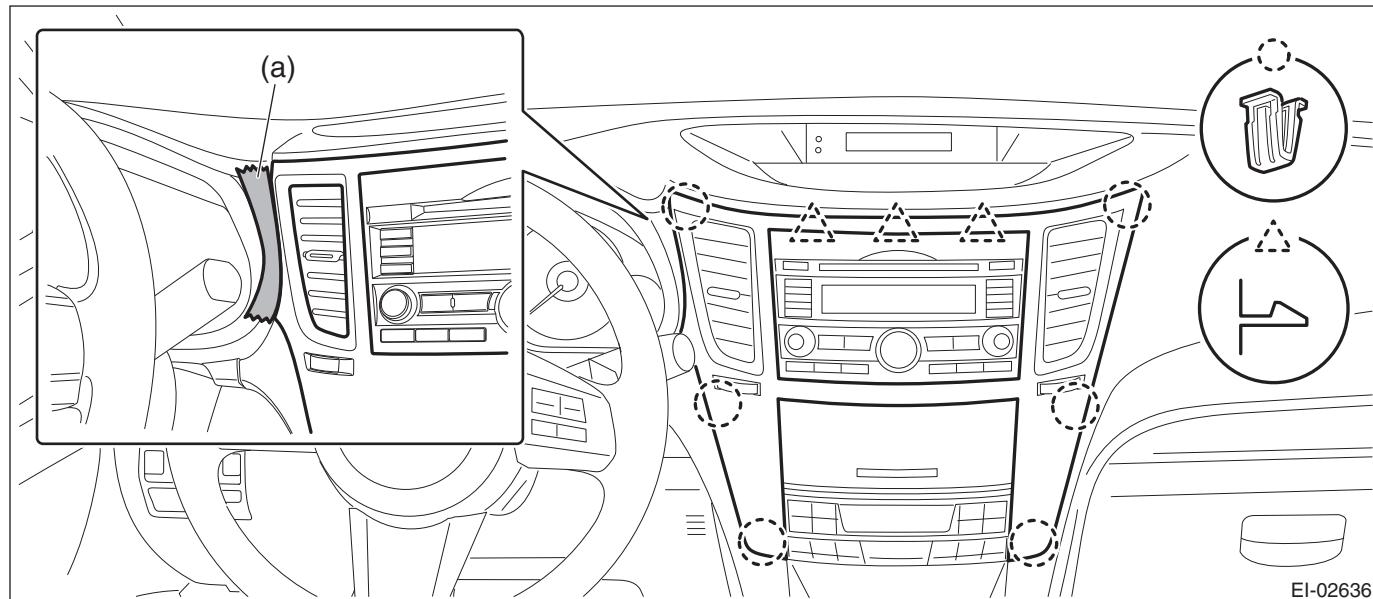


- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel. (A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel. (C), (D)

Control Panel


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(4) Release the clips at the bottom of the center panel and remove the center panel assembly.

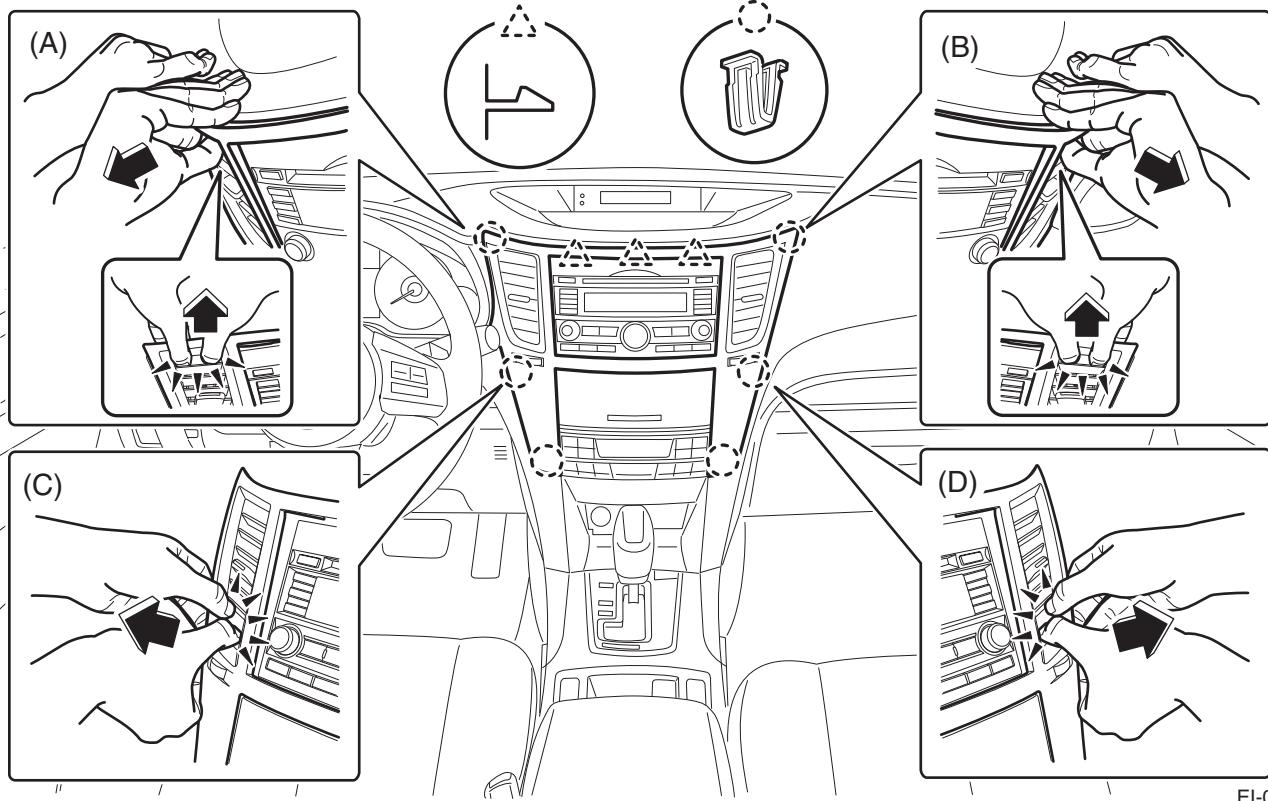

3) Remove the audio assembly.

- (1) Remove the left and right screws, and partially pull the audio out from center console.
- (2) Disconnect the connectors, and remove the audio assembly.

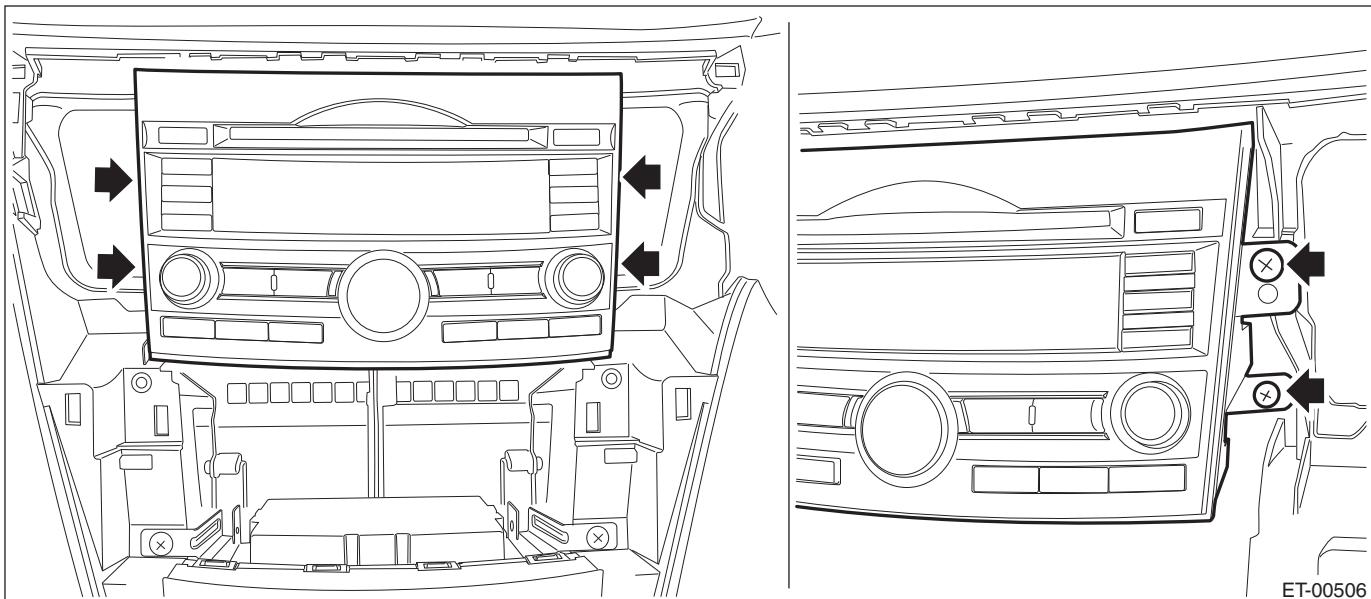


4) Remove the navigation assembly. (model with navigation)

- (1) Remove the left and right screws.

Control Panel


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Disconnect the connectors, and remove the navigation assembly.

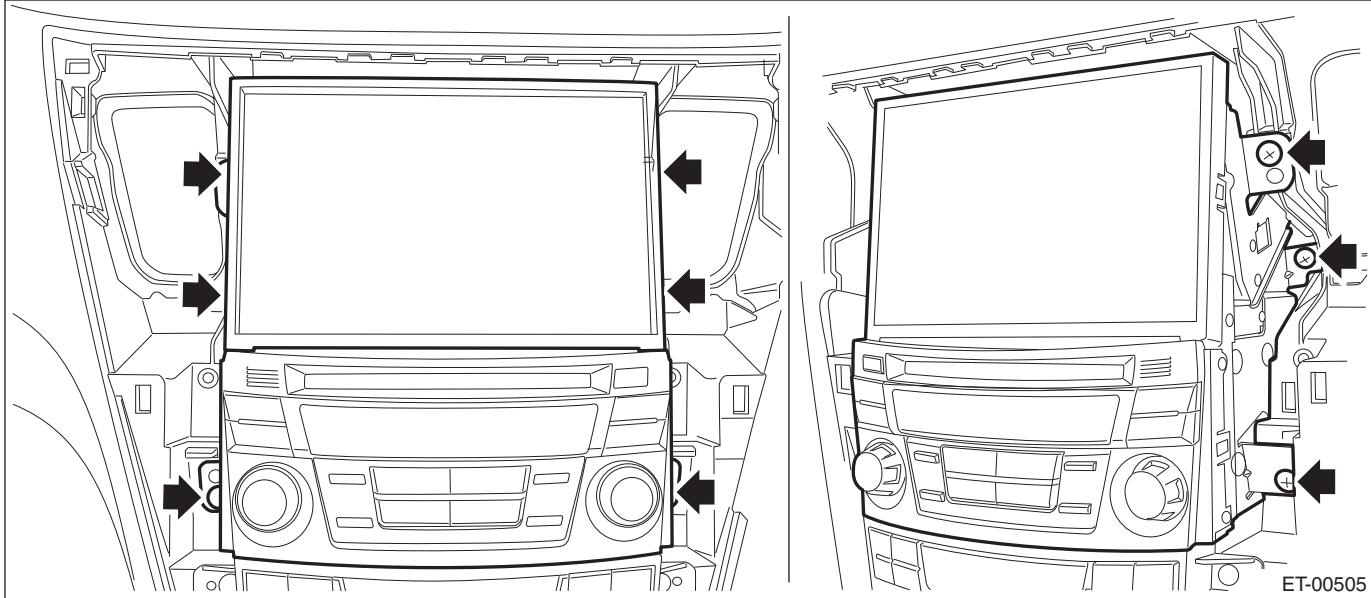

5) Remove the control panel.


(1) Remove the screws and release the clip.

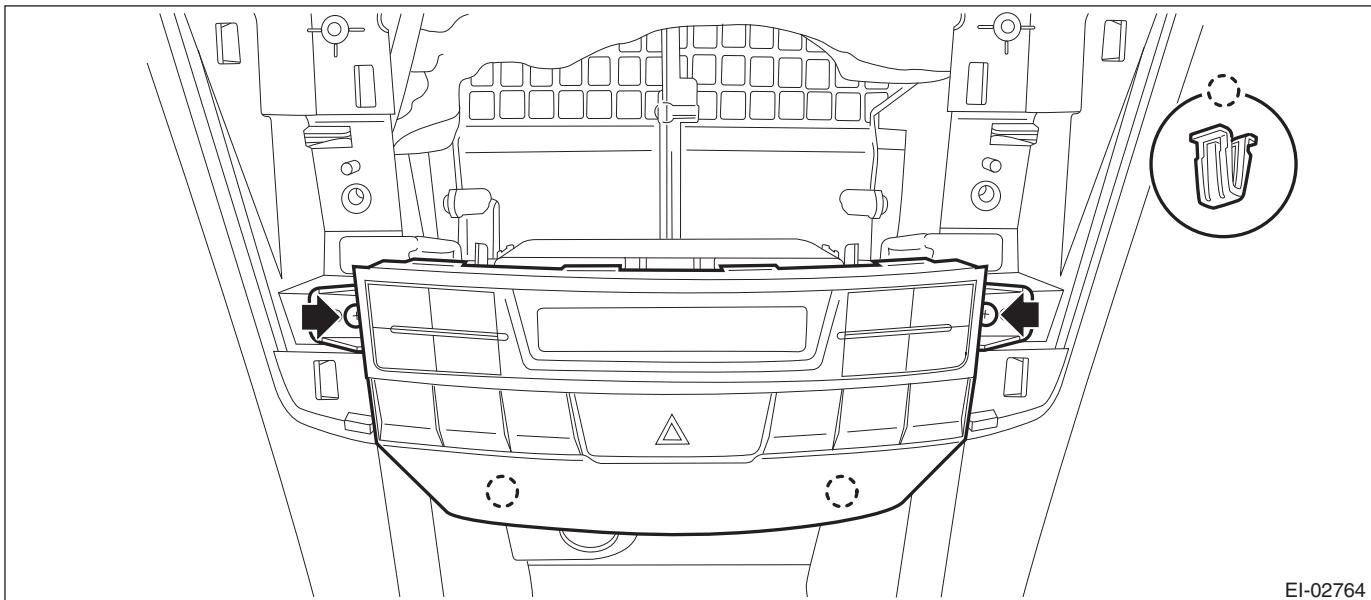

Control Panel

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Pull forward the control module and disconnect the connector.

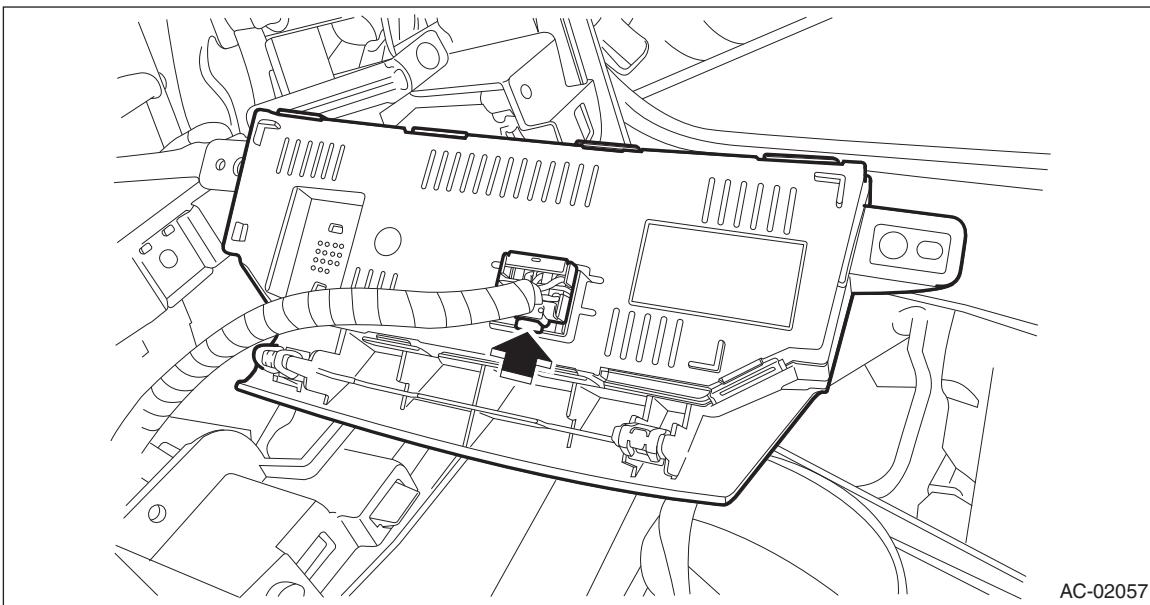


2. MANUAL A/C MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center panel assembly.

CAUTION:

Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.

(1) Attach the protective tape (a) to the meter visor.

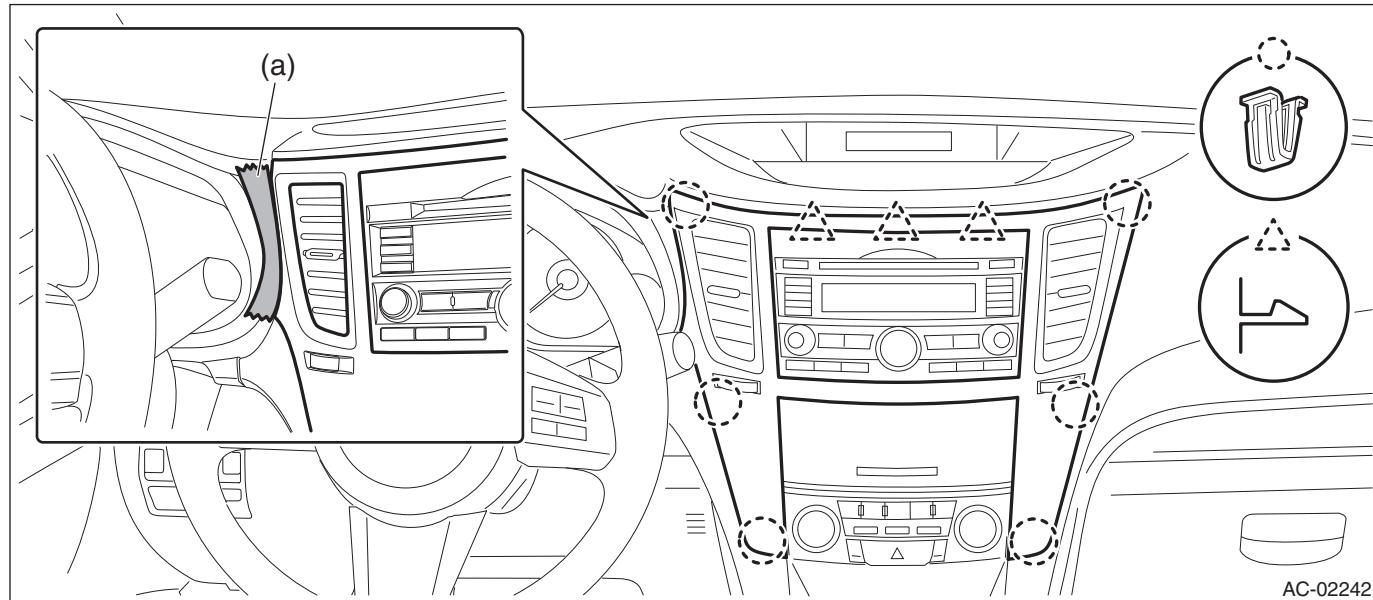


- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel.
(A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel.
(C), (D)

Control Panel


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(4) Release the clips at the bottom of the center panel and remove the center panel assembly.

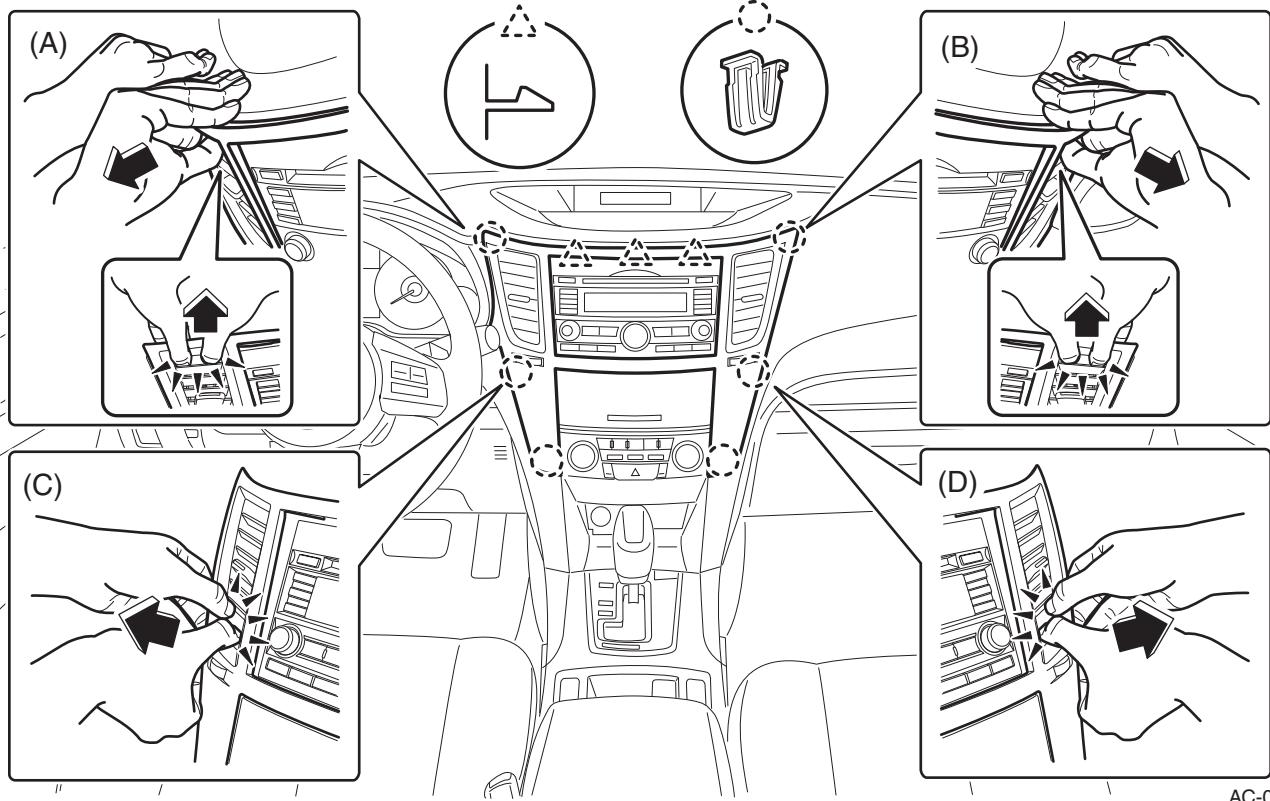

3) Remove the audio assembly.

- (1) Remove the left and right screws, and partially pull the audio out from center console.
- (2) Disconnect the connectors, and remove the audio assembly.

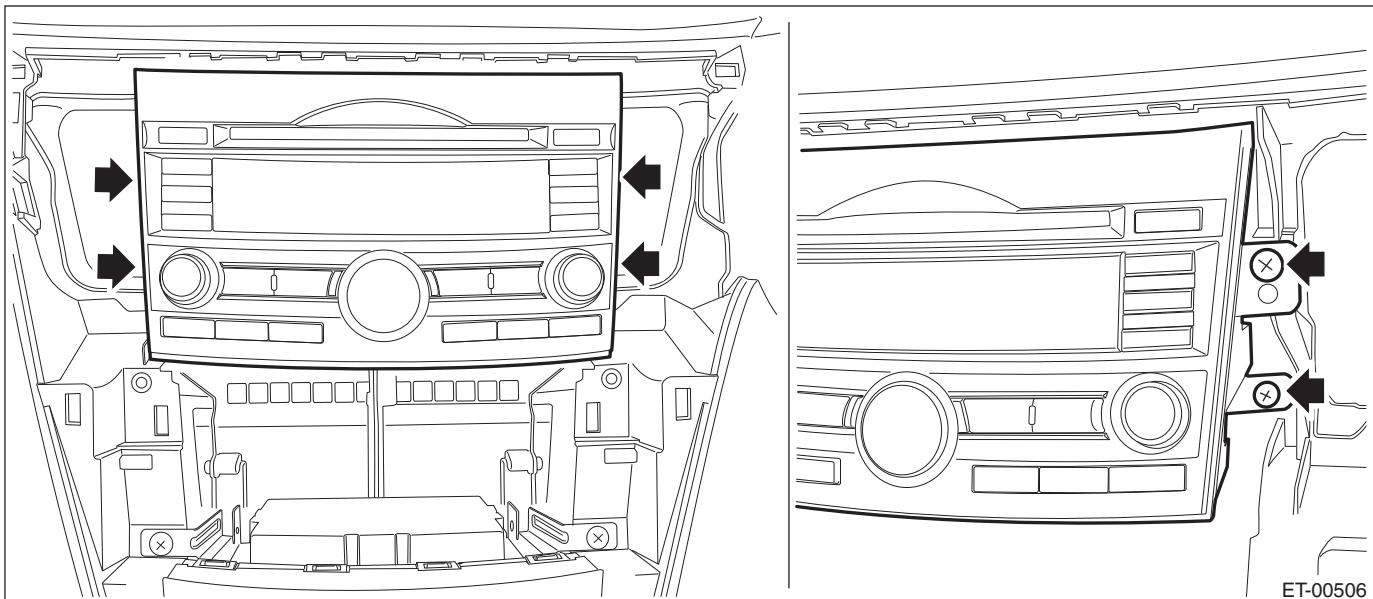


4) Remove the navigation assembly. (model with navigation)

- (1) Remove the left and right screws.

Control Panel


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Disconnect the connectors, and remove the navigation assembly.

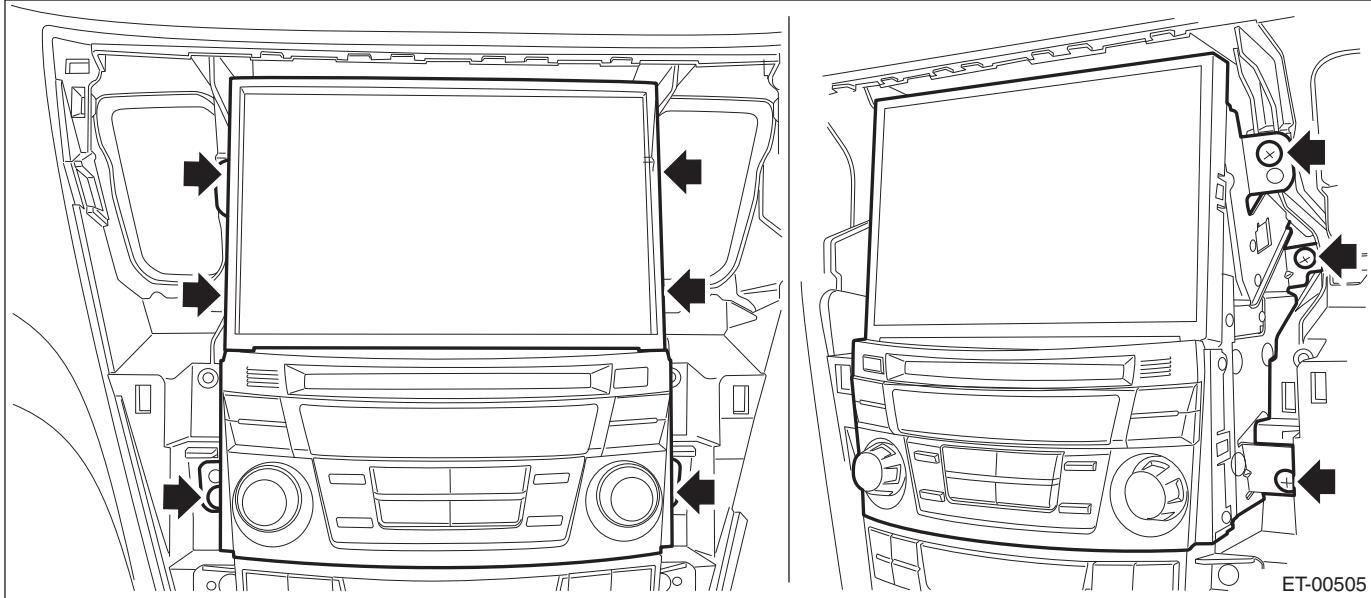

5) Remove the control panel.


(1) Remove the screws and release the clip.

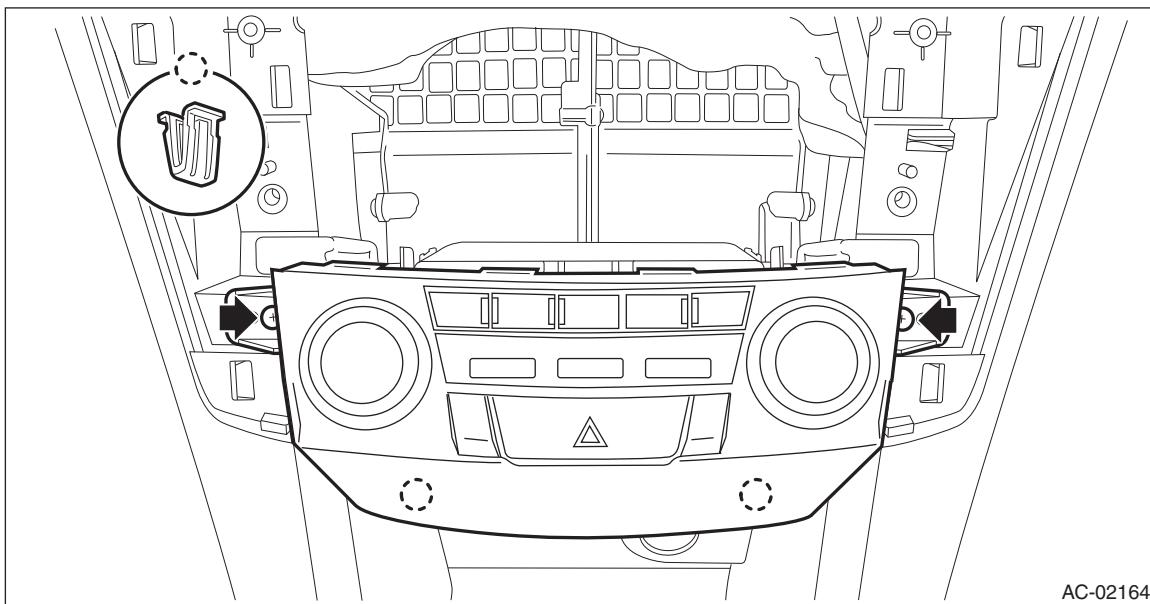

Control Panel

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Pull the control panel and disconnect the connector.

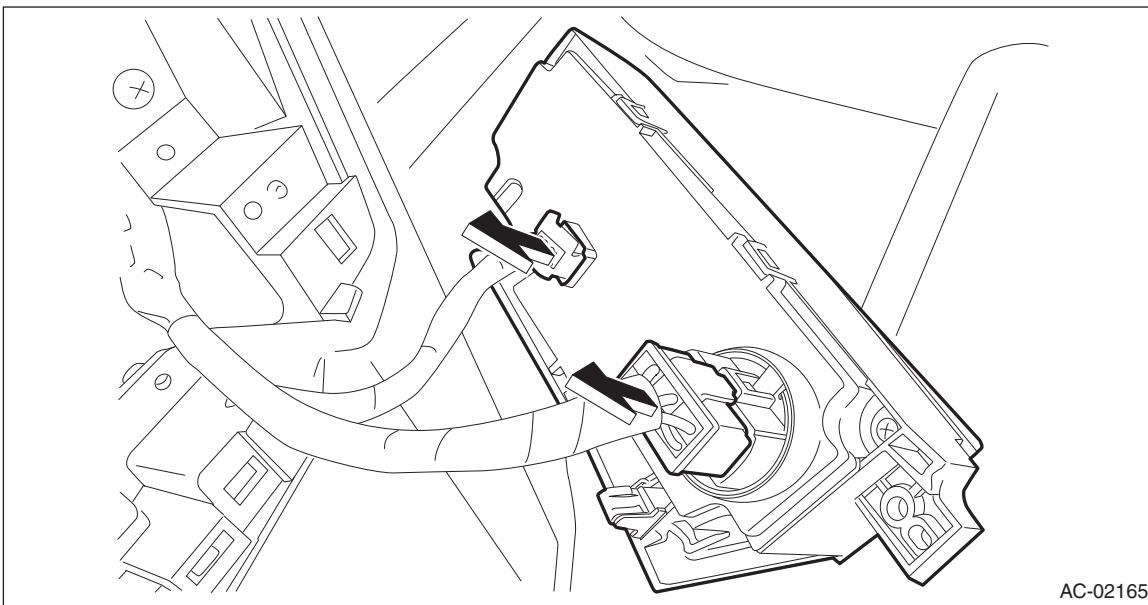

B: INSTALLATION

Install each part in the reverse order of removal.