

20. Pressure Sensor

A: INSPECTION

- 1) Perform a diagnosis code (DTC) check by connecting the Subaru Select Monitor.
- 2) If any diagnosis code (DTC) is displayed, consult the List of Diagnostic Trouble Code (DTC) in HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS). <Ref. to AC(diag)-31, LIST, List of Diagnostic Trouble Code (DTC).>