

22. Sunload Sensor (Auto A/C Model)

A: REMOVAL

NOTE:


Sunload sensor is integrated with the light control sensor.

- 1) Disconnect the ground cable from battery.
- 2) Remove the sunload sensor.


CAUTION:

Be careful not to damage the sensors and interior trims when removing.

- (1) Release the claws and clips, then detach the side speaker cover (RH).

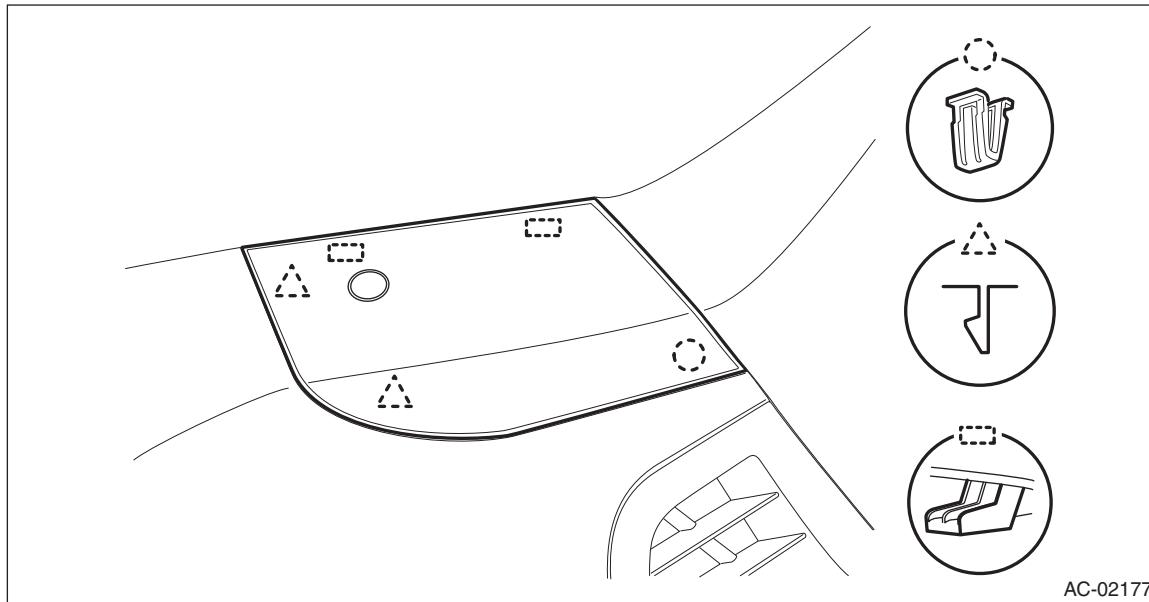

- (2) Push out the sunload sensor by pressing the left and right claws.
- (3) Disconnect the connector and remove the sunload sensor.

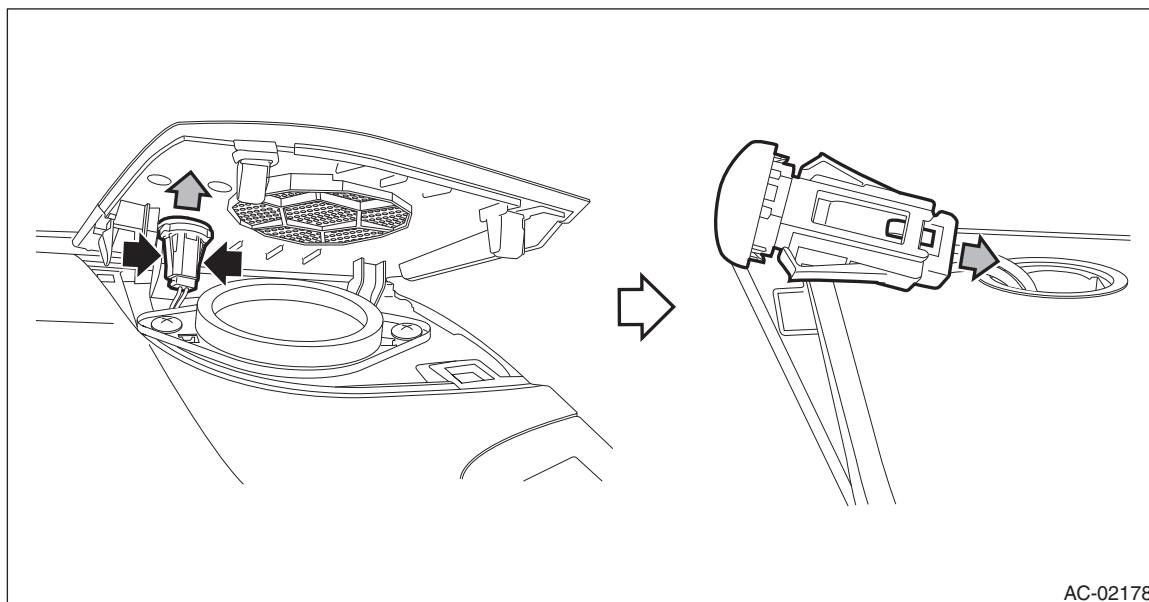

B: INSTALLATION

Install each part in the reverse order of removal.

Sunload Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

C: INSPECTION

- 1) Perform a diagnosis code (DTC) check by connecting the Subaru Select Monitor.
- 2) If any diagnosis code (DTC) is displayed, consult the List of Diagnostic Trouble Code (DTC) in HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS). <Ref. to AC(diag)-31, LIST, List of Diagnostic Trouble Code (DTC).>