

### 24. Air Vent Grille

#### A: REMOVAL


##### 1. CENTER GRILLE ASSEMBLY

1) Remove the center panel assembly.

###### CAUTION:

**Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.**

(1) Attach the protective tape (a) to the meter visor.

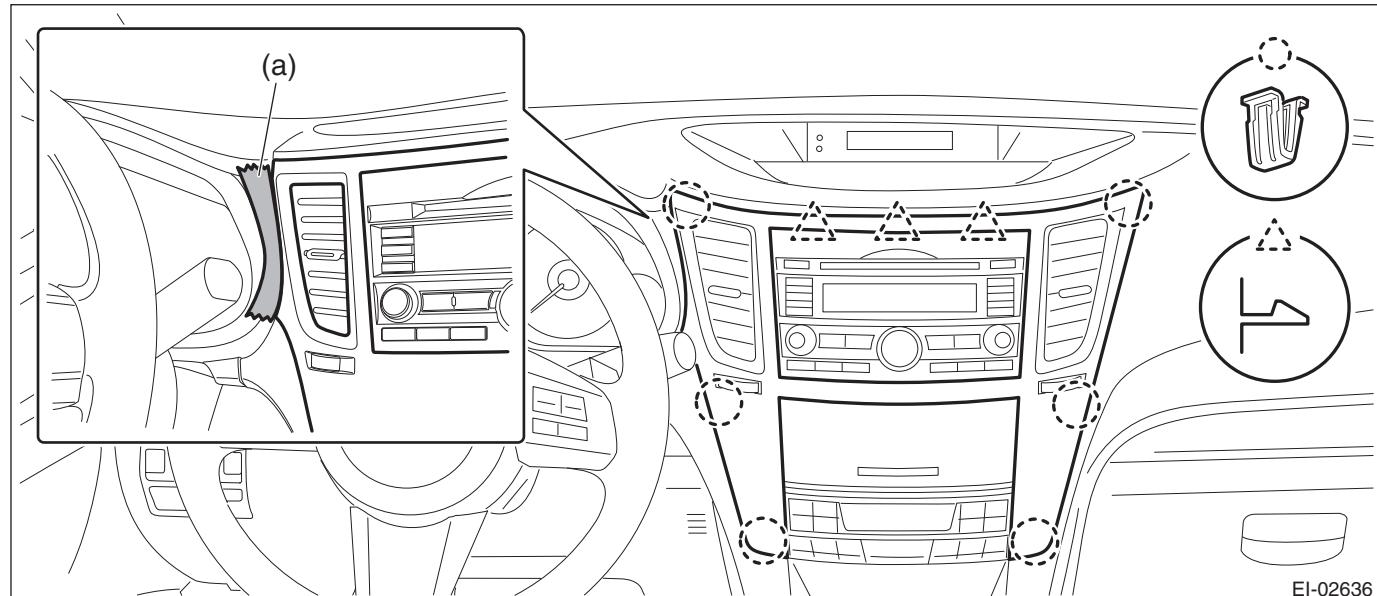


(2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel.  
(A), (B)

(3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel.  
(C), (D)


# Air Vent Grille

## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(4) Release the clips at the bottom of the center panel and remove the center panel assembly.

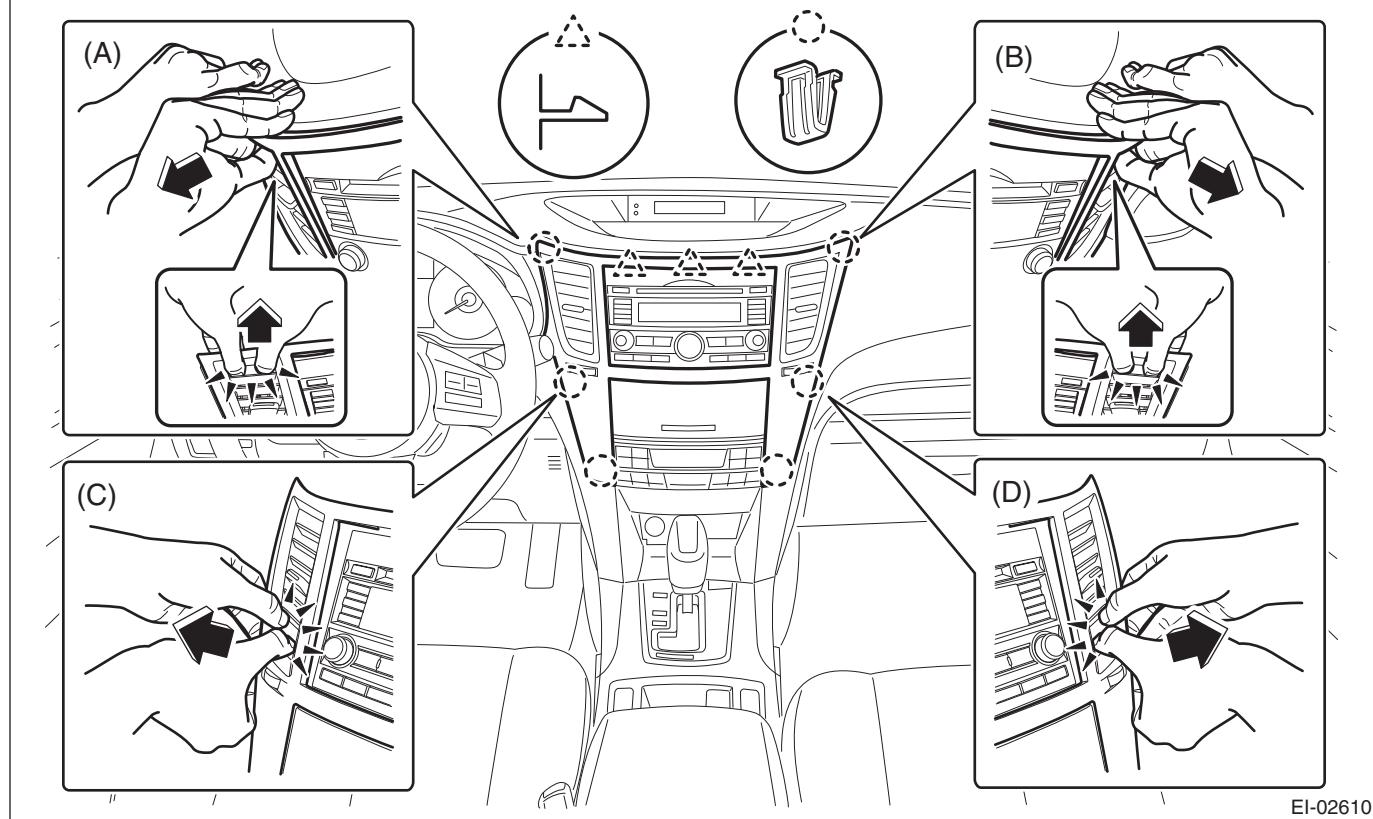

2) Release the claws, and then remove the center grille assembly.

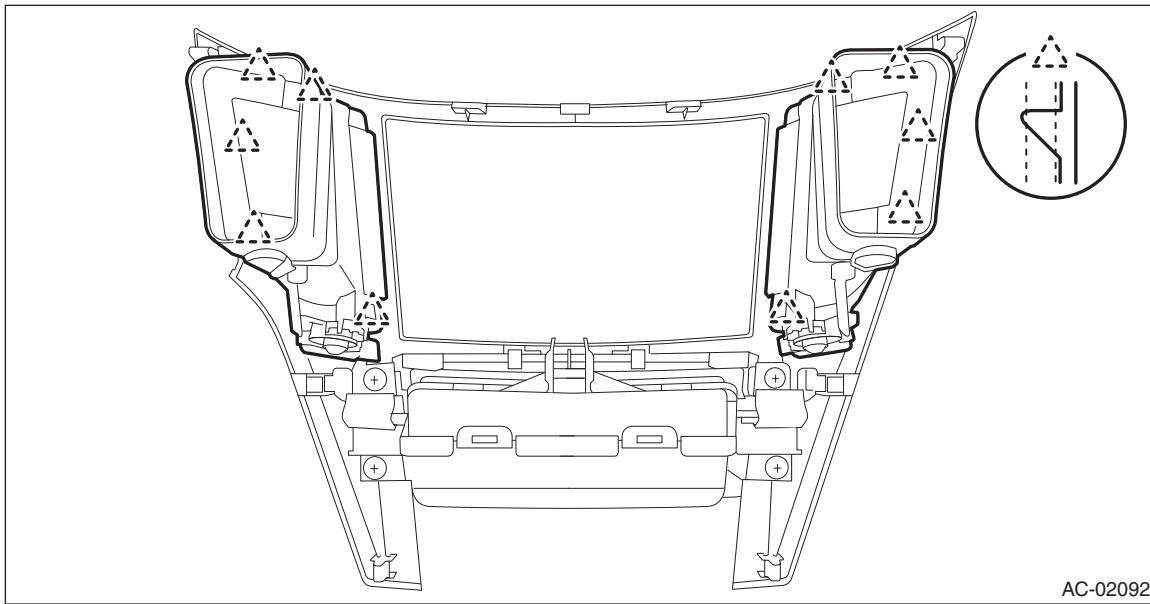


# Air Vent Grille


## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 2. SIDE GRILLE ASSEMBLY RH

- 1) Remove the instrument panel lower cover. <Ref. to EI-63, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the side vent grille assembly RH.
  - (1) Remove the screws.
  - (2) Release the claws and clips, then detach the side vent grille assembly RH.

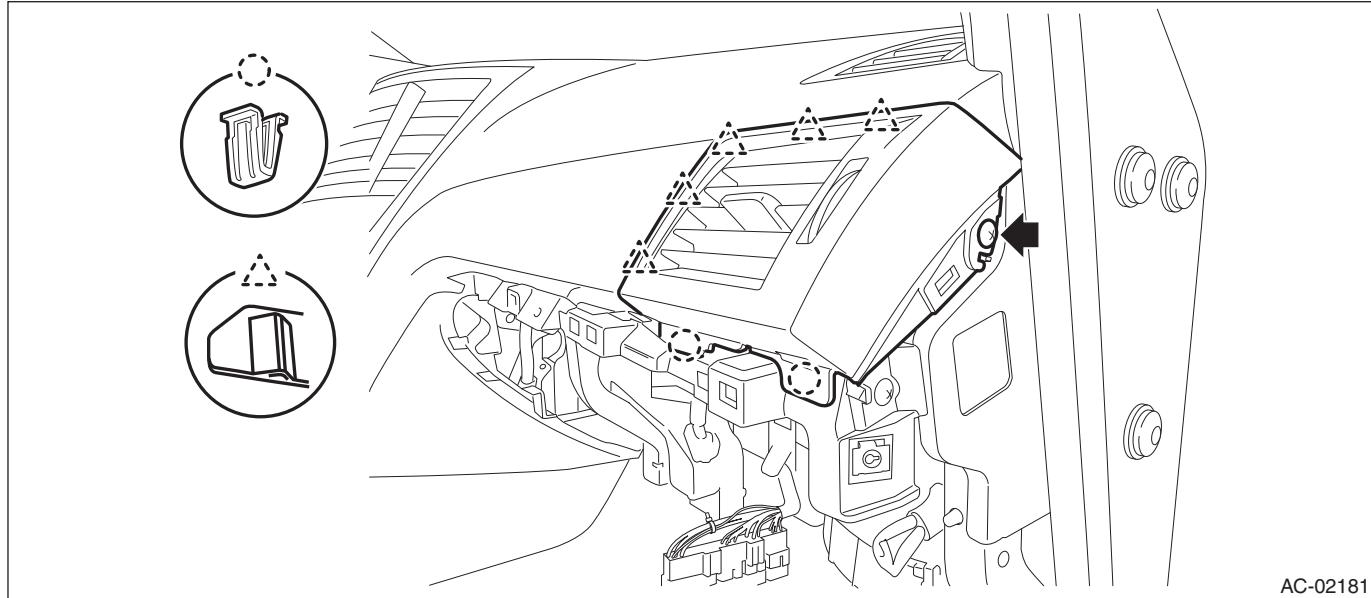

- (3) Release the claws, and then remove the side grille assembly RH.

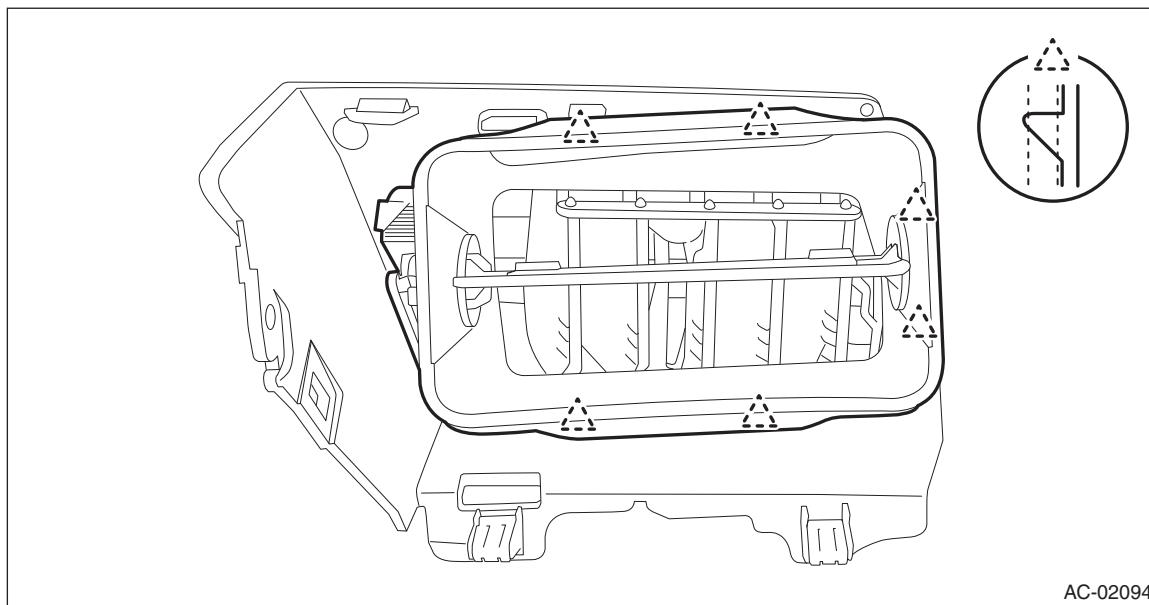


# Air Vent Grille


## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 3. SIDE GRILLE ASSEMBLY LH

- 1) Remove the glove box. <Ref. to EI-65, REMOVAL, Glove Box.>
- 2) Remove the side vent grille assembly LH.
  - (1) Remove the screws.
  - (2) Release the claws and clips, then detach the side vent grille assembly LH.

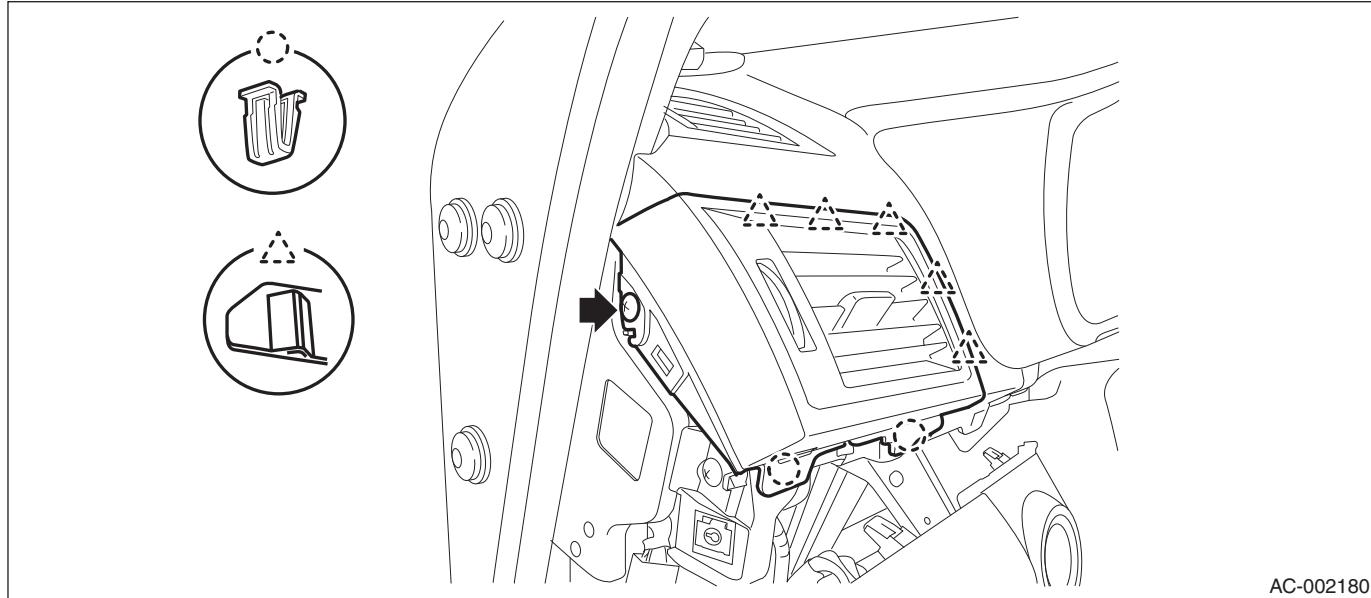

- (3) Release the claws, and then remove the side grille assembly LH.

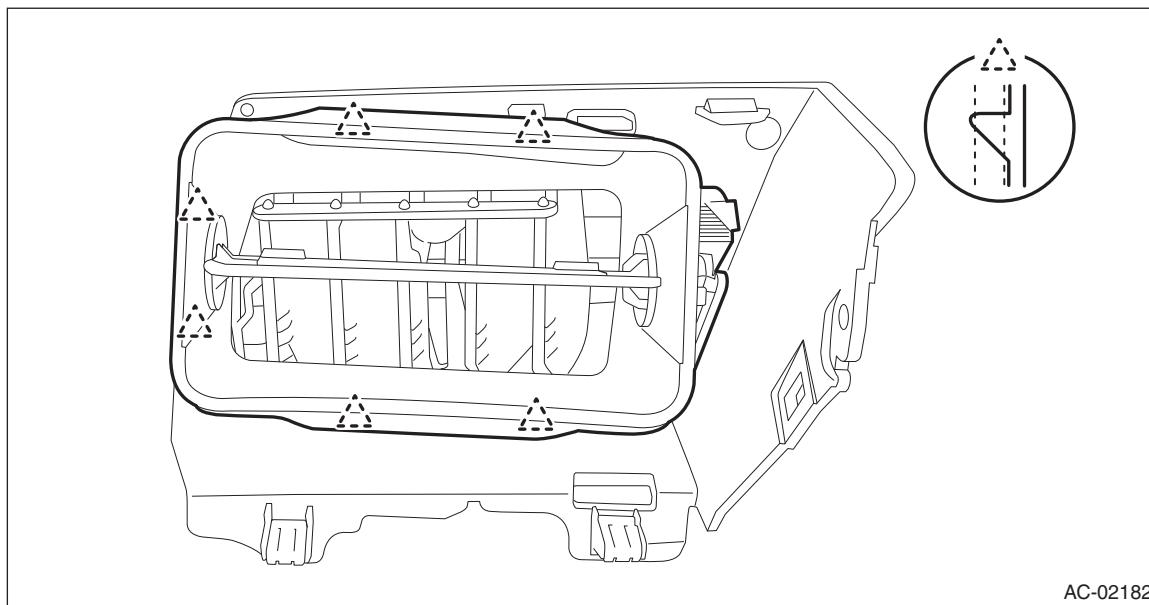

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly. Replace the air vent grille if faulty.
- 2) Check that the adjustment can be maintained in each position. Replace the air vent grille if faulty.