


25. Heater Duct

A: REMOVAL

- 1) Remove the front seats. <Ref. to SE-10, REMOVAL, Front Seat.>
- 2) Remove the instrument panel face assembly. <Ref. to EI-75, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the rear heater duct.
 - (1) Pull off the floor carpet to disengage the rear heater duct slide lock.
 - (2) Release the claws, and then remove the rear heater duct LH and RH.

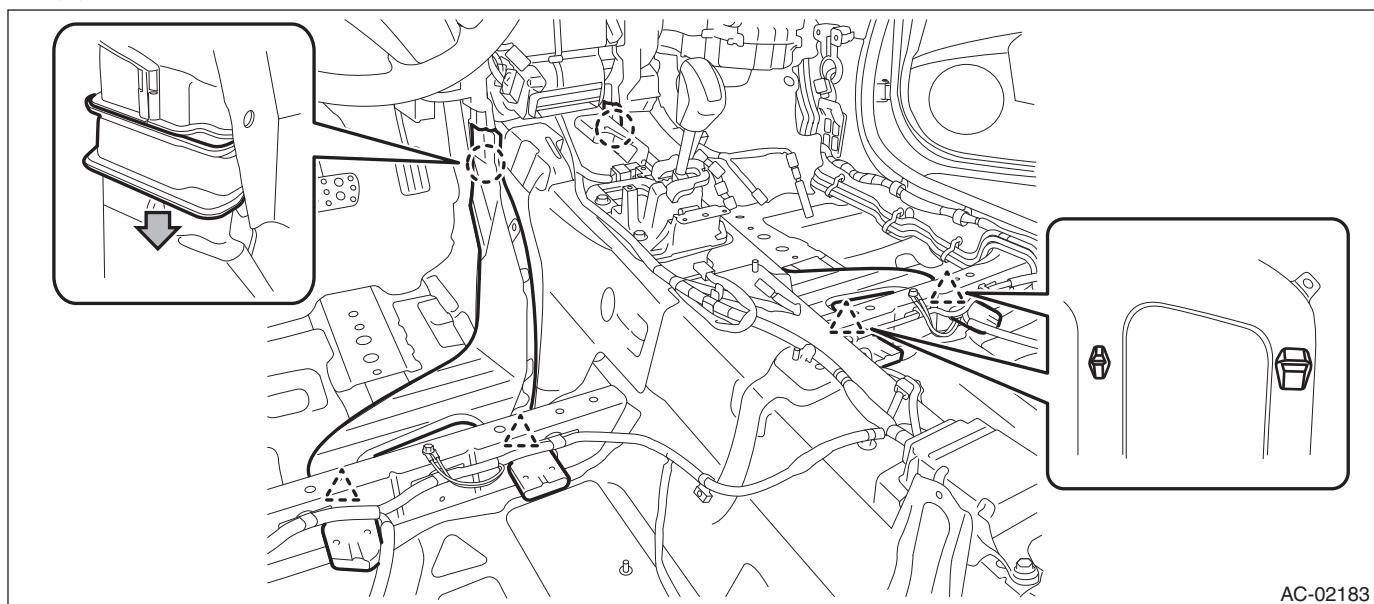

B: INSTALLATION

Install each part in the reverse order of removal.