



### 27. A/C Filter

#### A: REPLACEMENT

- 1) Remove the glove box lid assembly.
  - (1) Remove the glove box damper.
  - (2) Release the stoppers and remove the glove box lid assembly by pulling it toward you.

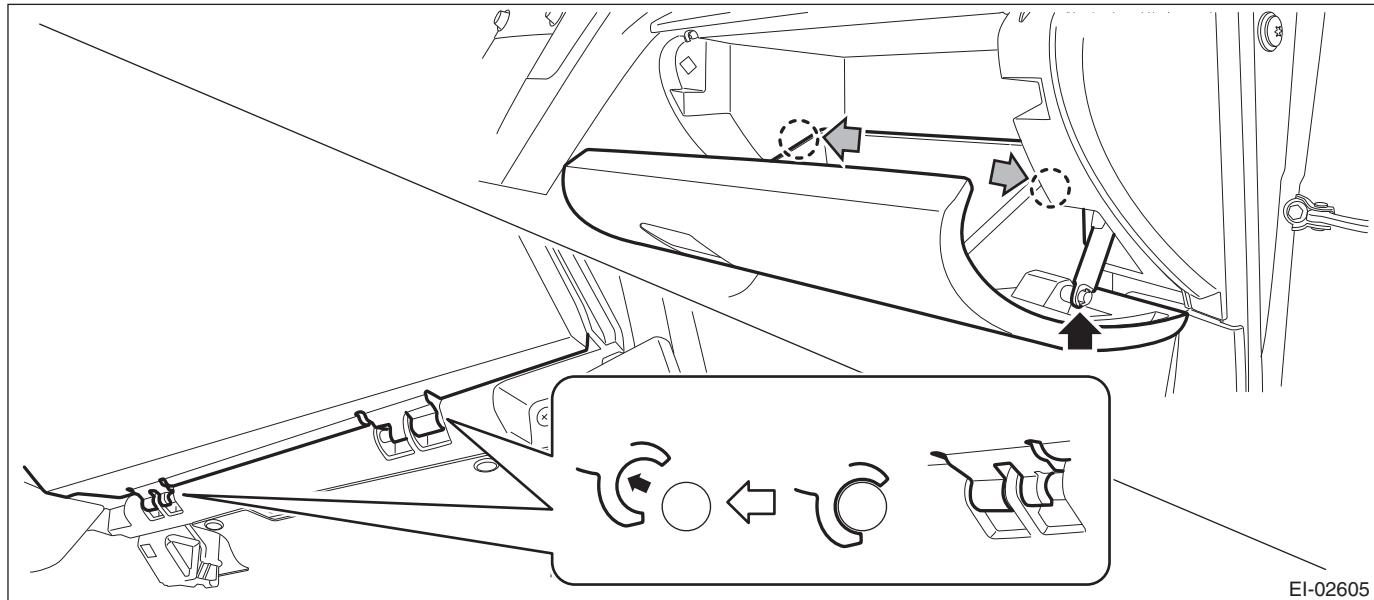


- 2) Remove the A/C filter.
  - (1) Release the lock and remove the A/C filter cover.

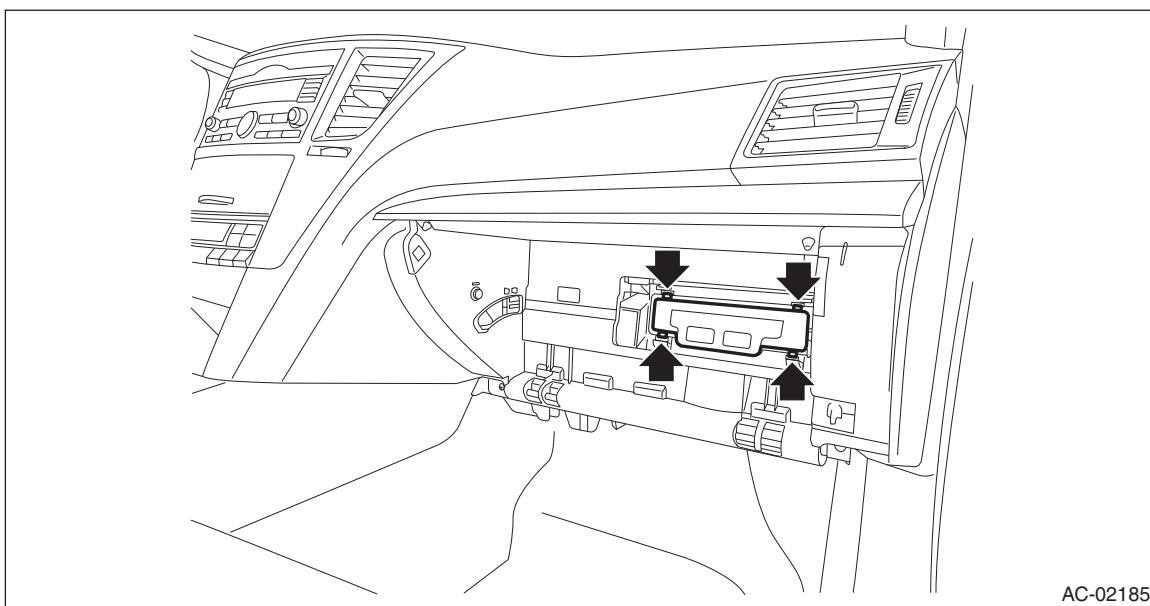

## A/C Filter

### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Remove the A/C filter.

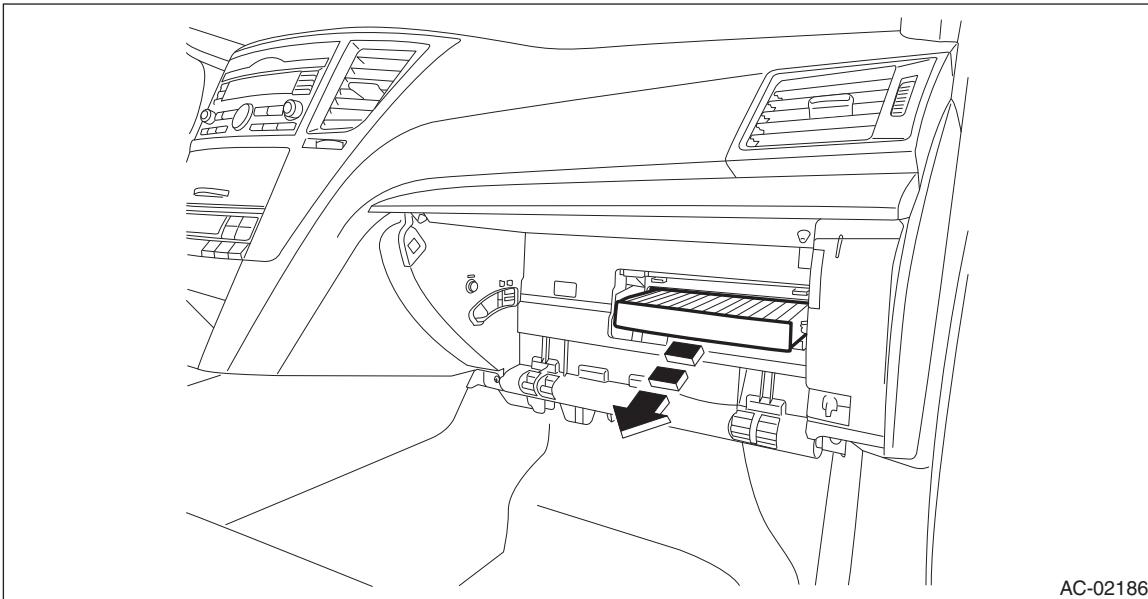

3) Install each part in the reverse order of removal.