


2. Relay and Fuse

A: LOCATION

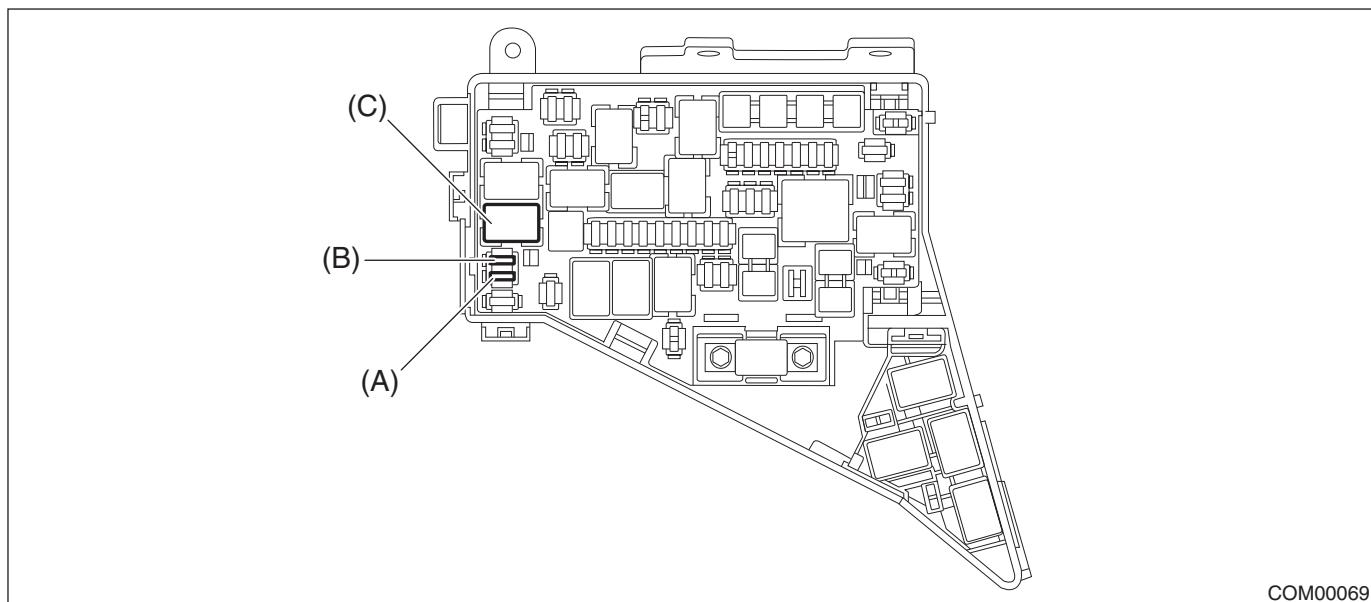

Main Fuse Box	Fuse 7.5 A (Hi pitch side horn)	(A)
	Fuse 7.5 A (Lo pitch side horn)	(B)
	HORN RELAY	(C)

B: INSPECTION

1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage to the terminals between 4 — 3.	Less than 1 Ω	

SR-00180

- 2) Replace the relay if it is found defective.