

3. Horn System

A: WIRING DIAGRAM

Refer to "Horn System" in the wiring diagram. <Ref. to WI-157, WIRING DIAGRAM, Horn System.>

B: INSPECTION

Symptoms	Inspection steps
Horn does not sound.	<ol style="list-style-type: none">1. Check the fuse.2. Check the horn relay.3. Check the roll connector.4. Check the horn switch.5. Check the horn assembly.6. Check the harness.

C: NOTE

For operation procedures of each component of the horn system, refer to the respective section.

- Horn ASSY:<Ref. to COM-5, Horn.>
- Horn switch:<Ref. to COM-11, Horn Switch.>