

# General Description

## LIGHTING SYSTEM

### 1. General Description

#### A: SPECIFICATION

Headlight	High beam	12 V — 55 W	
	Low beam	12 V — 60 W	
Front turn signal light		12 V — 21 W	
Clearance/parking light		12 V — 5 W	
Side marker light		12 V — 5 W	
Front fog light		12 V — 55 W	
Side turn signal light (C6 model)		12 V — 1.4 W (LED)	
Rear combination light	Sedan	Tail/stop light	12 V — 5/21 W
		Turn signal light	12 V — 21 W
		Back-up light	12 V — 16 W
	OUT-BACK	Tail light	12 V — 5 W
		Stop light	12 V — 21 W
		Turn signal light	12 V — 21 W
Rear finisher light	Sedan	Tail light	12 V — 5 W
	OUT-BACK	Tail light	12 V — 5 W
		Back-up light	12 V — 16 W
License plate light		12 V — 5 W	
High-mounted stop light	Sedan	12 V — 1 W (LED)	
	OUTBACK	12 V — 2.1 W (LED)	
Room light		12 V — 8 W	
Spot map light		12 V — 8 W	
Luggage room light		12 V — 5 W	
Trunk room light		12 V — 5 W	
Glove box light		12 V — 1.4 W	
Door step light		12 V — 5 W	

#### B: CAUTION

- Before removing or installing parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely when reassembling.
- After reassembly, make sure that the functional parts operate normally.
- The airbag system wiring harness is routed near electrical parts and switches. Color of the airbag system wiring harness and connector is yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.

#### C: PREPARATION TOOL

##### 1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
TORX® T30	Used for removing/installing driver's airbag module.