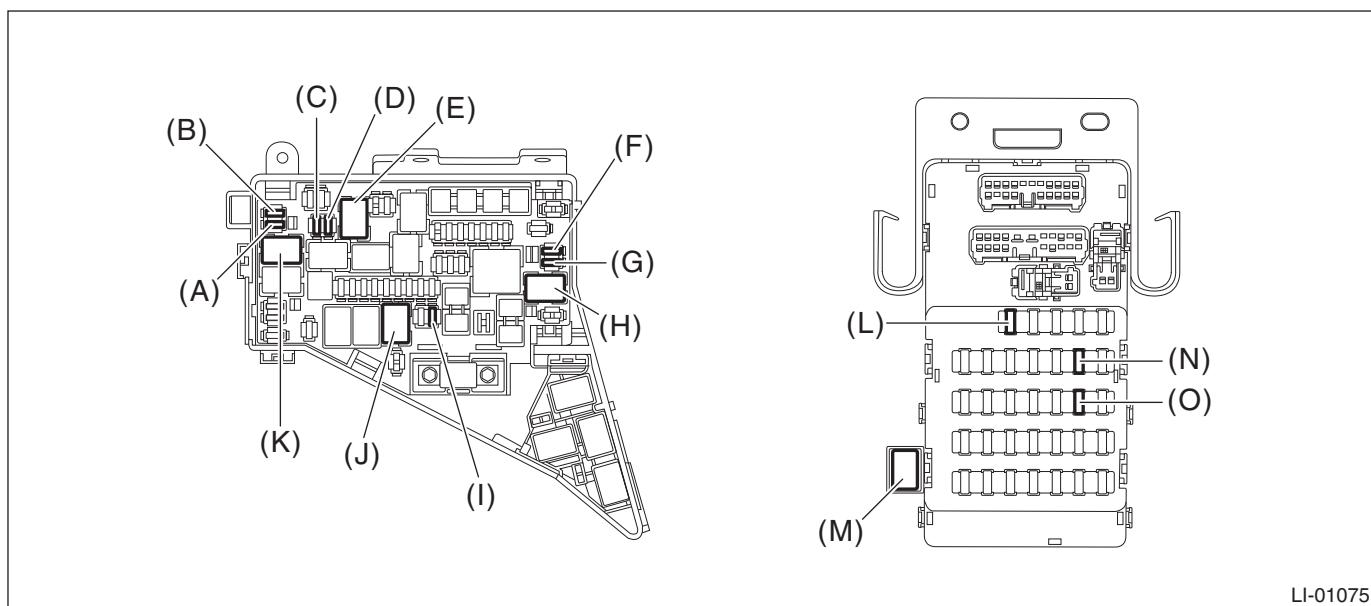


2. Relay and Fuse

A: LOCATION



LI-01075

| | | |
|------------------|---|-----|
| Main Fuse Box | Fuse 15A (front combination light RH) | (A) |
| | Fuse 15A (front combination light LH) | (B) |
| | Fuse 10A (front combination light LH) | (C) |
| | Fuse 10A (front combination light RH) | (D) |
| | Headlight relay (Hi) | (E) |
| | Fuse 10A (front fog light LH) | (F) |
| | Fuse 10A (front fog light RH) | (G) |
| | Front fog light relay | (H) |
| | Fuse 10 A (rear combination light) | (I) |
| | Tail and illumination relay | (J) |
| | Headlight relay (Lo) | (K) |
| Relay & fuse box | Fuse 15A (trailer connector) | (L) |
| | Back-up light relay | (M) |
| | Fuse 7.5A (turn signal & hazard unit) | (N) |
| | Fuse 7.5A (inhibitor switch, back-up light relay) | (O) |

Relay and Fuse

LIGHTING SYSTEM

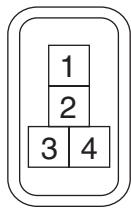
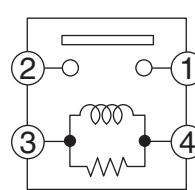
B: INSPECTION

1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

| Terminal No. | Inspection conditions | Specification | Circuit |
|--------------|---|---------------|---|
| 1 — 2 | Always | 1 MΩ or more |   |
| 1 — 2 | Apply battery voltage between 4 — 3 terminal. | Less than 1 Ω | |

SR-00180

- 2) Replace the relay if it is found defective.