

12. Light Control Sensor

A: REMOVAL

NOTE:


The light control sensor is integrated with the sunload sensor.

- 1) Disconnect the ground cable from battery.
- 2) Remove the light control sensor.


CAUTION:

Be careful not to damage the sensors and interior trims when removing.

- (1) Release the claws and clips, then detach the side speaker cover (RH).

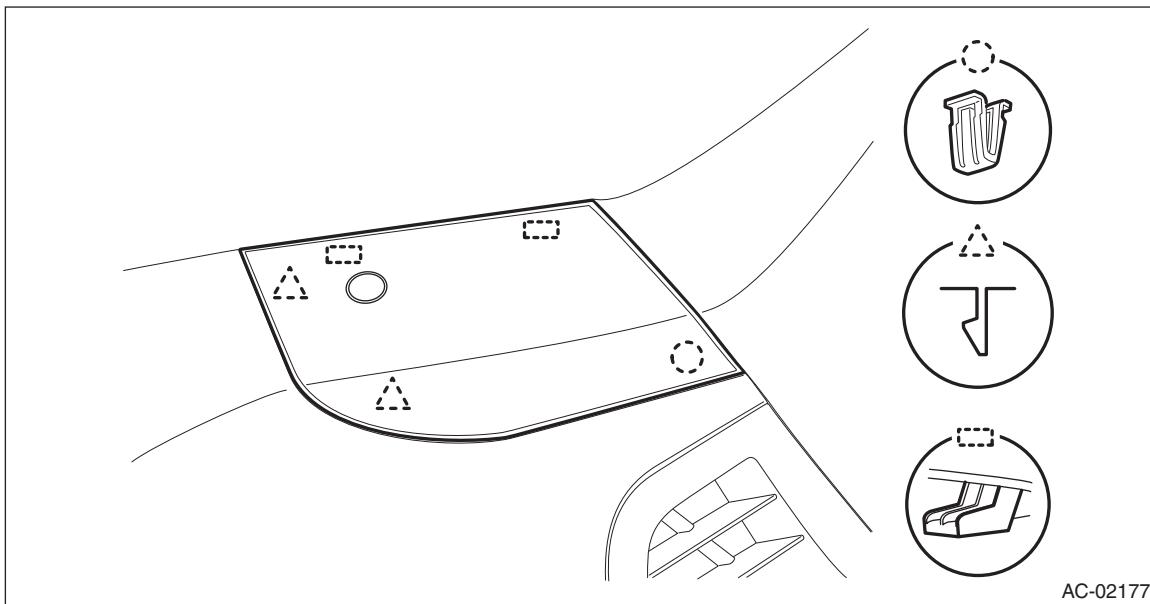

- (2) Push out the light control sensor by pressing the left and right claws.
- (3) Disconnect the connector, and remove the light control sensor.

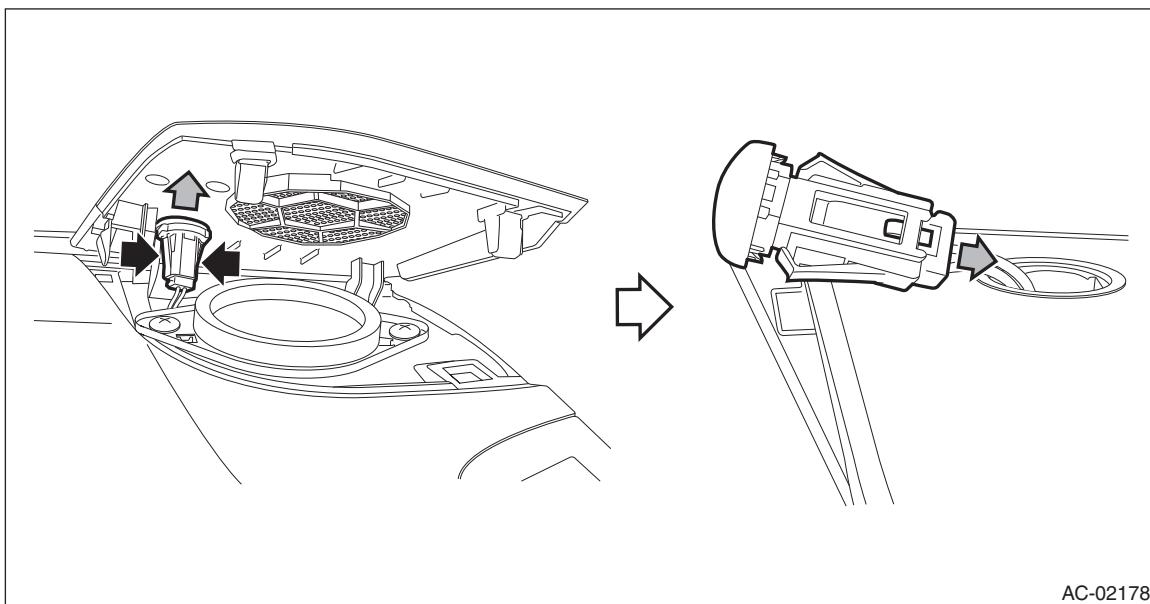

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

For the inspection of the light control sensor, refer to AUTO HEADLIGHT SYSTEM CHECK of Headlight System. <Ref. to LI-5, AUTO HEADLIGHT SYSTEM CHECK, INSPECTION, Headlight System.>