


Front Fog Light Assembly

LIGHTING SYSTEM

18. Front Fog Light Assembly

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and turn over the front end of front mud guard.

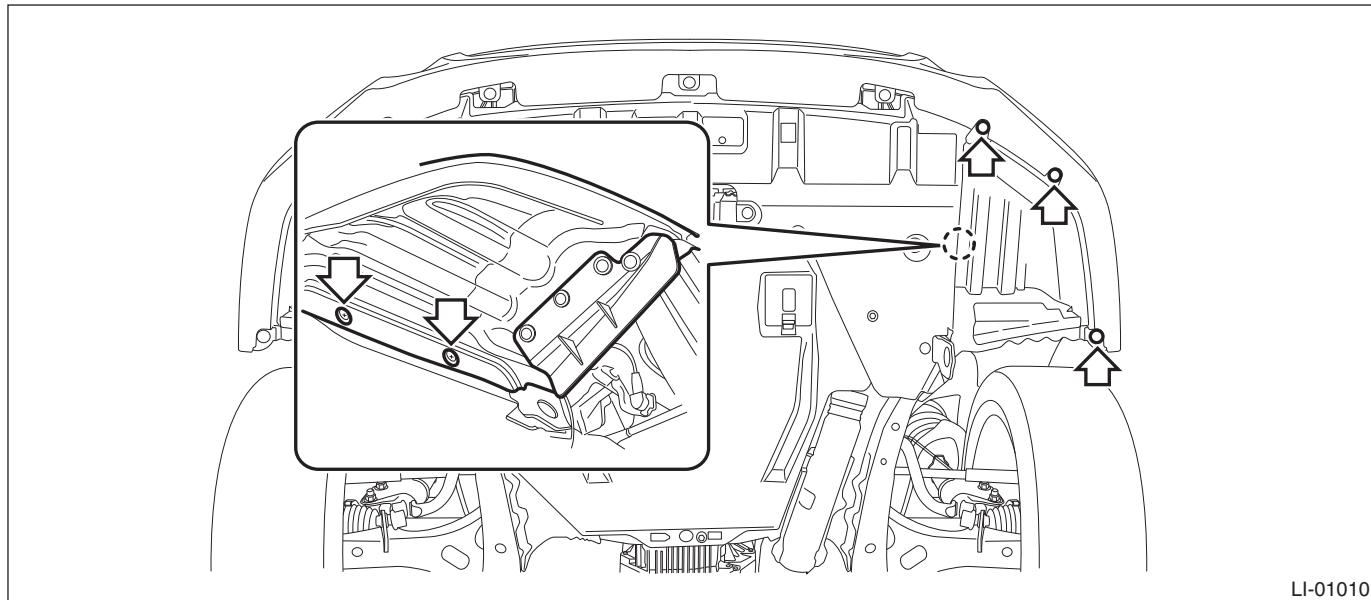

LI-01010

- 3) From the bottom of bumper face, remove the front fog light assembly.

- (1) Disconnect the connector.
- (2) Remove the bolts, and remove the front fog light assembly.

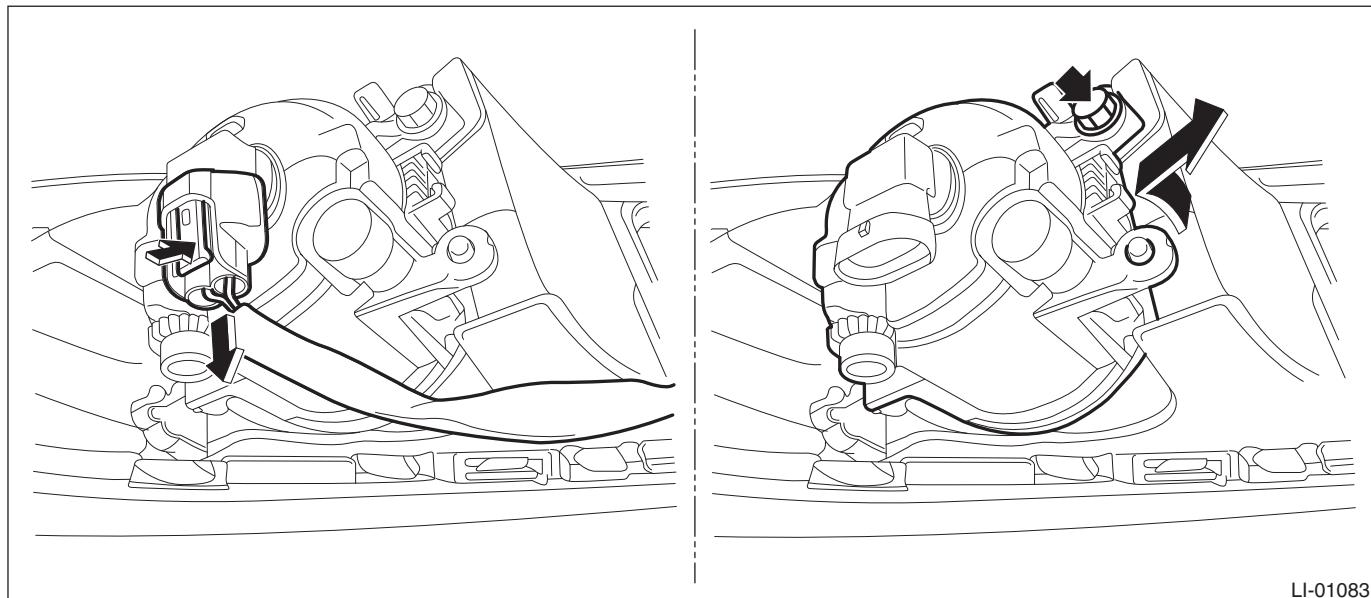

LI-01083

B: INSTALLATION

Install each part in the reverse order of removal.


Tightening torque:

Front fog light assembly: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

C: ADJUSTMENT

1. FOG LIGHT AIMING

- 1) Before checking the fog light beam level, be sure of the following:
 - The area around the fog light has not sustained any accident, damage or other type of deformation.
 - Vehicle is parked on a level surface.
 - The inflation pressure of tires is correct.
 - Vehicle's fuel tank is fully filled.
- 2) Bounce the vehicle several times to normalize the suspension.
- 3) Make certain that someone is seated in the driver's seat.
- 4) Place the vehicle with the front end facing to the measurement panel.

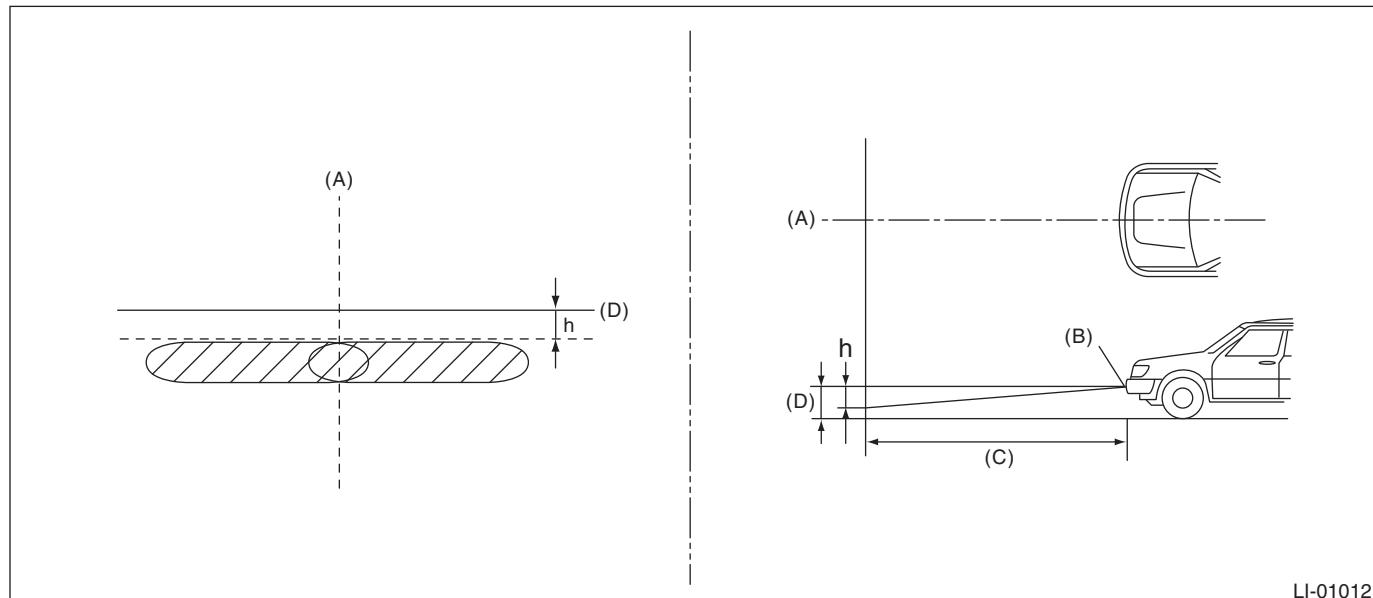

(A) Vehicle center

(C) 3 m (10 ft)

(D) Height of fog light center

(B) Bulb center marking


| h mm (in) at 3 m (10 ft) |
|--------------------------|
| 40 (1.58) |

- 5) Adjust the fog light beam.

Front Fog Light Assembly


LIGHTING SYSTEM

(1) Remove the clips and turn over the front end of front mud guard.

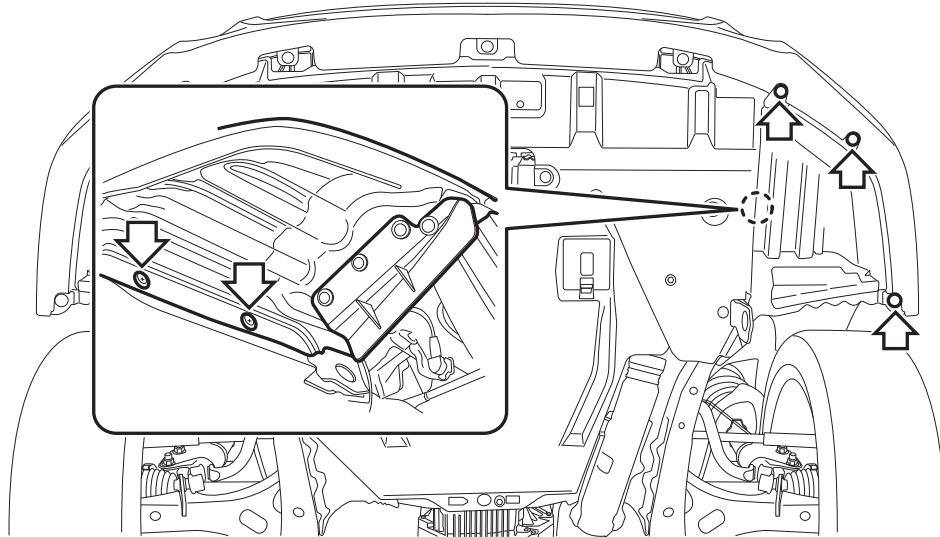

LI-01010

(2) Adjust the beam direction by turning the aiming screw from the bottom of front bumper face.

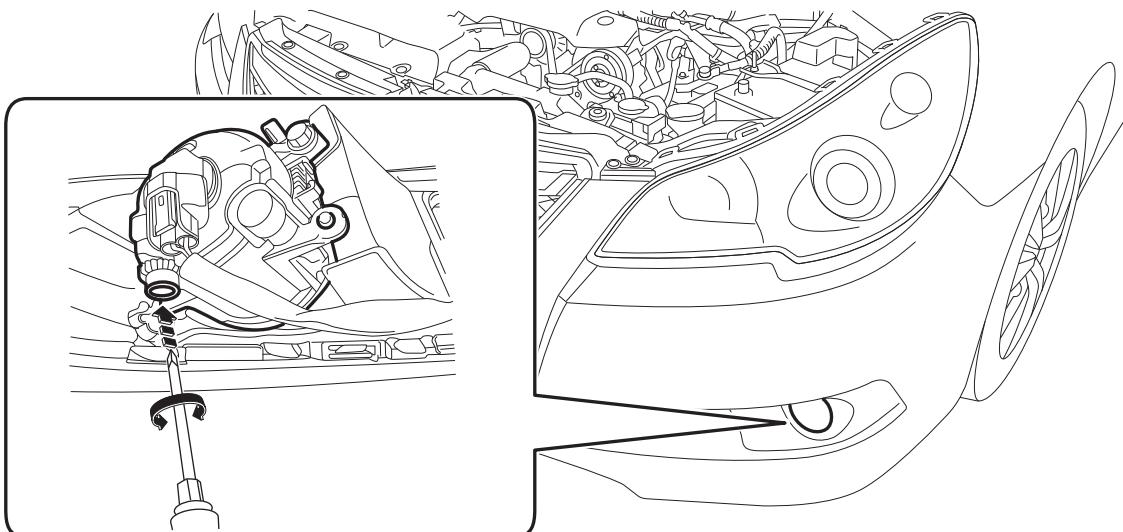

LI-01084