


19. Front Fog Light Bulb


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and turn over the front end of front mud guard.

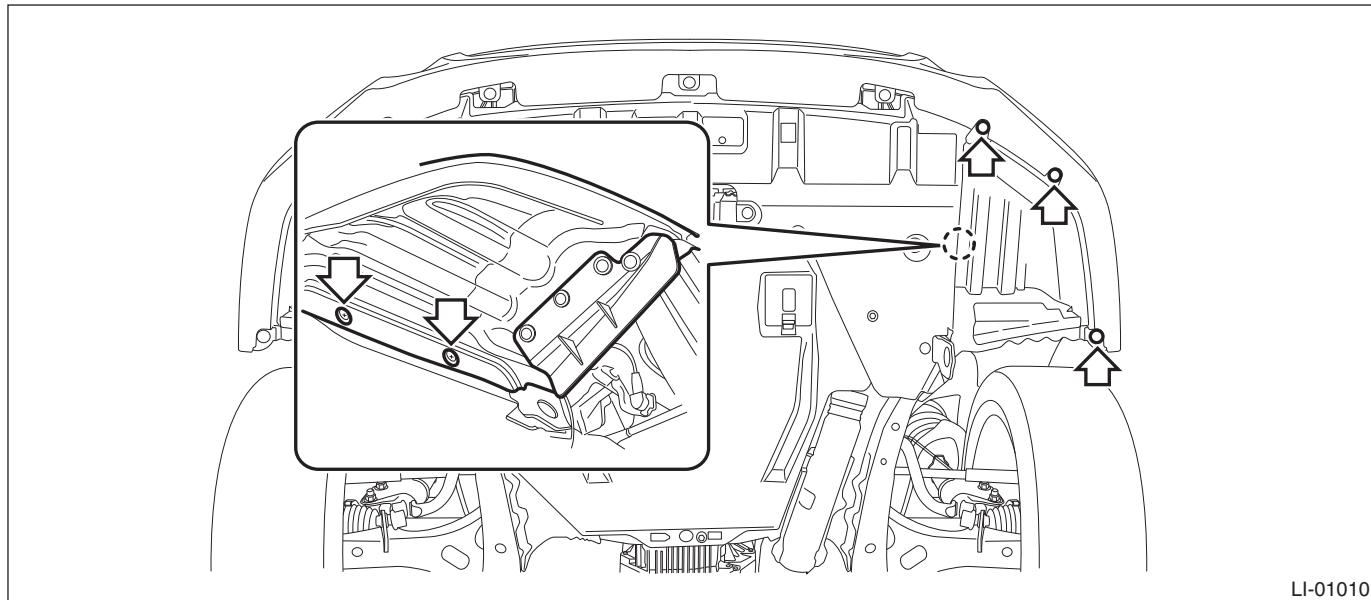

- 3) From the bottom of bumper face, remove the front fog light bulb.

- (1) Disconnect the connector.
- (2) Remove the bulb.

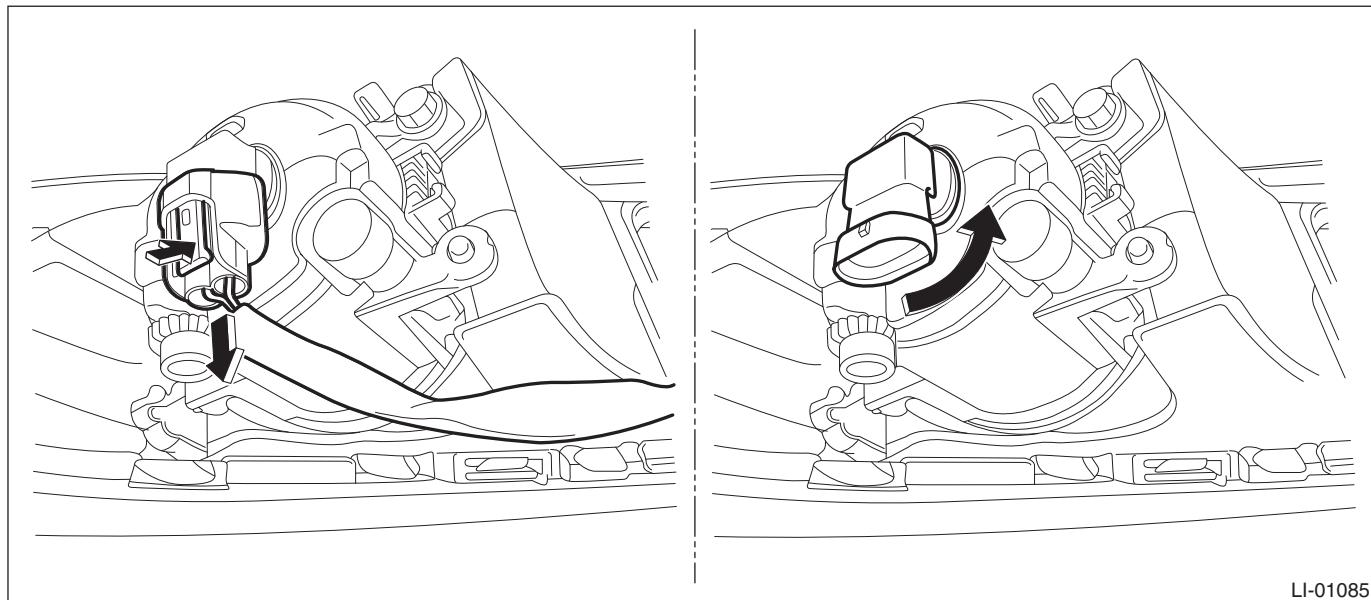

B: INSTALLATION

CAUTION:

After connecting the connector, make sure that the bulb is locked securely.

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.