


## 20. Side Turn Signal Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the mirror. <Ref. to GW-27, REPLACEMENT, Outer Mirror.>
- 3) Remove the scalp cap. <Ref. to GW-21, REPLACEMENT, Scalp Cap.>
- 4) Remove the side turn signal light assembly.
  - (1) Remove the screws and pull out the side turn signal light assembly.
  - (2) Disconnect the connector and remove the side turn signal light assembly.

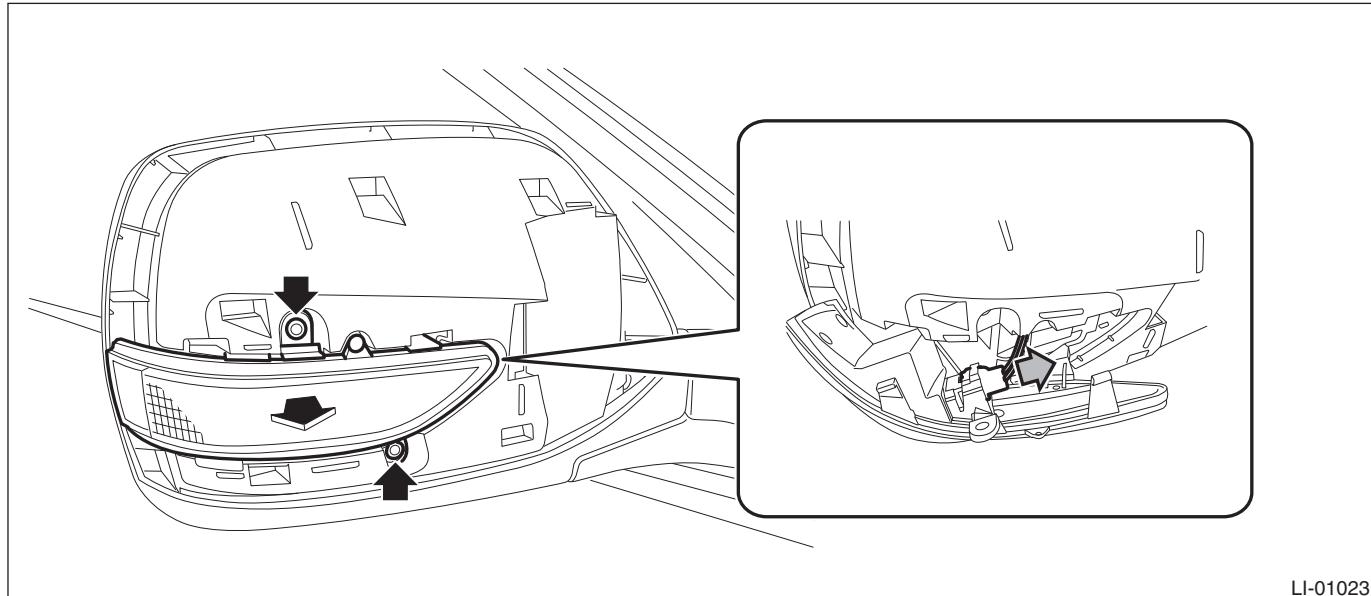

LI-01023

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Install the side turn signal light assembly and check that it blinks normally.
- 2) If it is found not to blink normally, replace the side turn signal light assembly with a new part.

#### NOTE:

Since LED (Light Emitting Diode) is used for the side turn signal light, replace the side turn signal light assembly if the LED burns out.