


22. Tail/Stop Light Bulb

A: REMOVAL

1. SEDAN MODEL


• Rear combination light side

- 1) Disconnect the ground cable from battery.
- 2) Release the lock and remove the bulb inspection cover of trunk room trim.

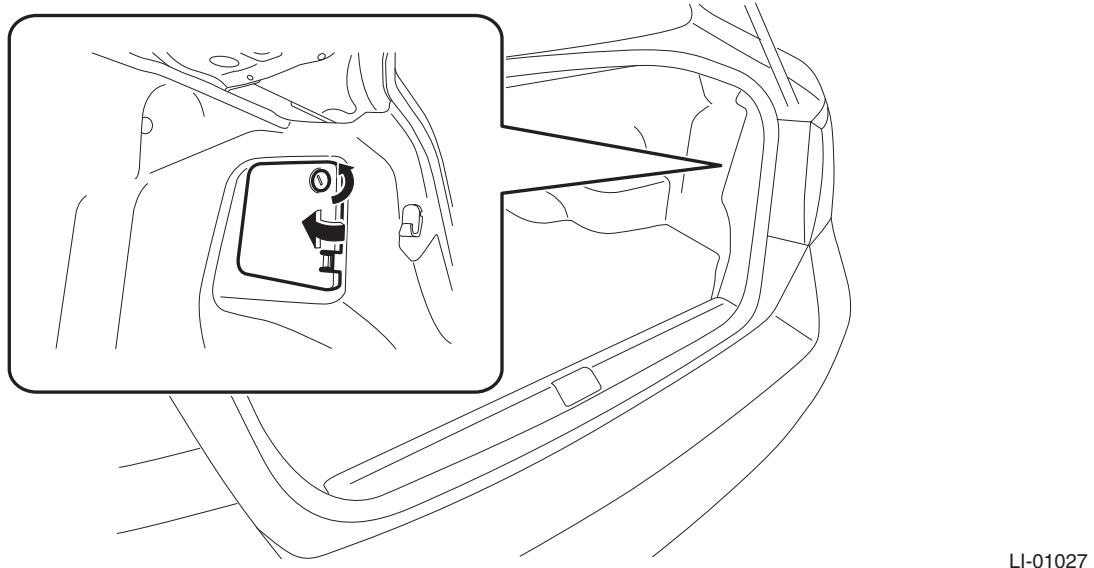

LI-01027

- 3) Remove the bulb socket and tail light/stop light bulb.

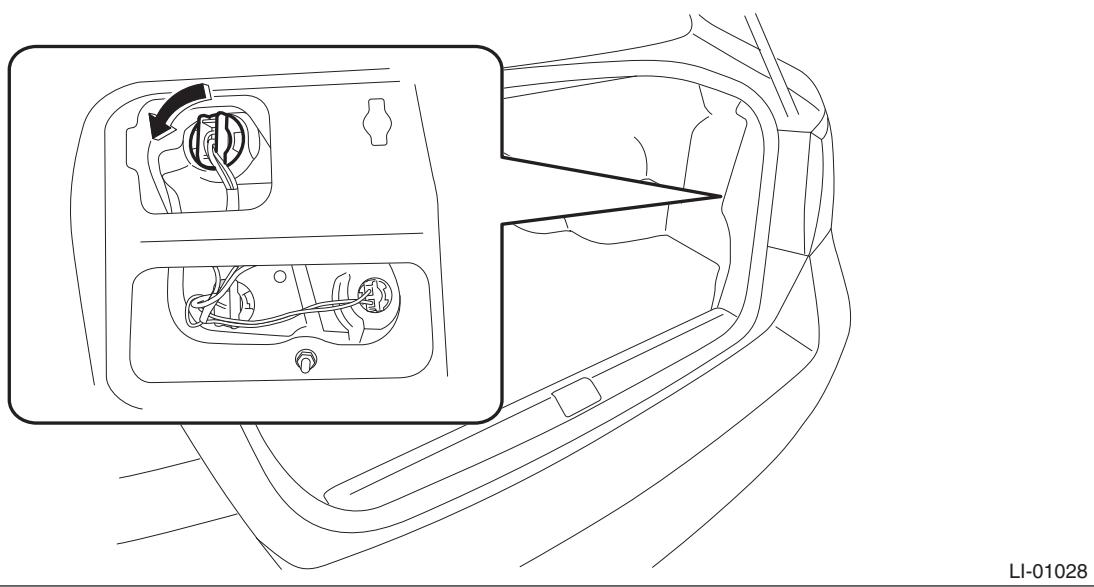


LI-01028

Tail/Stop Light Bulb

LIGHTING SYSTEM

- **Rear finisher light side**


- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk lid trim. <Ref. to EI-127, TRUNK LID TRIM, REMOVAL, Trunk Room Trim.>
- 3) Remove the bulb socket and tail light bulb.

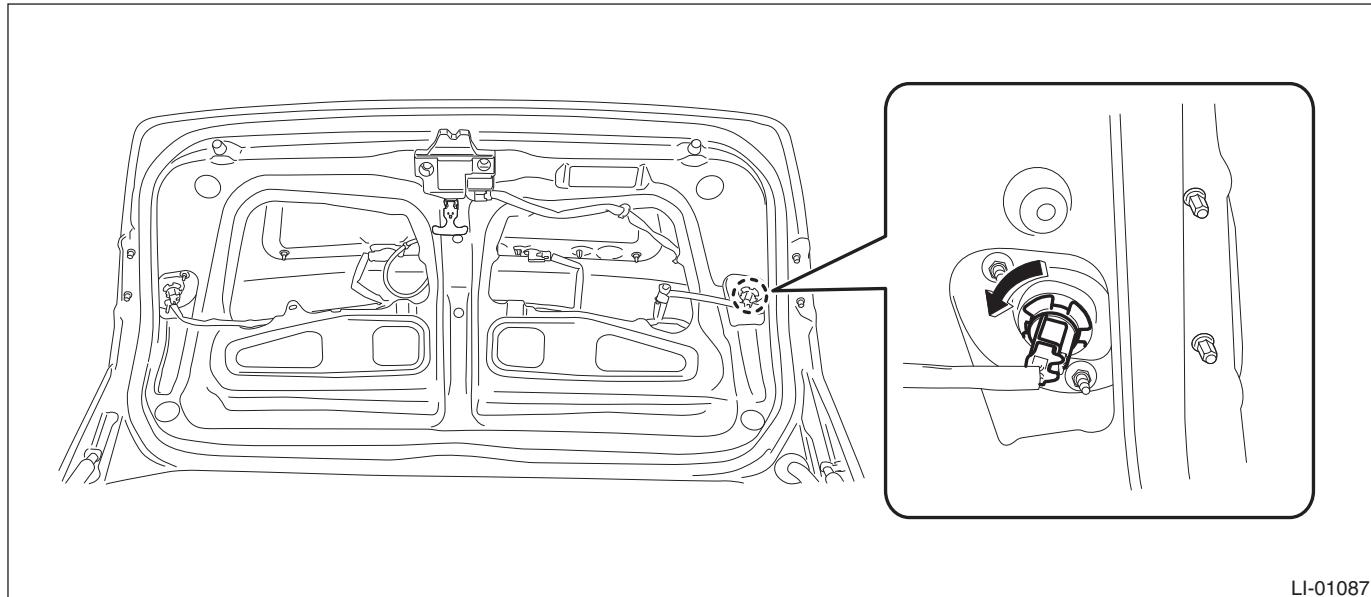

2. OUTBACK MODEL

- **Rear combination light side**

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and detach the rear combination light covers.

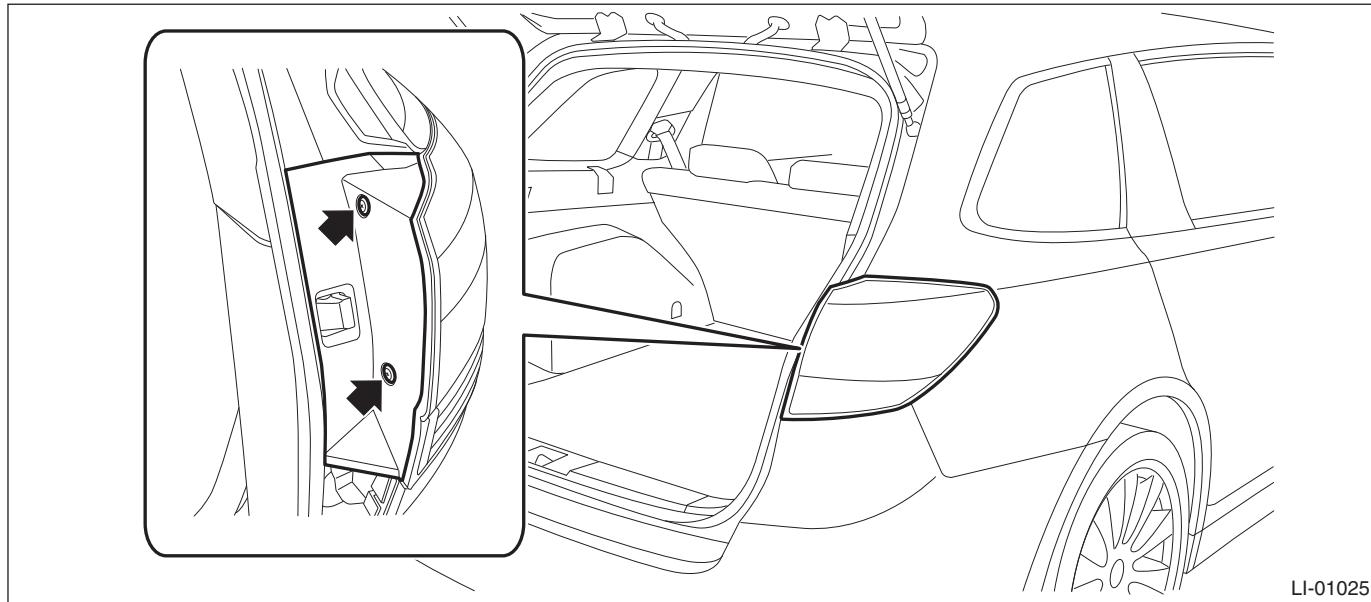

- 3) Remove the rear combination light assembly.

CAUTION:


Be careful not to damage the clips.

- (1) Release the bolts and clips, then pull out the rear combination light assembly to the vehicle rear.

Tail/Stop Light Bulb


LIGHTING SYSTEM

(2) Disconnect the connector and remove the rear combination light assembly.

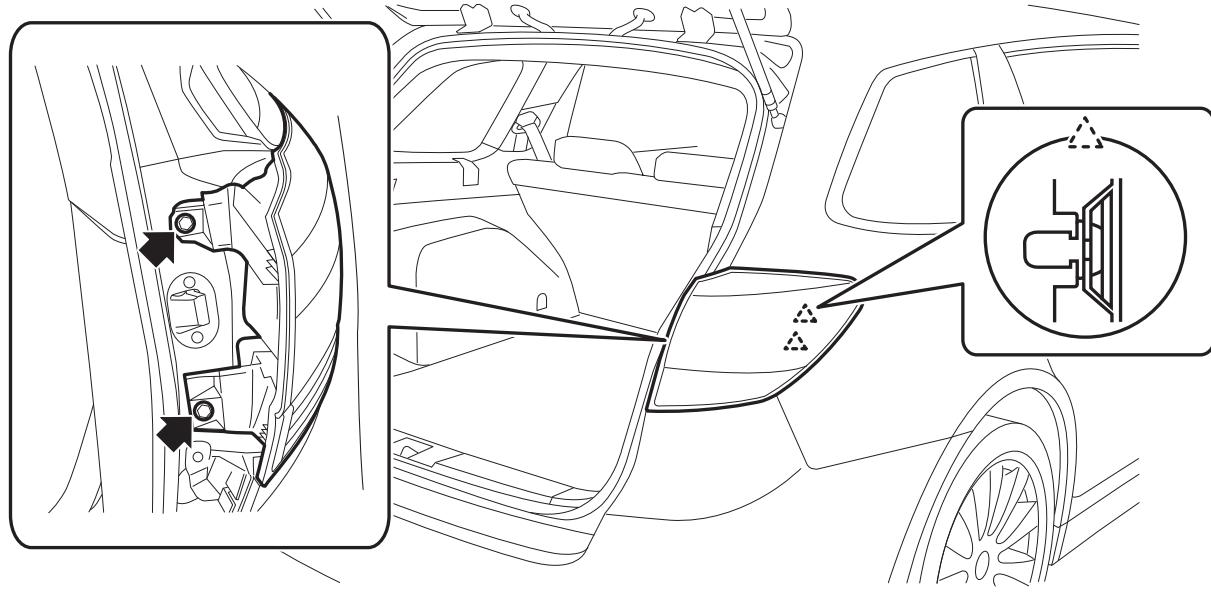

LI-01026

4) Remove the bulb sockets and bulbs.

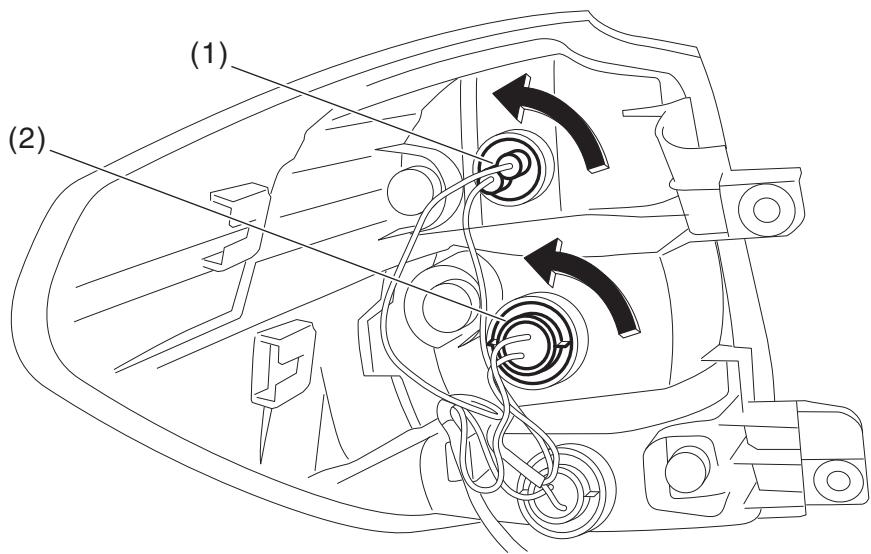

LI-01029

(1) Tail light bulb


(2) Stop light bulb

Tail/Stop Light Bulb


LIGHTING SYSTEM

• Rear finisher light side

- 1) Release the claws and remove the bulb inspection cover of rear gate trim

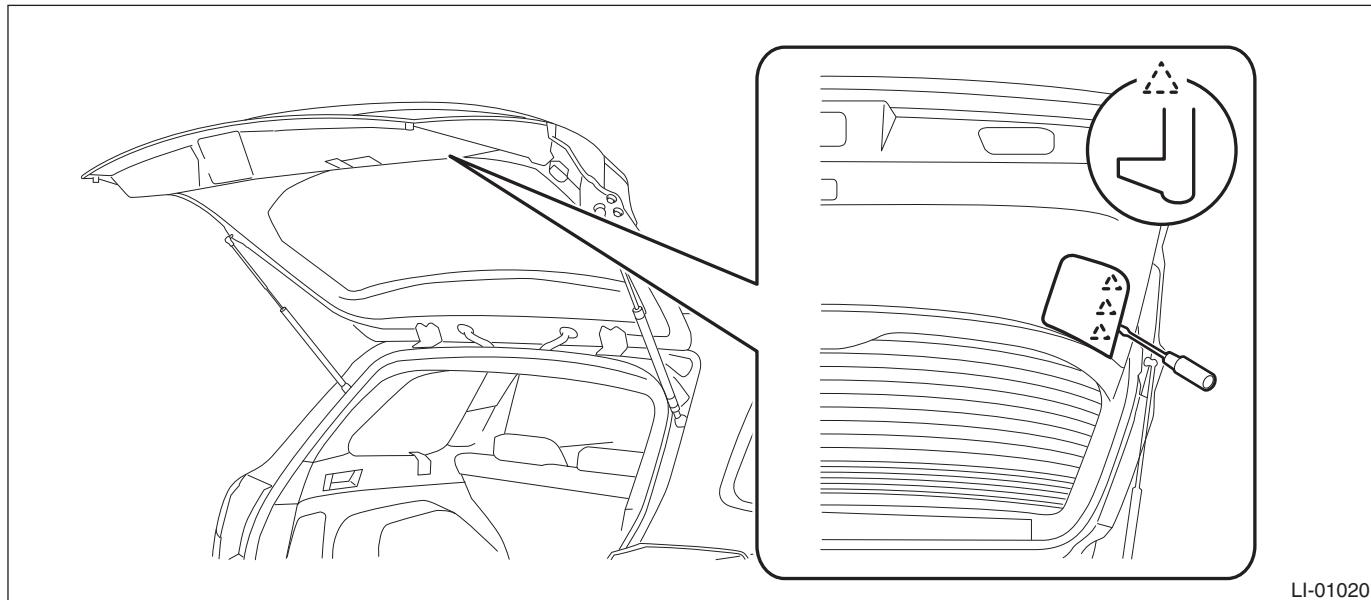

- 2) Remove the bulb socket and tail light bulb.

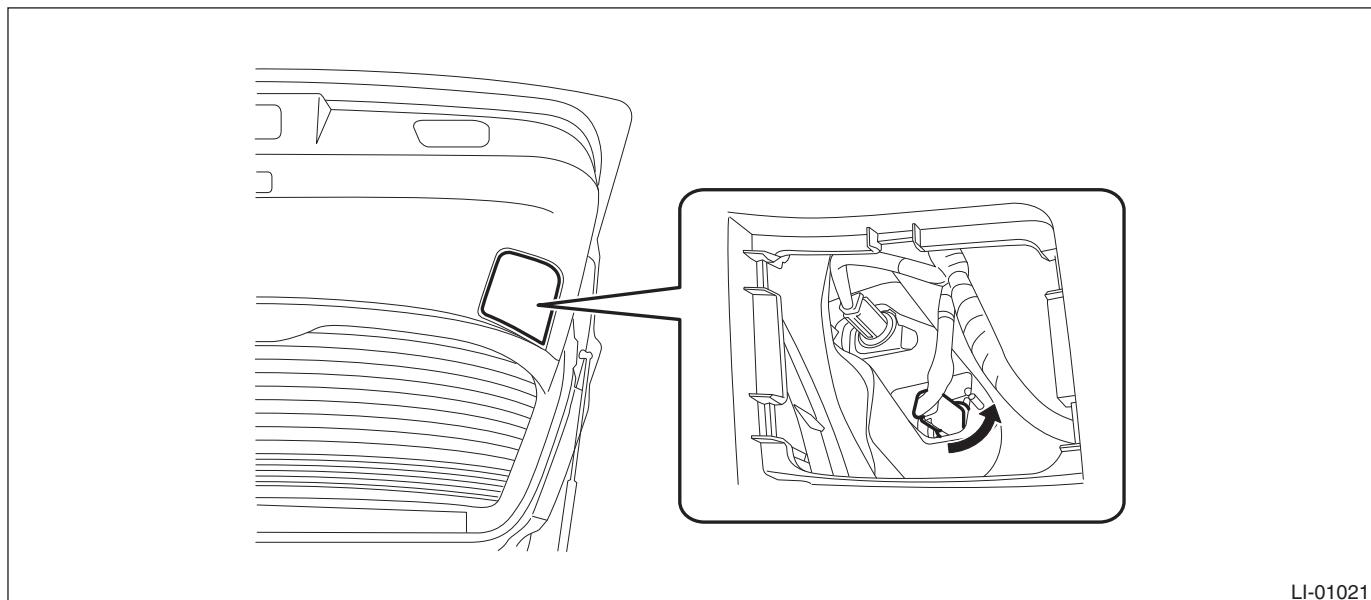

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Rear combination light ASSY: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.