


26. License Plate Light


A: REMOVAL

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk lid trim. <Ref. to EI-127, TRUNK LID TRIM, REMOVAL, Trunk Room Trim.>
- 3) Remove the trunk lid garnish. <Ref. to EI-160, REMOVAL, Trunk Lid Garnish.>
- 4) Disconnect the connector and remove the bulb socket.

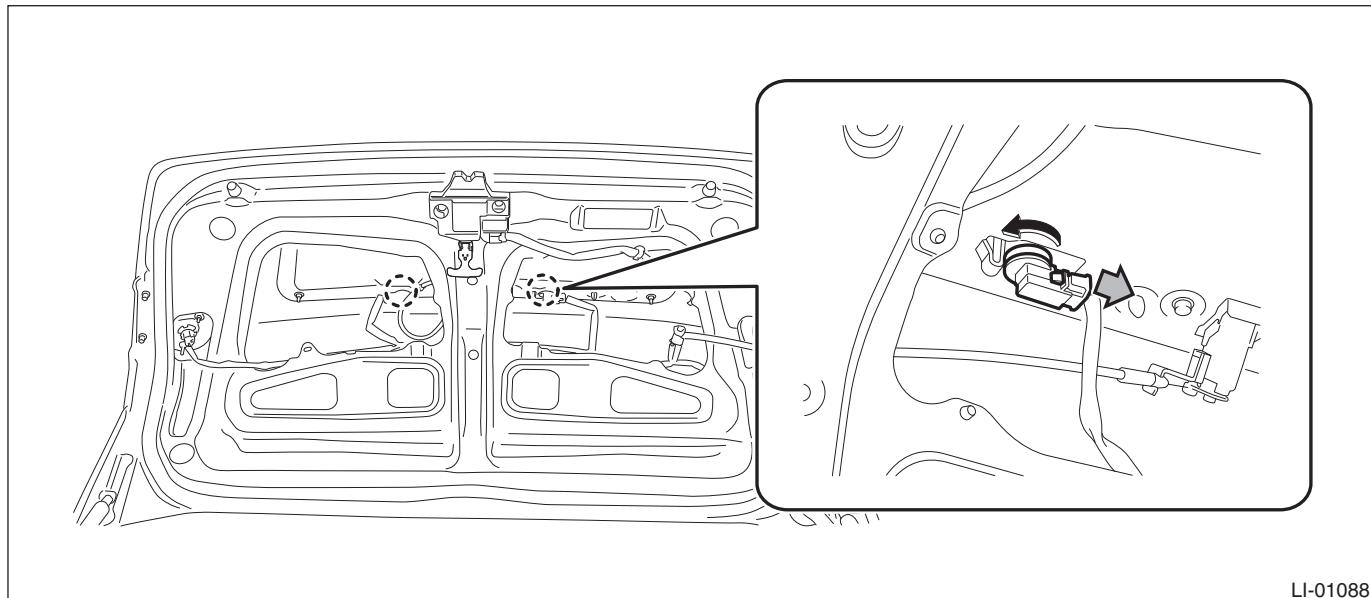


- 5) Remove the license plate light.

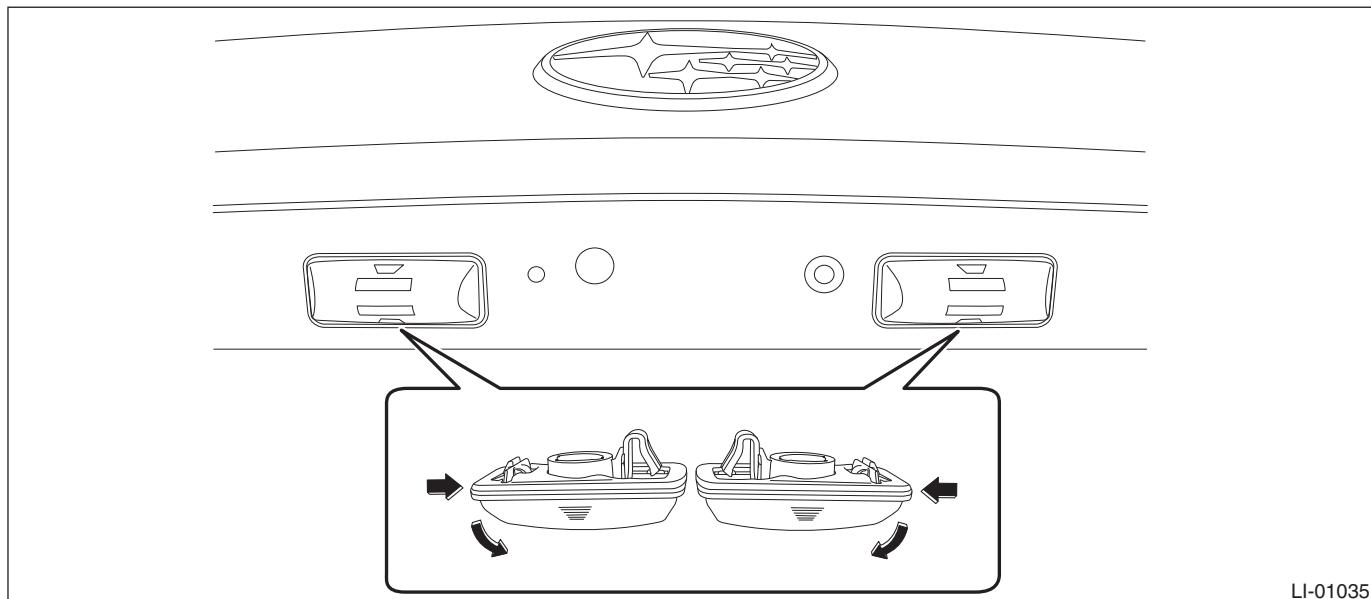

2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the license plate light.

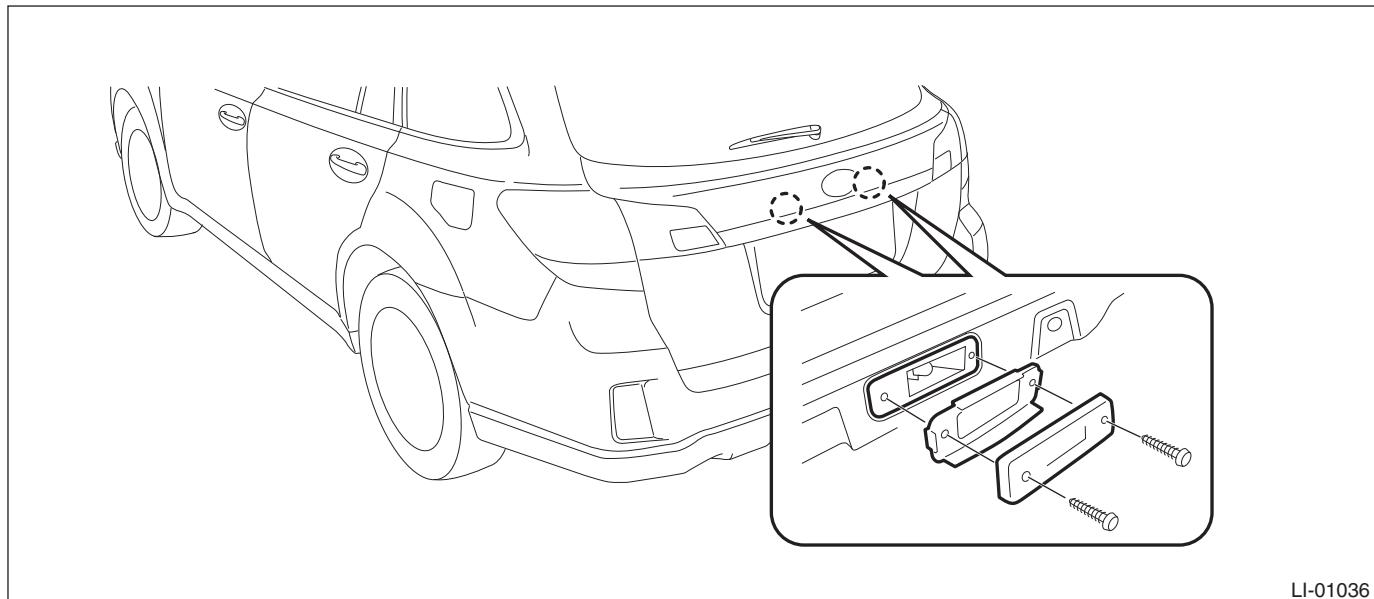

NOTE:

When removing the license plate light assembly harness, remove the following parts.

- Rear gate garnish:<Ref. to EI-161, REMOVAL, Rear Gate Garnish.>
- Rear gate opener button:<Ref. to SL-44, REMOVAL, Rear Gate Opener Button.>

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.