


37.Door Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the door switch.
 - (1) Remove the screws, and pull out the door switch.
 - (2) Disconnect the connector and remove the door switch.

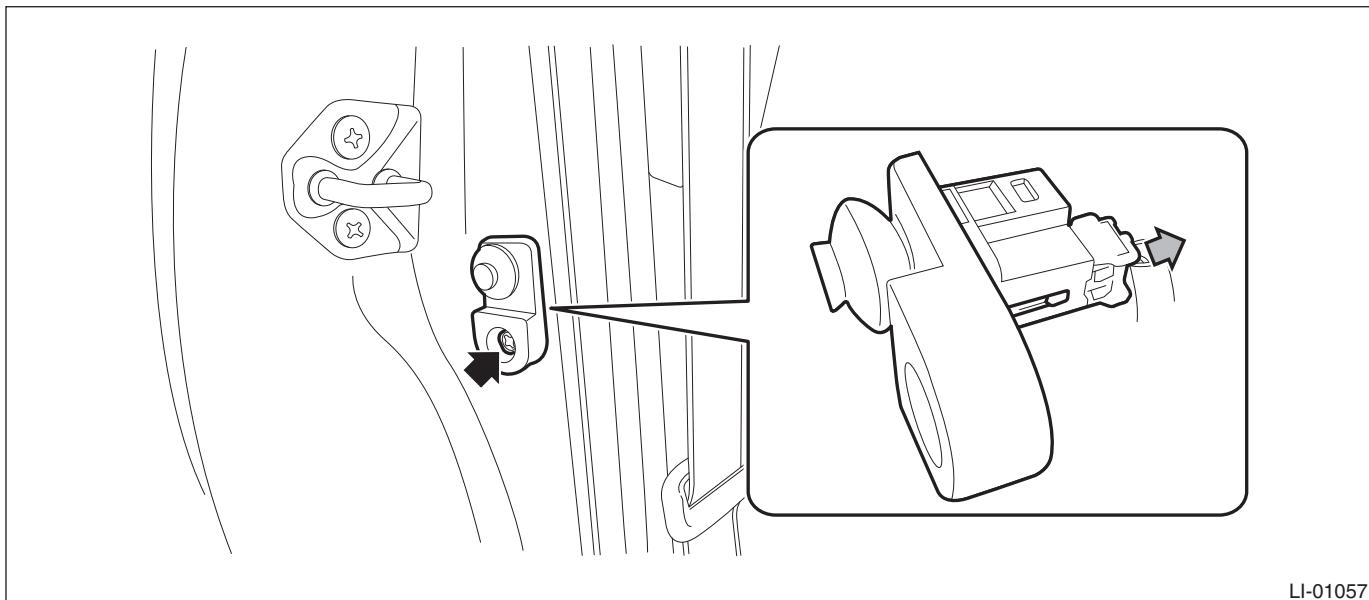

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Refer to DOOR SWITCH CHECK of Interior Light System. <Ref. to LI-16, CHECK DOOR SWITCH., INSPECTION, Interior Light System.>