

## General Description

### WIPER AND WASHER SYSTEMS

---


## 1. General Description

### A: SPECIFICATION

Front wiper motor	Input	12 V — 72 W or less
Rear wiper motor	Input	12 V — 42 W or less
Front washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less
Rear washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less

### B: COMPONENT

#### 1. FRONT WIPER

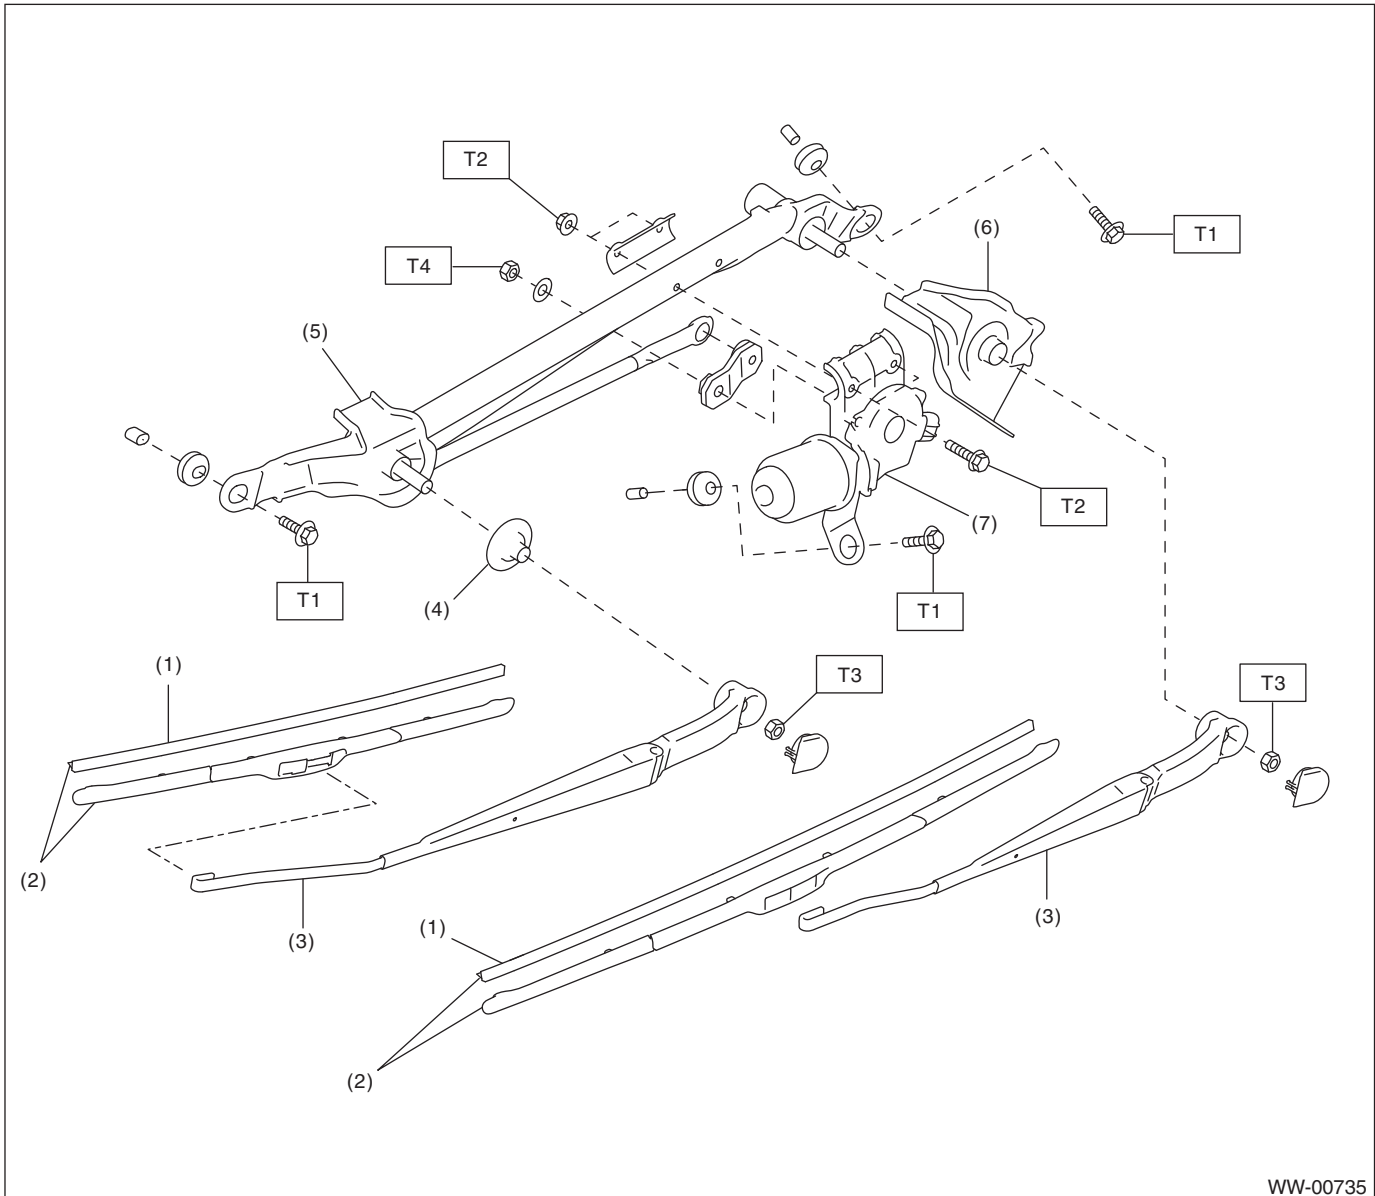

WW-00735

- |                      |                      |
|----------------------|----------------------|
| (1) Wiper rubber     | (5) Wiper link ASSY  |
| (2) Wiper blade ASSY | (6) Pivot cover C    |
| (3) Wiper arm ASSY   | (7) Wiper motor ASSY |
| (4) Pivot cover B    |                      |

#### **Tightening torque:N·m (kgf-m, ft-lb)**

**T1: 6 (0.61, 4.4)**

**T2: 7.5 (0.76, 5.5)**


**T3: 22 (2.24, 16.2)**

**T4: 32.1 (3.20, 23.2)**

# General Description

## WIPER AND WASHER SYSTEMS

### 2. REAR WIPER

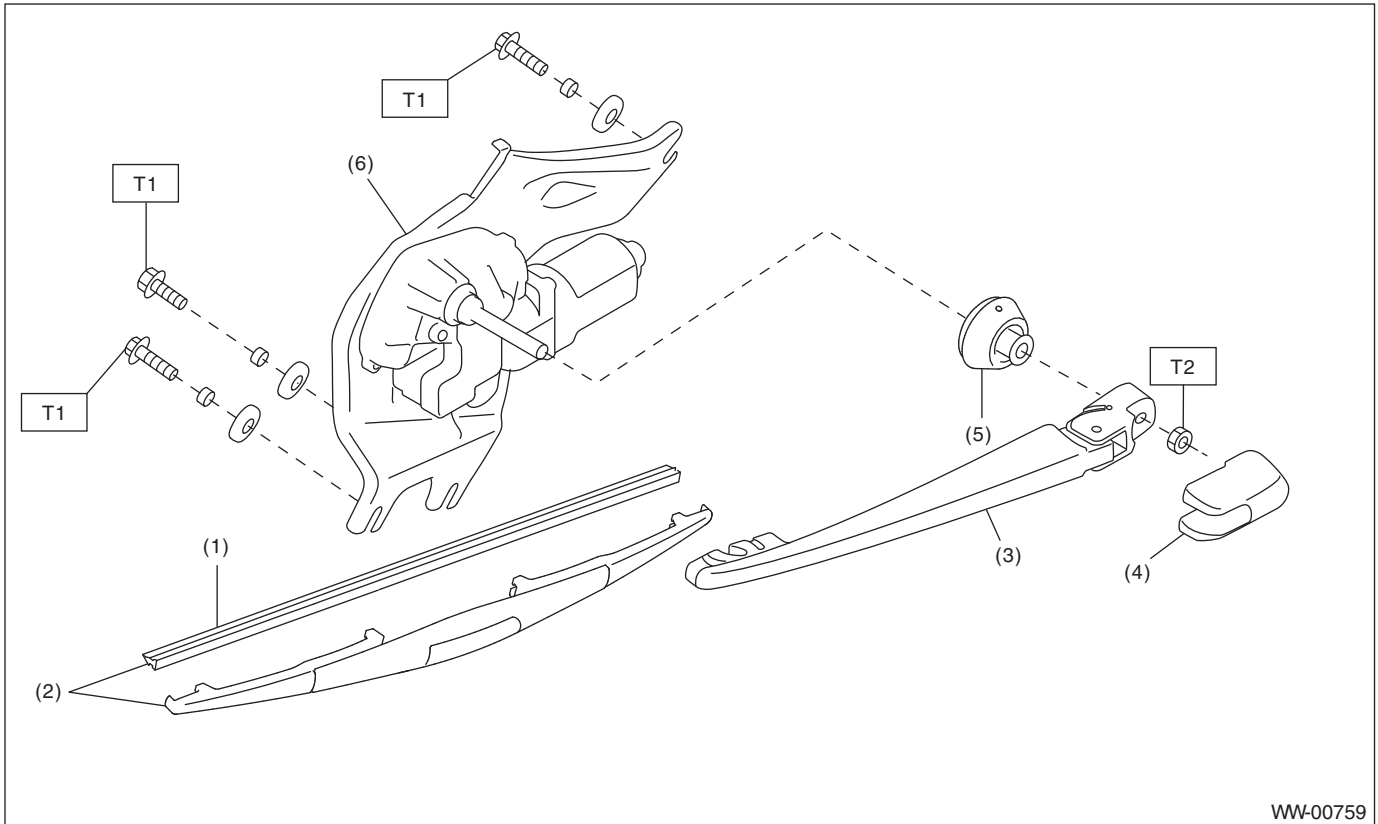

WW-00759


- |                      |                      |
|----------------------|----------------------|
| (1) Wiper rubber     | (4) Wiper arm cover  |
| (2) Wiper blade ASSY | (5) Pivot cap        |
| (3) Wiper arm        | (6) Wiper motor ASSY |

**Tightening torque:N·m (kgf-m, ft-lb)**

**T1: 7 (0.71, 5.2)**

**T2: 8 (0.82, 5.9)**

### 3. WASHER TANK

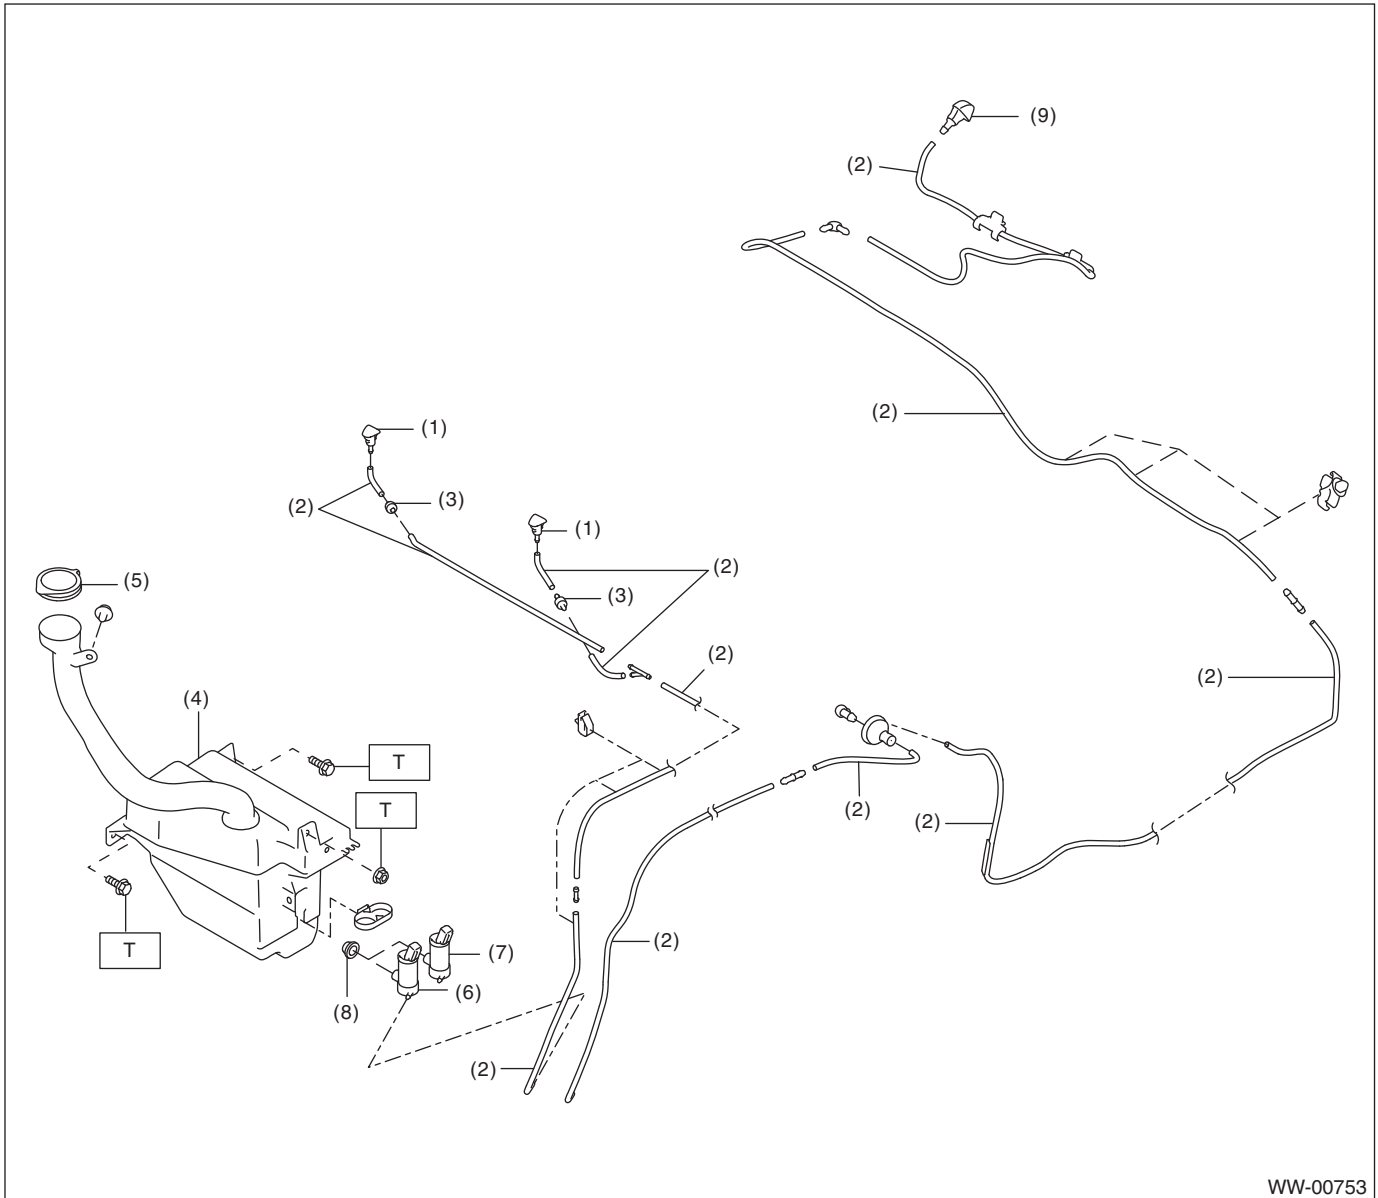

WW-00753

- |                         |   |
|-------------------------|---|
| (1) Front washer nozzle | (6) Front washer motor                      |
| (2) Washer hose         | (7) Rear washer motor (OUTBACK model only)  |
| (3) Check valve         | (8) Grommet                                 |
| (4) Washer tank         | (9) Rear washer nozzle (OUTBACK model only) |
| (5) Washer tank cap     |   |

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 6 (0.61, 4.4)**

## General Description


### WIPER AND WASHER SYSTEMS

#### C: CAUTION

- Connect the connectors and hoses securely during reassembly.
- After reassembly, ensure each function operates properly.
- Be careful with the airbag system wiring harness which passes near electrical parts and switches.
- Yellow connectors and harnesses with yellow tapes around them are the connectors and harnesses for the airbag system. Using a tester above such circuits may cause malfunction of airbag system. Follow the cautions for the airbag system in this case. <Ref. to AB-9, CAUTION, General Description.>
- When connecting the pipe hoses, be careful not to cause bend or blockage.
- If even a small amount of silicon oil or grease enters tank and washer fluid passages, an oil film will be formed on the glass and will cause the wiper to chatter and judder. Make sure that no oil comes into contact with the system.

#### D: PREPARATION TOOL

##### 1. SPECIAL TOOL

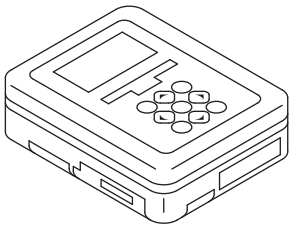ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for setting of each function and troubleshooting for electrical system.

##### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for checking voltage and continuity.